



BATTERY INSTALLATION:

Unscrew the battery cover with a Phillips head screwdriver (not included). Install 4 AAA alkaline batteries (not included) in the orientation (+/-) as shown. Replace battery cover and tighten screws. When exposed to an electrostatic source, the product may malfunction.

To resume normal operation, remove and re-install the batteries. Replace batteries when horse slows down or sounds distorted after pressing the forehead button. Do not connect to more than the recommended number of power supplies.

1



2



3

Press button on forehead, horse dances. Press again to stop!



OR

Note: When music ends, horse will "neigh" and stop dancing.

1



2



3



4

Press button on forehead, horse dances with doll. Press again to stop!



Note: Doll's knees should be bent when mounting.