

# CARING FOR YOUR

# Barbie® DreamHorse™



Keep these instructions for future reference as they contain important information.

## CONSUMER INFORMATION

Need Assistance? Visit [service.mattel.com](http://service.mattel.com) or call 1-800-524-8697 (US and Canada only).

[SERVICE.MATTEL.COM](http://SERVICE.MATTEL.COM)

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. Mattel South Africa (PTY) LTD,

Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.

A care guide for your Barbie® DreamHorse™



**HI!**

I'm your new DreamHorse & I'm so happy to meet you! We are going to have so much fun together. I love to play, dance, nuzzle, munch on carrots, & have my long hair brushed & styled. I just can't wait to show you all my tricks!

**THIS DREAMHORSE BELONGS TO:**

---

**THE NAME OF MY DREAMHORSE IS:**

---



# MEET YOUR *Barbie* DreamHorse™



Each sold separately, subject to availability  
Colors and decorations may vary. Dolls cannot stand alone.



## ASK A QUESTION



**SHOW YOUR FRIENDS HOW SMART  
YOUR HORSE IS IN FUN MODE!**

Ask a question on its left side, horse will  
shake its head NO.

Ask a question on its right side,  
horse will shake its head YES.



Exit Fun Mode by pressing the smiley  
face button.

# CARE FOR YOUR DREAMHORSE™

Replace batteries when sounds become distorted or horse slows down. To replace batteries, use a Phillips head screwdriver (not included) to open battery cover. Insert 4 new AA (LR6) alkaline batteries as shown. Use either 4 new AA (LR6) alkaline batteries or equivalent. Replace battery cover and tighten screw. When exposed to an electrostatic source, the product may malfunction. If this problem occurs, reset the product by reinstalling the batteries. Do not connect to more than the recommended number of power supplies. For longer life use alkaline batteries.



# TABLE OF CONTENTS

- p.1 Meet your DreamHorse™
- p.3 Let's get started
- p.5 Let's take a walk
- p.7 DreamHorse™ loves to cuddle
- p.8 Time for a snack
- p.9 Let's have more fun
- p.11 Care for your DreamHorse™




# LET'S GET STARTED!

## SAFETY FIRST!



## Hang onto those reins!

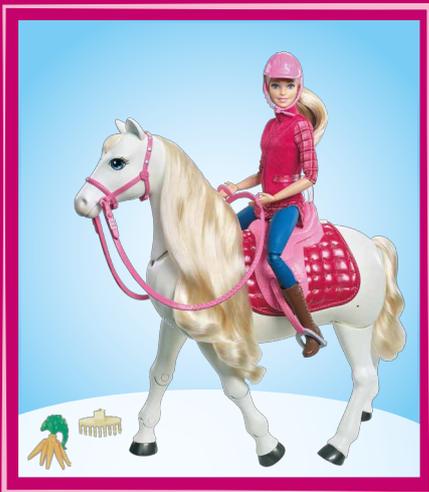

# TIME FOR A SNACK

Insert carrots into mouth, horse will "eat".



# LET'S HAVE MORE FUN

Press smiley face button on the back of the saddle to enter FUN MODE. (Horse giggles)



## FUN MODE



## DANCE!

**3 DIFFERENT SONGS!  
3 DIFFERENT DANCES!**



REALLY NEIGHS!



Touch rear left, horse will dance to song 1.

Touch rear right, horse will dance to song 2.

Touch rear center, horse will dance to song 3.

At any time, you can stop the horse from dancing by pressing the forehead button.



Horse includes 4 AA (LR6) alkaline batteries. Batteries included are for demonstration purposes only. Dispose of batteries safely. This product is not recommended for use on loose dirt or wet surfaces. Do not immerse in water. Note: Horse is equipped with an automatic shut-off feature to help preserve battery life.

Horse cannot be touch or sound activated while it is already moving. **Horse performs best on hard, flat surfaces.**

3+



**WARNING:**

**CHOKING HAZARD** - Small parts.  
Not for children under 3 years.

# LET'S TAKE A WALK

## TOUCH ACTIVATED

Touch rear **RIGHT**,  
horse walks clockwise.



Touch rear **LEFT**, horse  
walks counterclockwise.



Touch rear **CENTER**, horse walks straight.



Make a sound on one side,  
horse will walk in that direction.



## SOUND ACTIVATED



At any time, stop the horse  
from walking by pressing  
the forehead button.



**DREAMHORSE™  
LOVES TO HEAR  
YOU TALK!**




# DREAMHORSE™ LOVES TO CUDDLE

Touch left or right side of chest,  
horse will nuzzle in that direction.



**DREAMHORSE™  
MOVES TOWARDS  
YOUR HAND!**

**I = ON**

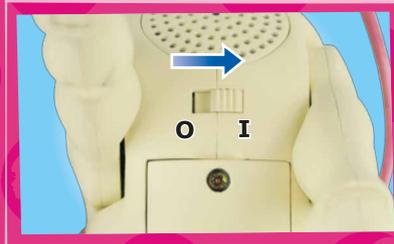

## WAKE UP YOUR DREAMHORSE!

**O = OFF**



Do not connect to  
more than the  
recommended  
number of power  
supplies.

- Replace batteries.
- Slide switch to ON (I) .
- Place horse on hard surface immediately.
- Horse will wake up.
- Slide switch to OFF (O) when not playing with the horse.