



Keep these instructions for future reference as they contain important information.



Battery installation is required. Only adults should install batteries. Tool required for battery installation: Phillips screwdriver (not included).



Requires three AA (LR6) **alkaline** batteries (not included) for operation. For longer life, use **alkaline** batteries.



Periodically wipe each part of this toy with a clean, damp cloth. Do not immerse. This toy has no consumer serviceable parts. Do not take apart.



imaginext

FGF37

IMAGINEXT.COM

Fisher-Price



service.fisher-price.com

UNITED STATES

1-800-432-5437. Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052. Hearing-impaired consumers: 1-800-382-7470.

GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303; www.service.mattel.com/uk.

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

CANADA

1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.

MALAYSIA

Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.

SOUTH AFRICA

Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

 


DC SUPER FRIENDS and all related characters and elements © & ™ DC Comics. WB SHIELD: TM & © WBEI. (s17)

©2017 Mattel. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, except as noted.

LOWER WINGS AND FISTS

- Push each wing near the shoulder.

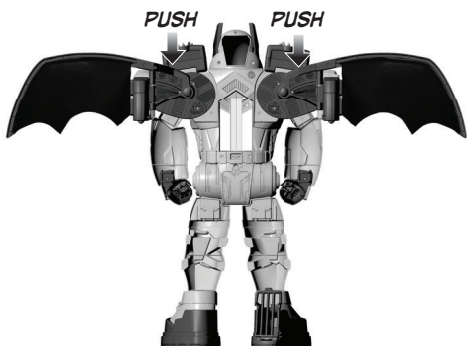

BACK VIEW



FRONT VIEW



CONSUMER INFORMATION

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

BATTERY INSTALLATION AND POWER

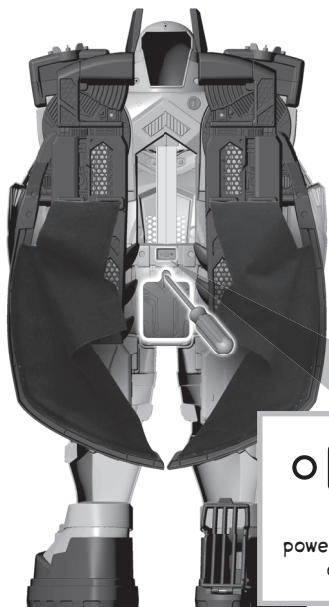

Slide the
power switch ● ON
or ○ OFF.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

 
- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

- Locate the battery compartment door on the back of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert three, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power switch off and then back on again.




Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

TWO-FISTED BATTLE ACTION!

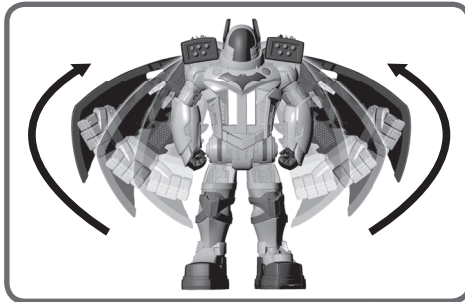

 
Turn the Power Pad to reveal battle fists and expand the wings. Listen to cool sound effects along with lights.

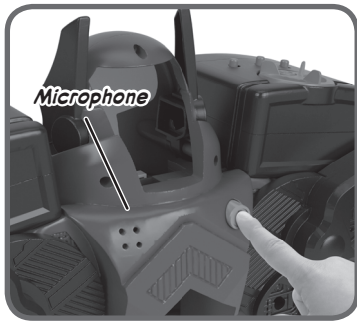


Press the button and talk into the microphone to hear your voice change! Talk into the microphone for up to 10 seconds with each press.

Troubleshooting

 
- This toy will enter sleep mode after a few minutes of inactivity. To turn this toy back on, turn a Power Pad on one of the shoulders, press the voice changer button or slide the power switch off and back on.
- When sounds/lights from Batbot™ become faint or stop, it is time for an adult to change the batteries.

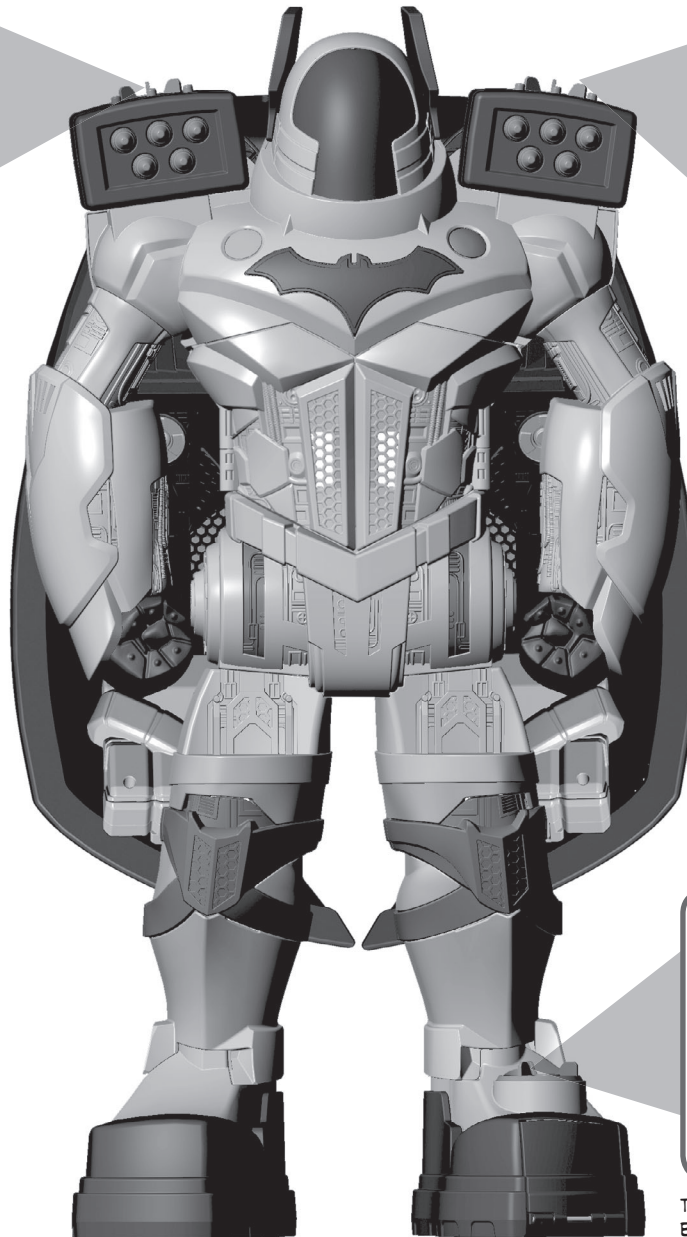

 Turn the Power Pad to reveal the command center along with sound effects and lights.

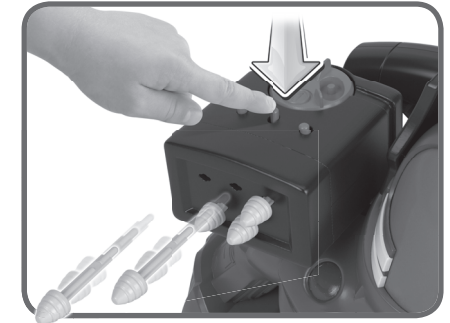

 Insert the darts into the shoulder cannons. Push the buttons to fire the top row darts!

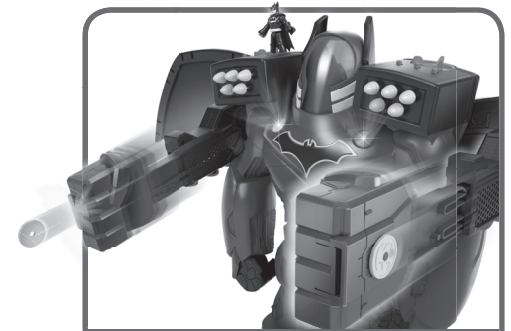

Load the discs into the slots in the battle fists. Squeeze each handle to fire!



Turn the Power Pad to launch Batcycle™.



WARNING:

Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.