

# Fisher-Price®

## FPF84



Keep this instruction sheet for future reference,  
as it contains important information.

Adult setup is required.

Requires seven, AA (LR6) **alkaline** batteries (not included).

For longer life, use **alkaline** batteries.

Only adults should install batteries. Tool required for battery installation:  
Phillips screwdriver (not included). Do not over-tighten the screws.

[fisher-price.com](http://fisher-price.com)

# Battery Installation

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

 


- Locate the battery compartment door on the top side of the hub.
- Loosen the screws in the battery compartment door and remove the door.
- Insert four, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws.
- If the hub begins to operate erratically, you may need to reset the electronics. Remove the batteries and reinstall them.
- When the lights become faint or stop, it's time for an adult to change the batteries.



- Open the fasteners on the tummy wedge and remove the electronic unit.

## Battery Installation

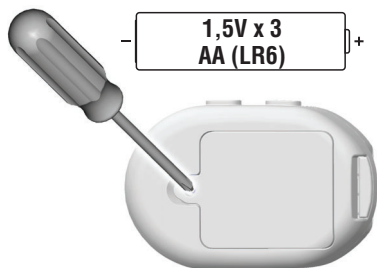

- Loosen the screw in the battery compartment door and remove the door.
- Insert three, AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.

Power-Volume Switch




- Replace the electronic unit, with the speaker facing the front side, back inside the tummy wedge.
- If the electronic unit begins to operate erratically, you may need to reset the electronics. Slide the power-volume switch off and back on.
- When sound or vibration become faint or stop, it's time for an adult to change the batteries.

## Plush Tummy Wedge



 Mode Switch

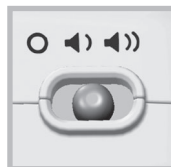

Power-Volume Switch

- Slide the power-volume switch to ON with low volume ◀), ON with high volume ▶)) or OFF ○.
- Slide the mode switch to:
  - 🎵 **Short Play Music & Vibration** - musical ditty and 5 minutes of vibration
  - 🎵 **Long Play Music & Vibration** - 20 minutes of music and 5 minutes of vibration
  - 🎵 **Vibration Only** - 5 minutes of vibration
  - 🎵 **Music Only** - 20 minutes of music
- After making selections, close the fasteners on the tummy wedge.
- Press the musical note 🎵 on the front of the tummy wedge to start your selection. Press again to turn off.



service.fisher-price.com

**UNITED STATES:** 1-800-432-5437.

Fisher-Price, Inc., 636 Girard Avenue,  
East Aurora, NY 14052.

**GREAT BRITAIN:** Mattel UK Ltd, Vanwall  
Business Park, Maidenhead SL6 4UB.

Helpline: 01628 500303;  
www.service.mattel.com/uk.

Mattel Europa B.V., Gondel 1, 1186 MJ  
Amstelveen, Nederland.

**CANADA:** 1-800-432-5437. Mattel Canada Inc.,  
6155 Freemont Blvd., Mississauga,  
Ontario L5R 3W2.

**AUSTRALIA:** Mattel Australia Pty. Ltd.,  
658 Church Street, Locked Bag #870,  
Richmond, Victoria 3121 Australia.  
Consumer Advisory Service 1300 135 312.

**NEW ZEALAND:** 16-18 William Pickering  
Drive, Albany 1331, Auckland.

**ASIA:** Mattel East Asia Ltd., Room 503-09,  
North Tower, World Finance Centre,  
Harbour City, Tsimshatsui, HK, China.  
Tel.: (852) 3185-6500.

**MALAYSIA:** Diimport & Diedarkan Oleh:  
Mattel Southeast Asia Pte. Ltd., No 19-1,  
Tower 3 Avenue 7, Bangsar South City, No 8,  
Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia.  
Tel: 03-33419052.

**SOUTH AFRICA:** Mattel South Africa (PTY)  
LTD, Office 102 I3, 30 Melrose Boulevard,  
Johannesburg 2196.

**FCC STATEMENT (UNITED STATES ONLY)**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

 
**NOTE:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAN ICES-3 (B)/NMB-3 (B)**

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

# Wildly fun for your little one!

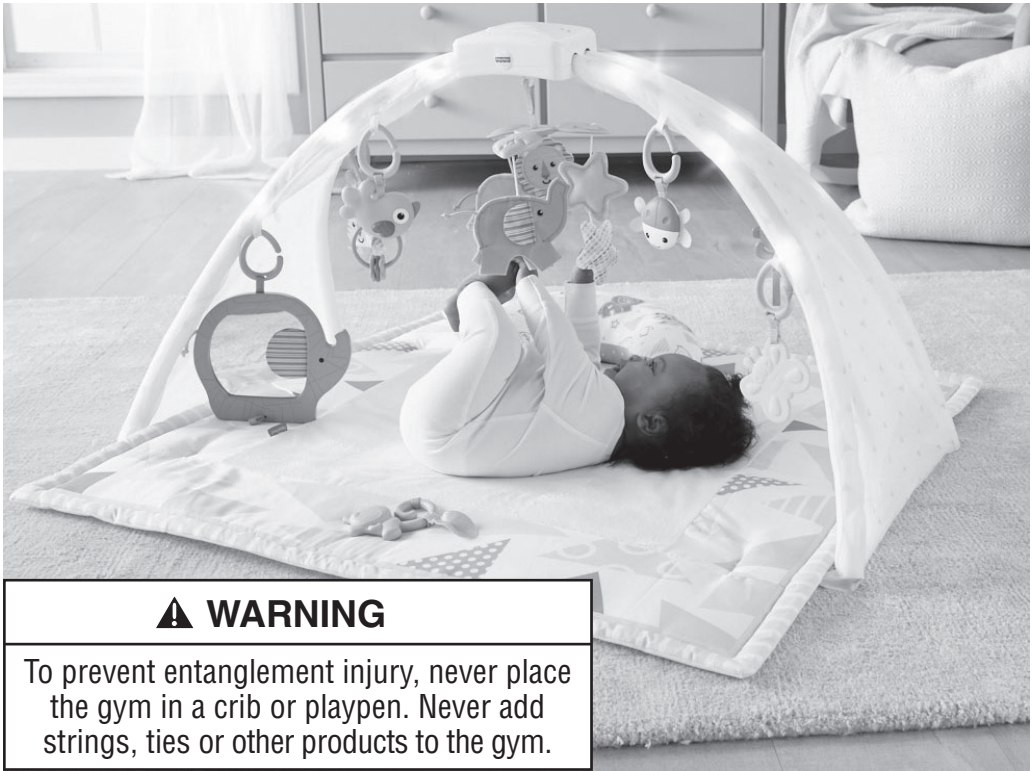

## ⚠ WARNING

 
To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.



- Hang the mobile to the hook on the hub.
- Hook the elephant mirror to a lower loop on an arch.
- Attach the remaining toys to any of the loops on the arches, mat or tummy wedge.

- 🔌 Press to turn power ON. Press again to turn power OFF.
- 👋 **Short Play** – Bat at the hanging toys to start twinkling lights.
- 🌟 **Long Play** – Enjoy a 20 minute light show.


## Take-along Mobile

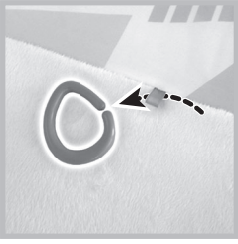

Remove the link from the mat loop.



 Remove the mobile from the hub.

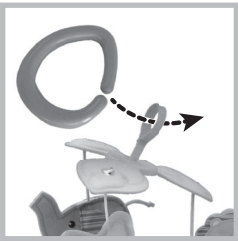


Attach the link to the mobile loop.



Hang the mobile to your stroller.

## Care

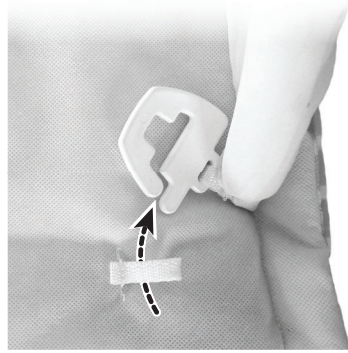 

- The mat and tummy wedge are machine washable. **First, remove the electronics unit from the tummy wedge, and the arch assembly from the mat.**
- While holding the arches together, carefully unfasten the hooks from the loops on the mat.
- Machine wash the mat and tummy wedge in cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- The arch assembly, hanging toys, mirror, link and mobile are surface washable only. Wipe with a cloth dampened with a mild soap and water solution.
- Do not immerse the electronic unit or the arch assembly.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.