

# Fisher-Price®



Keep this instruction sheet for future reference,  
as it contains important information.  
Adult set up and battery installation are required.  
Requires two AA (LR6) **alkaline** batteries (not included).  
Tool required for battery installation:  
Phillips screwdriver (not included).

## FXC37



service.fisher-price.com

**UNITED STATES:** 1-800-432-5437.  
Fisher-Price, Inc., 636 Girard Avenue,  
East Aurora, NY 14052.

**GREAT BRITAIN:** Mattel UK Ltd, Vanwall  
Business Park, Maidenhead SL6 4UB.  
Helpline: 01628 500303;  
www.service.mattel.com/uk.

Mattel Europa B.V., Gondel 1, 1186 MJ  
Amstelveen, Nederland.

**CANADA:** 1-800-432-5437.  
Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2.

**AUSTRALIA:** Mattel Australia Pty. Ltd.,  
658 Church Street, Locked Bag #870,  
Richmond, Victoria 3121 Australia.  
Consumer Advisory Service 1300 135 312.

**NEW ZEALAND:** 16-18 William Pickering  
Drive, Albany 1331, Auckland.

**ASIA:** Mattel East Asia Ltd., Room 503-09,  
North Tower, World Finance Centre,  
Harbour City, Tsimshatsui, HK, China.  
Tel.: (852) 3185-6500.

**MALAYSIA:** Diimport & Diedarkan Oleh:  
Mattel Southeast Asia Pte. Ltd., No 19-1,  
Tower 3 Avenue 7, Bangsar South City,  
No 8, Jalan Kerinchi, 59200 Kuala  
Lumpur, Malaysia. Tel: 03-33419052.

**SOUTH AFRICA:** Mattel South Africa  
(PTY) LTD, Office 102 I3, 30 Melrose  
Boulevard, Johannesburg 2196.

## FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :  
(1) il ne doit pas produire de brouillage et  
(2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

# BATTERY INSTALLATION



For longer life, use **alkaline** batteries.



- Locate the battery compartment door on the back of the musical otter.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert two, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- If the musical otter begins to operate erratically, you may need to reset the electronics. Slide the power-volume switch off and back on.
- When sounds or lights from the musical otter become faint or stop, it's time for an adult to change the batteries.



 
Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# CAN YOU SENSE THE FUN?

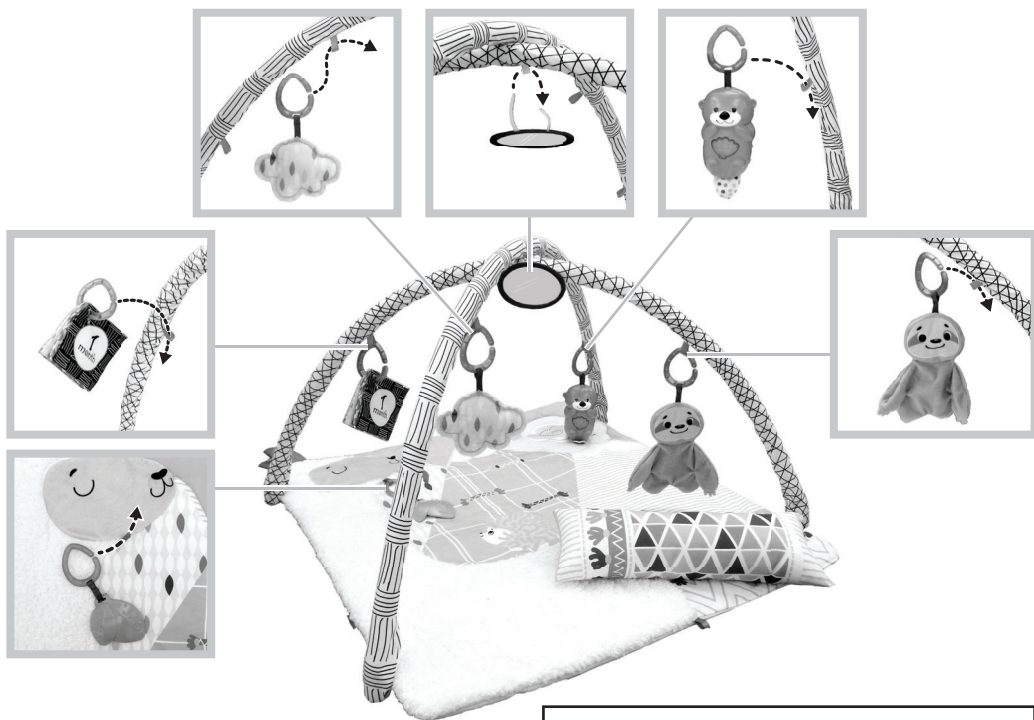

## ⚠ WARNING

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.



- Slide the power/volume switch on the musical otter to ON with low volume, ON with high volume or OFF.

- Slide the mode switch on the musical otter to short play mode or long play mode.



- In **short play mode** , hear a short tune each time you press the tummy button on the musical otter.

- In **long play mode** , press the tummy button on the musical otter to start 15 minutes of continuous music.

# MATCH THE MONTH TO BABY'S AGE

Open the month card. 1-6 months is printed on one side and 7-12 months on the other side.



1

Fold the month card in half.



2

Fold the sides of the month card inward that baby's age is facing outward.



 
3

Attach the link to the month card.




4

# CARE

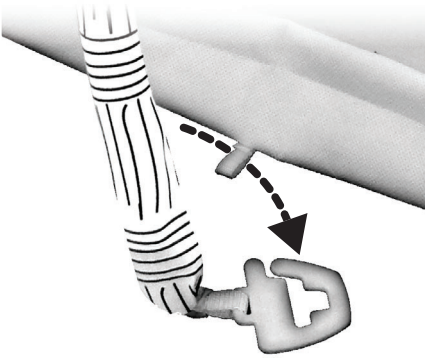


- The mat is machine washable without the arch assembly.
- While holding a mat loop, carefully unhook an arch clip. Repeat to unhook the remaining arch clips from the mat.
- Place the sloth toy and month card into a pillowcase and then into a washing machine along with the mat and tummy wedge. Use a mild detergent and cold water on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- The arch assembly, musical otter, mirror, cloud toy, and leaf teether are surface washable only. Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.

# SETUP

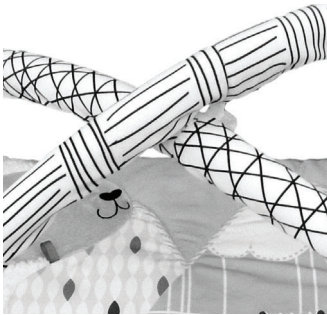 

**CORRECT**

 When reattaching the arches to the mat, please note which arch should be on top!

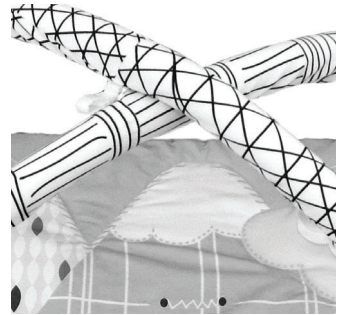

**INCORRECT**