


**Fisher-Price®**

[www.fisher-price.com](http://www.fisher-price.com)


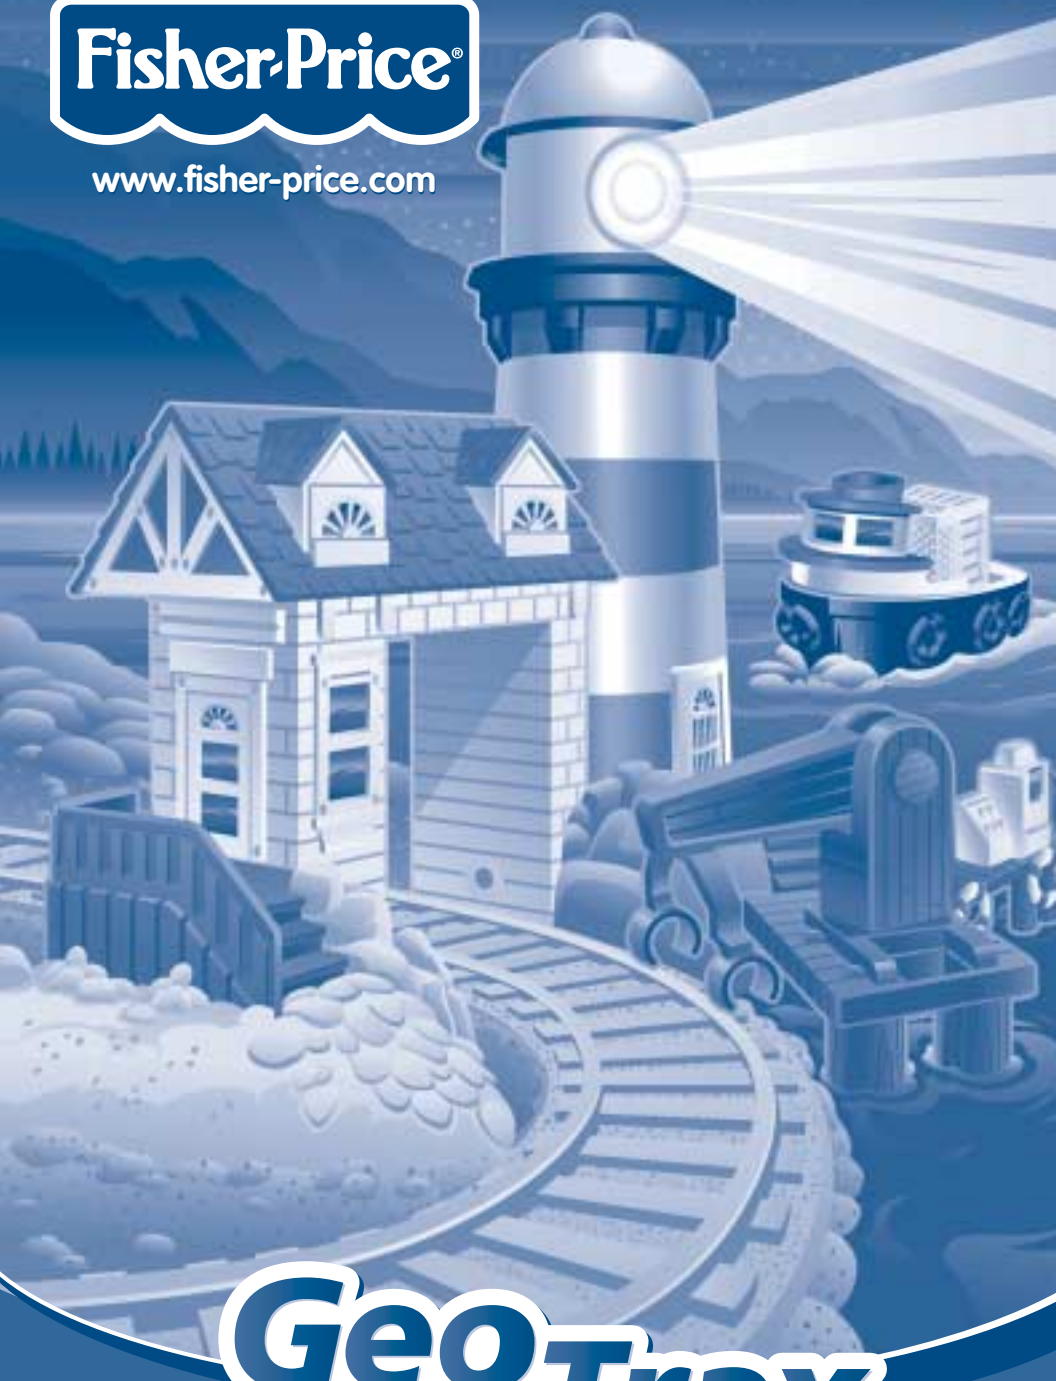


**GeoTrax™**  
Rail & Road System

**Harbor Docks Lighthouse™**

# Parts

- A. Small Rock Base
- B. Large Rock Base
- C. Lighthouse
- D. Dock
- E. Crane
- F. Tug Boat
- G. Cargo Piece
- H. Curved Track

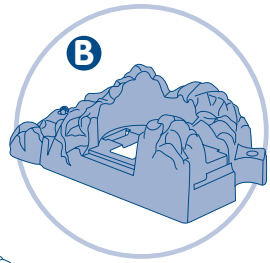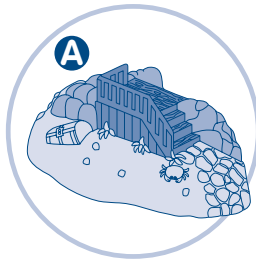






Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" (LR6) **alkaline** batteries (not included).


Adult assembly is required.

Tool required for battery installation: Phillips screwdriver (not included).

Wipe this toy with a clean, damp cloth.

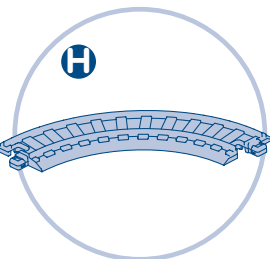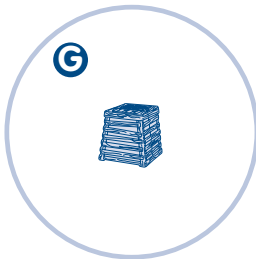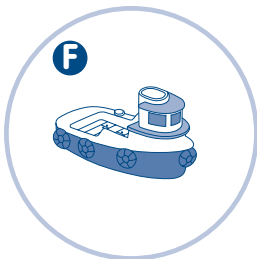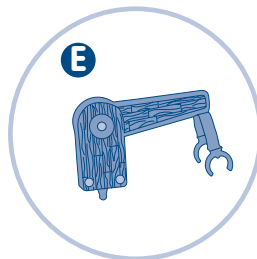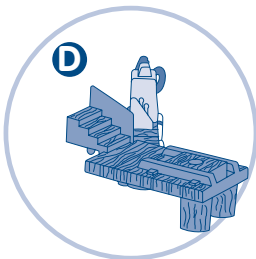

# Battery Information

 


## SHOWN ACTUAL SIZE

We recommend the use of alkaline batteries for longer battery life.

## Battery Installation

- Locate the battery compartment door on the bottom of the lighthouse.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "AA" (LR6) alkaline batteries.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries.

### BATTERY COMPARTMENT DOOR

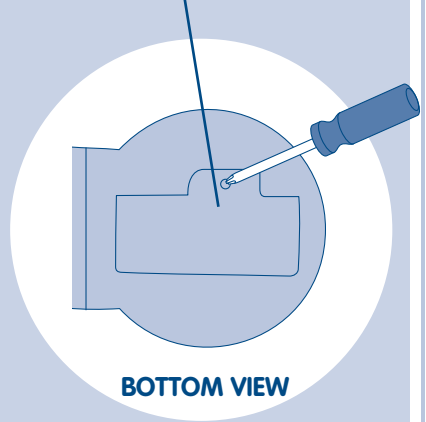

### BOTTOM VIEW

## Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.


# Assembly

## LIGHTHOUSE

1

ROCK  
BASE

ROCK  
BASE

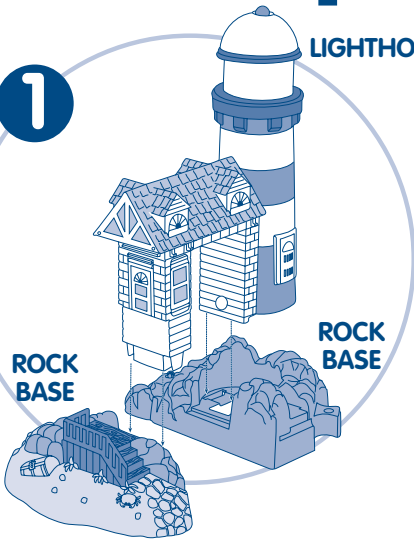


"Snap" the lighthouse into the rock bases, as shown.

2

CRANE



DOCK

LARGE  
ROCK BASE

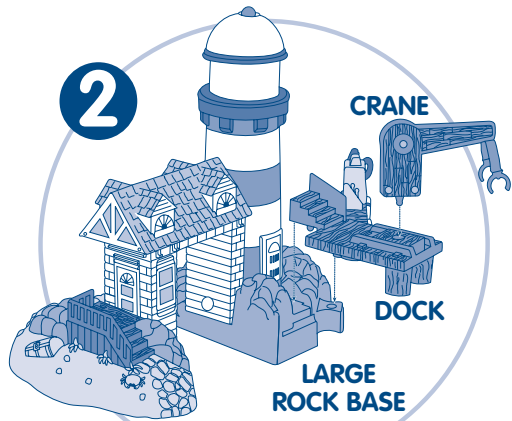

"Snap" the dock into the large rock base.  
"Snap" the crane into the dock.

## POWER SWITCH

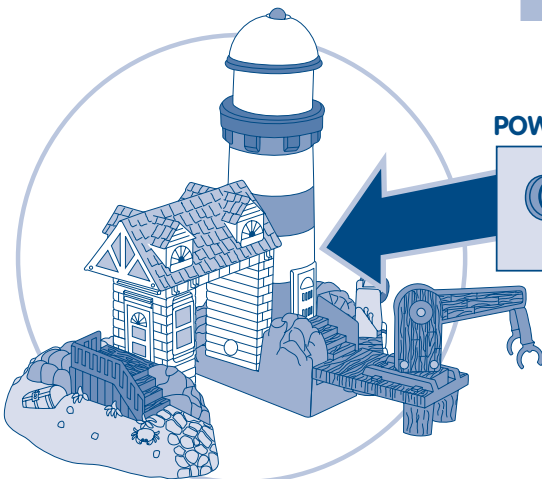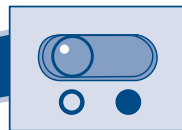

- Locate the power switch on the side of the lighthouse.
- Slide the switch to the ● position to turn the toy on and the ○ position to turn the toy off.

# Fun at the Lighthouse!



Use the crane to load the cargo.



Use the pump to fill up the tugboat.



Press the button on top to turn on the light and hear fun sound effects.



When a train travels through the harbor tunnel next to the lighthouse, you'll also get lights and sound effects (train not included).

**Hint:** If a train does not pass through the tunnel for a few minutes, the lighthouse turns off automatically. Press the top button on the lighthouse to turn the toy back on.

**Important:** The lighthouse automatic sounds and lights feature is activated by contrast in lighting. This feature may not work if the toy is in very bright light or direct sunlight. Please keep the lighthouse out of bright light or direct sunlight.





# Fisher-Price®

## GeoTrax™

Rail & Road System

For layout ideas visit the  
**GeoTrax™** section of  
**www.fisher-price.com**

### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052, U.S.A.

#### For other countries outside the United States:


**Canada:** call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**Great Britain:** telephone 01628 500302. **Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121

**Australia:** Consumer Advisory Service 1300 135 312. **New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.

**Asia:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

## The more you collect, the more fun it gets!

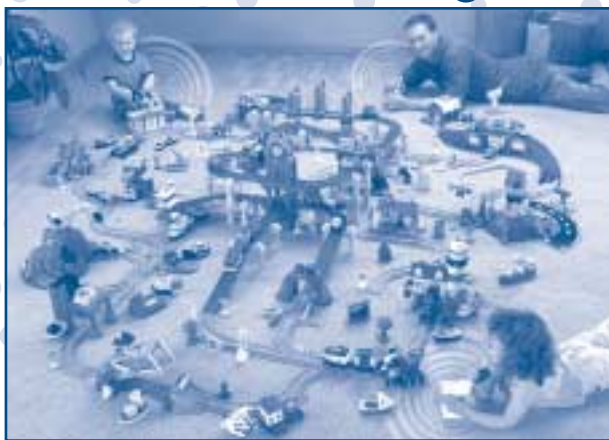

Playsets and accessories sold separately and subject to availability.  
Multiple track packs used to create this configuration.