

Barbie®


fashion show mall™ play set

INSTRUCTIONS

5+



G5214-0920

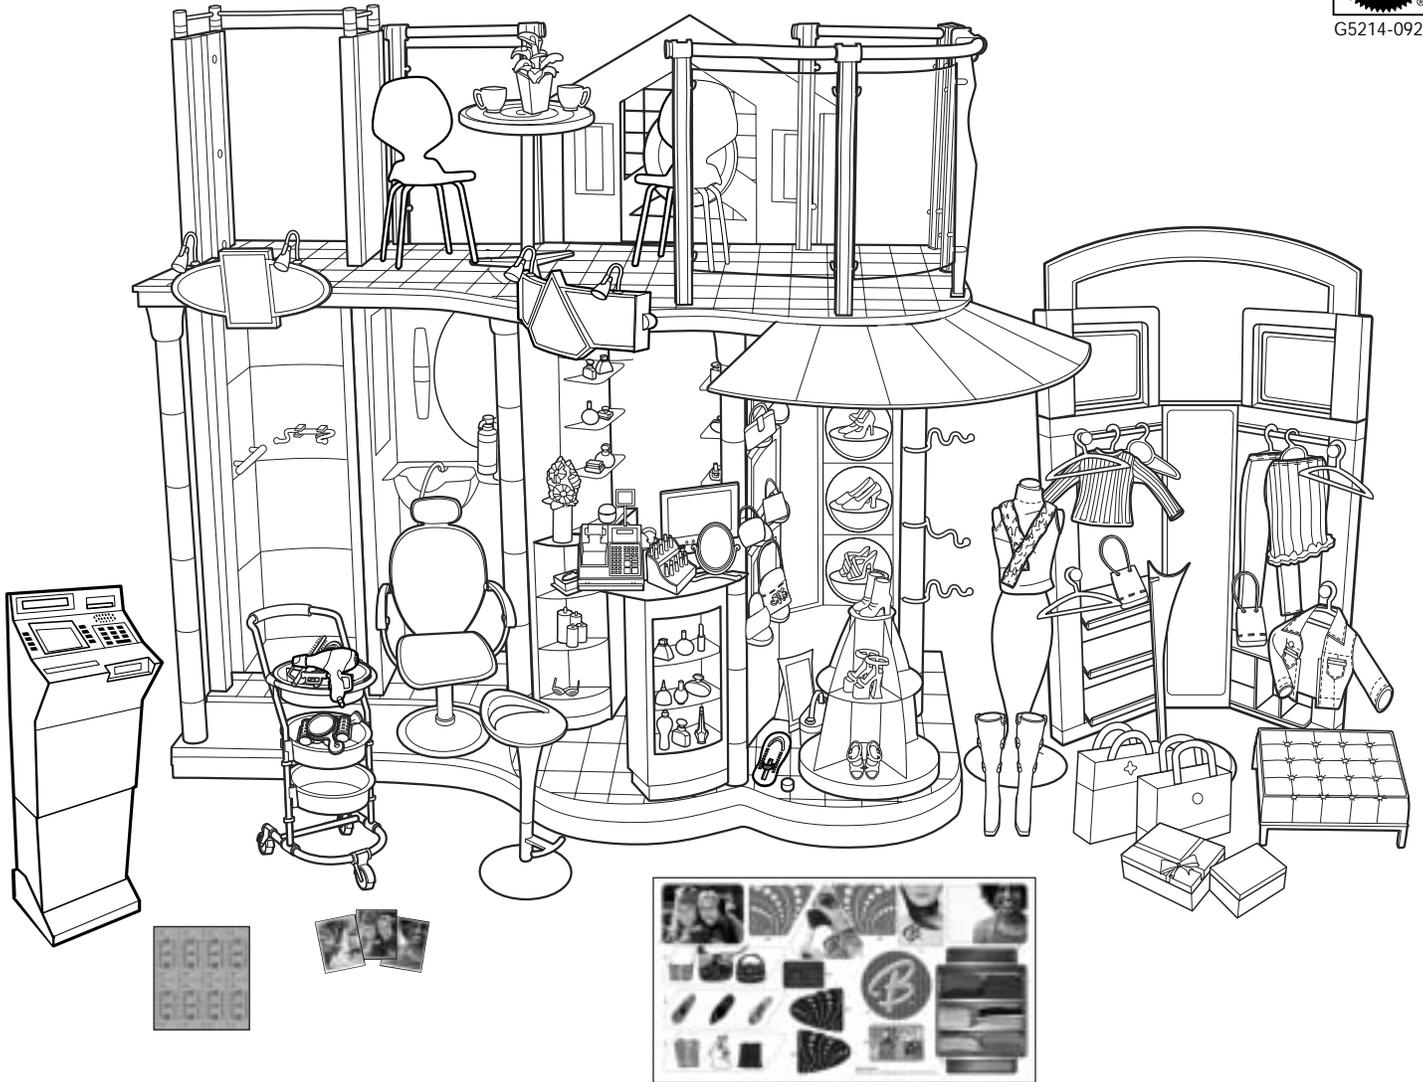

**TOY IS NOT ASSEMBLED.
ADULT ASSEMBLY REQUIRED.**

Requires 3 – C (LR14) alkaline batteries, not included. Dispose of batteries safely.
Dolls sold separately. Subject to availability. Fashions, colors and decorations may vary.

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

© 2004 Mattel, Inc. El Segundo, CA 90245. U.S.A. All Rights Reserved.

Battery Replacement

Remove battery door with a Phillips screwdriver (not included) and set aside. Insert 3 "C" (LR 14) alkaline batteries, not included, in the battery compartment. Note direction of batteries. Replace door. For longer life, use only alkaline batteries.

LOW BATTERY INDICATORS:


Replace batteries if the lights become dimmer, the sounds become garbled and if display stand rotation becomes slow.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:





- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this toy in a fire. The batteries inside may explode or leak.

Note: When not used for a while, toy will enter a "sleep" mode to conserve batteries. To restart toy, press the **ON/OFF** button (I) **ON**.

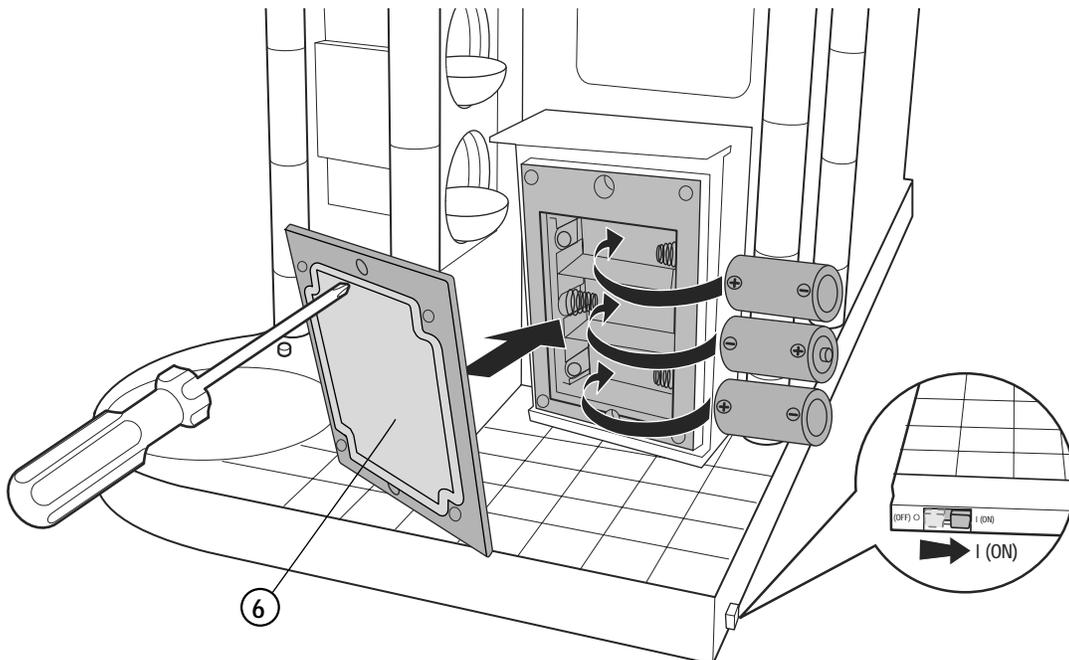

Contents

Please remove everything from the package and compare to the contents shown here. Keep these instructions for future reference as they contain important information.
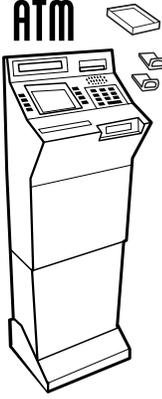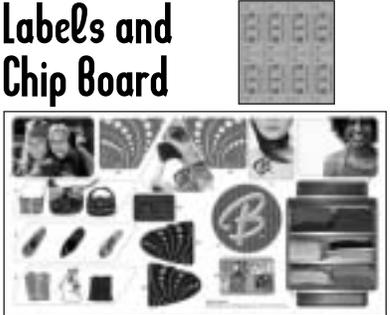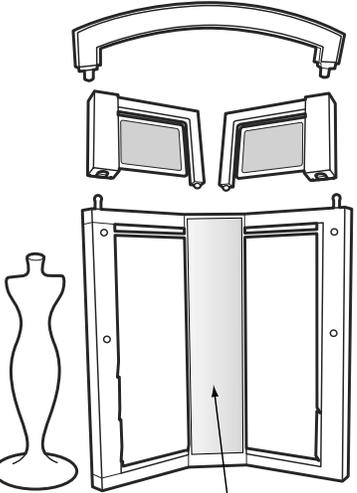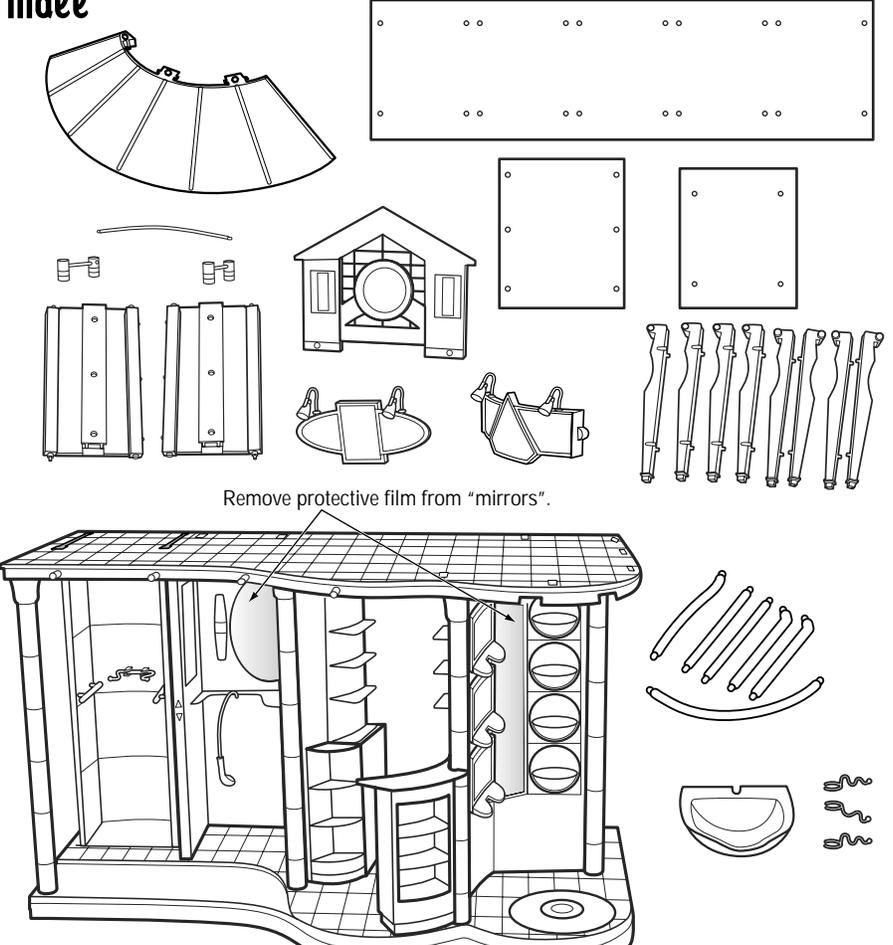
<h3>ATM</h3> 	<h3>Cafe</h3> 	<h3>Hair Salon</h3> 	<h3>Jewelry/Makeup i Counter</h3> 
<h3>Shoe Store</h3> 	<h3>Labels and Chip Board</h3> 	<h3>Dressing Room</h3>  <p>Remove protective film from "mirror".</p>	
<h3>Mall</h3>  <p>Remove protective film from "mirrors".</p>			



Assembly

Upper Mall and Elevator




Attach labels by number ① as shown.



1

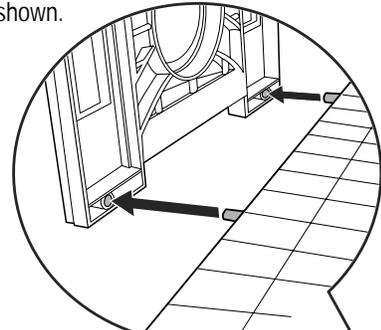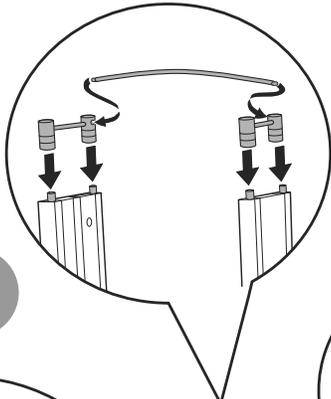



2

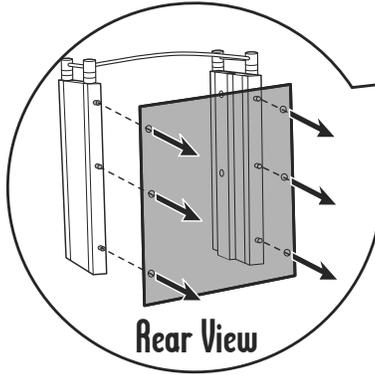


Rear View

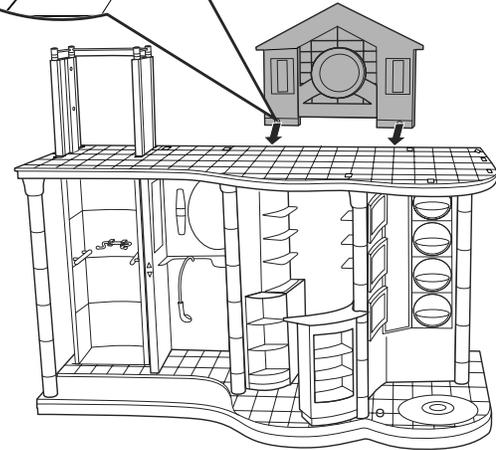
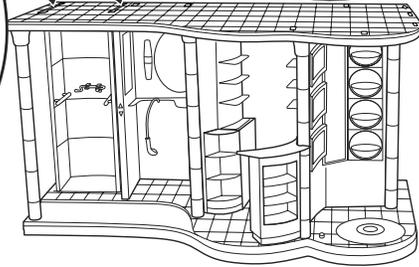


3

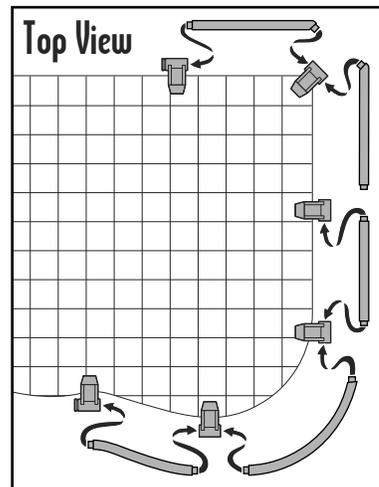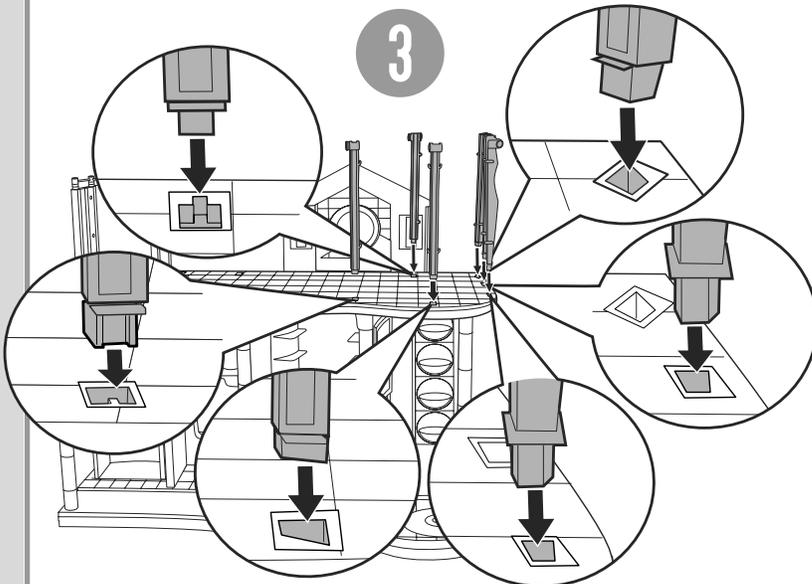


4

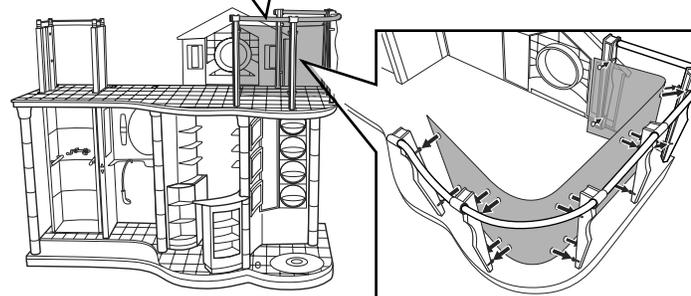


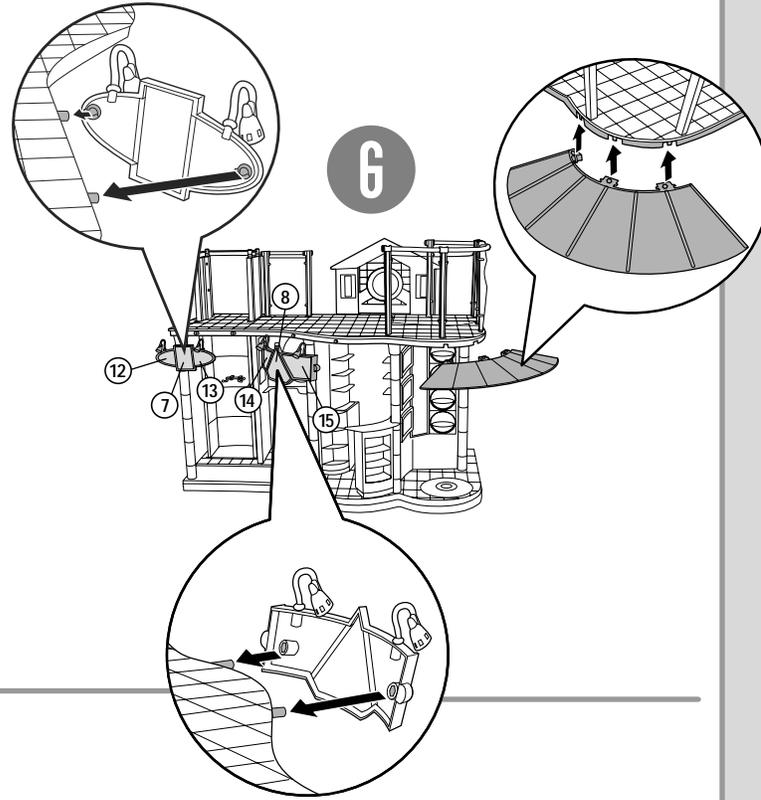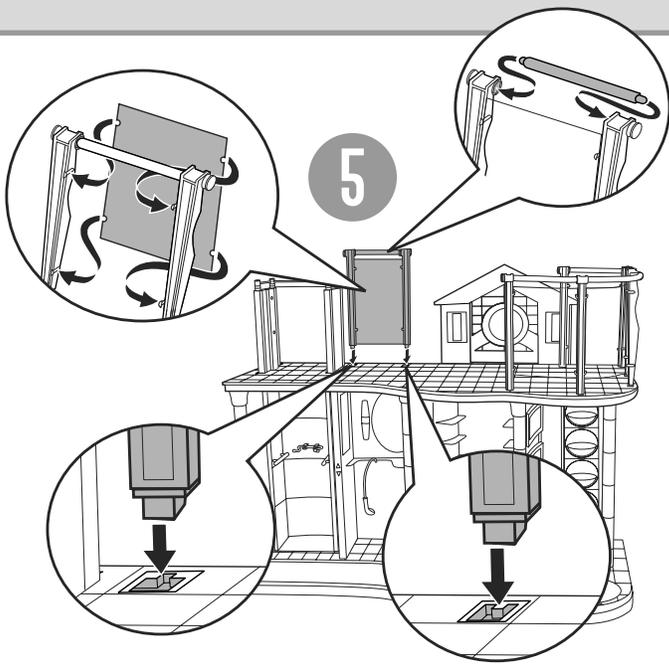

Lower Mall

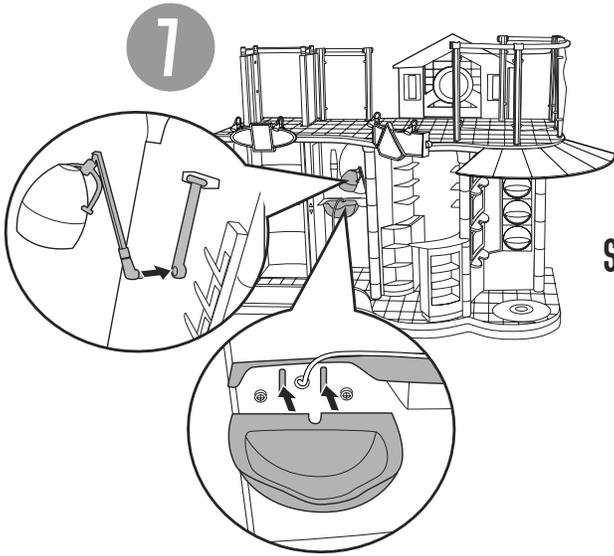


Salon and Shoe Store

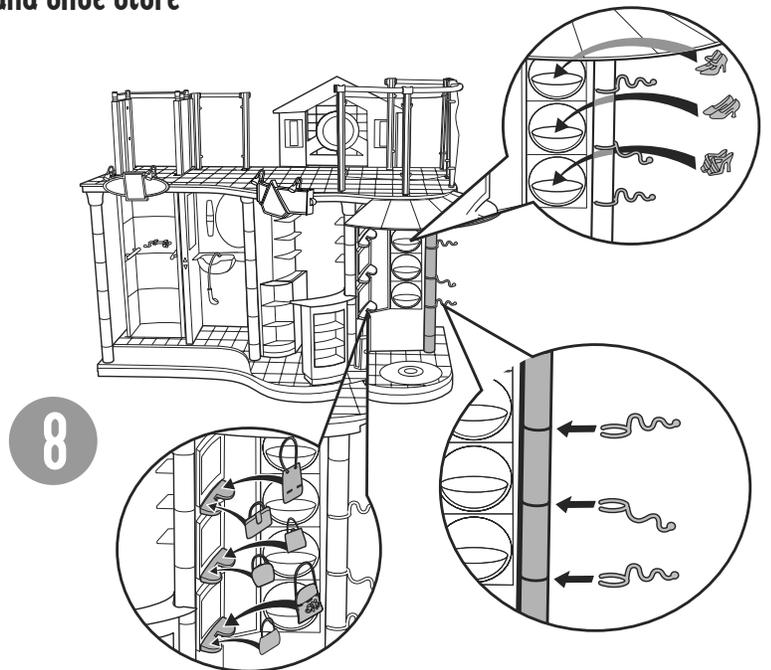


Assembly

Dressing Room

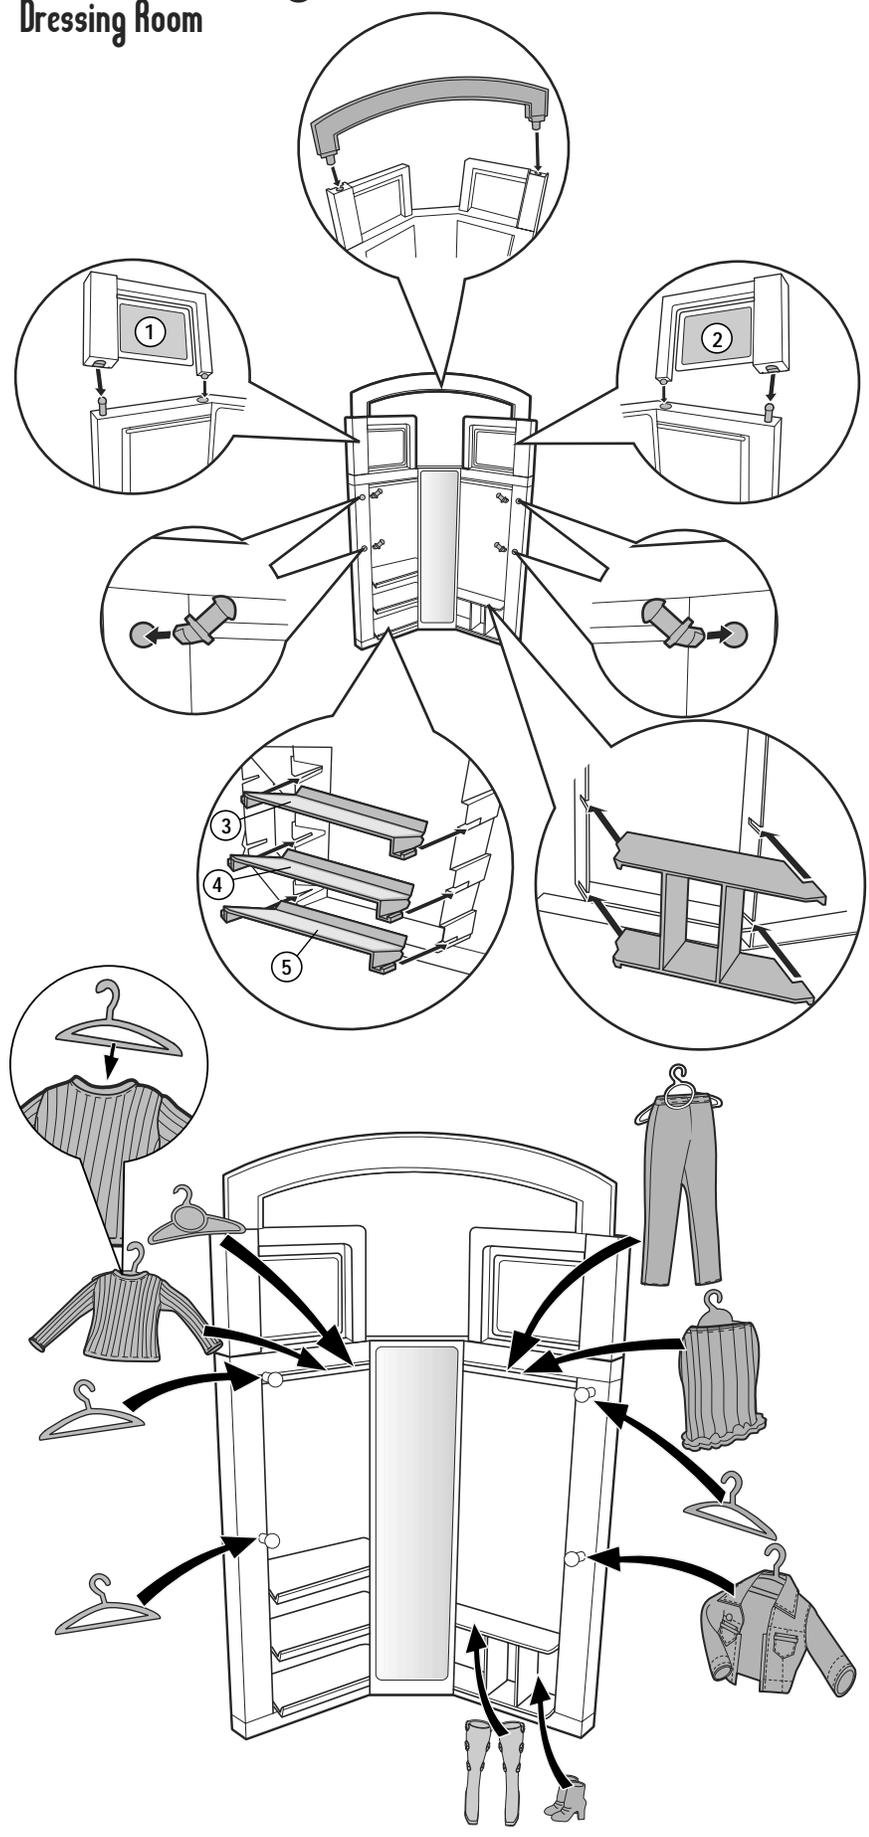



Salon Cart

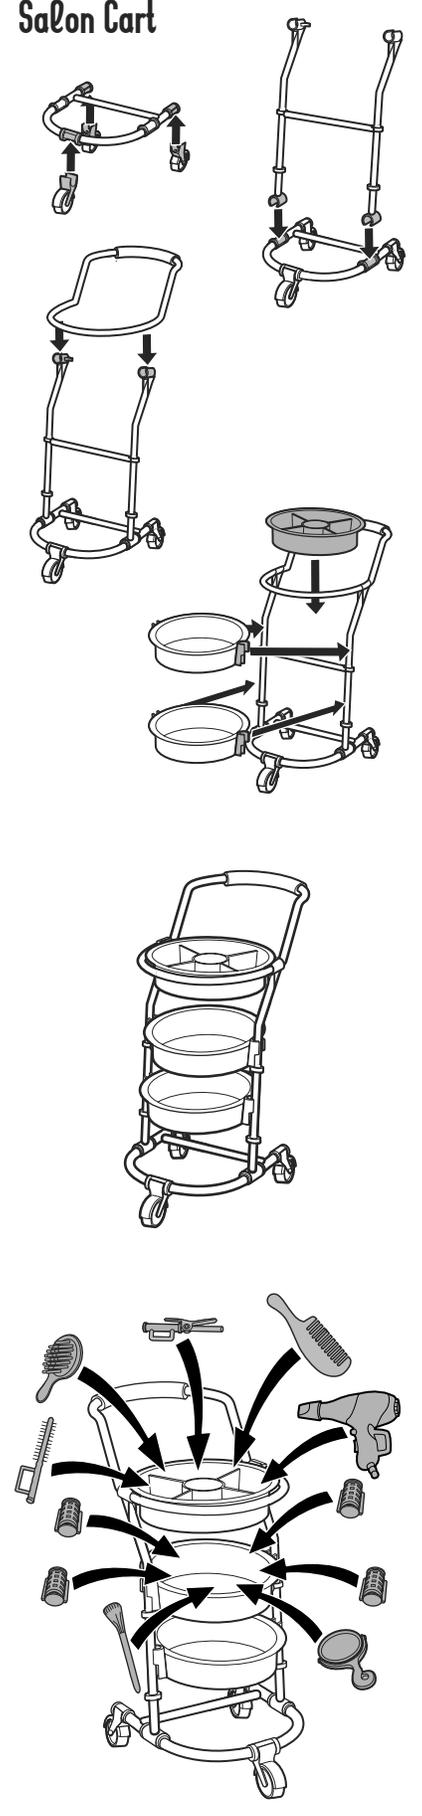


Assembly

Fashion Show Mall Accessories


Mannequin

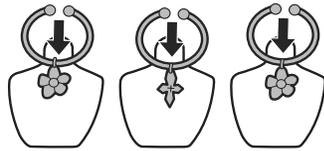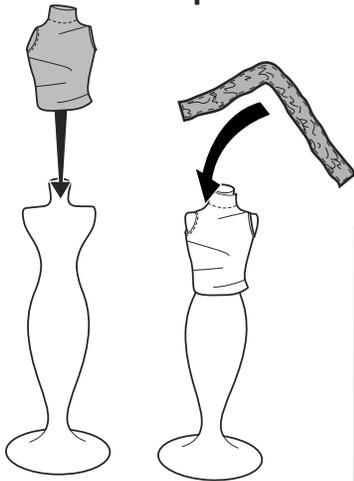

Necklaces

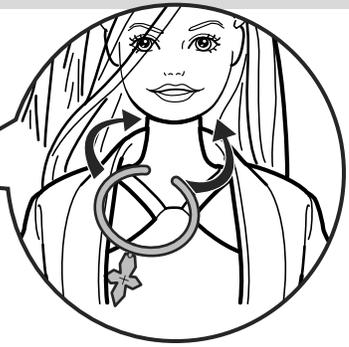


Furniture and Accessories

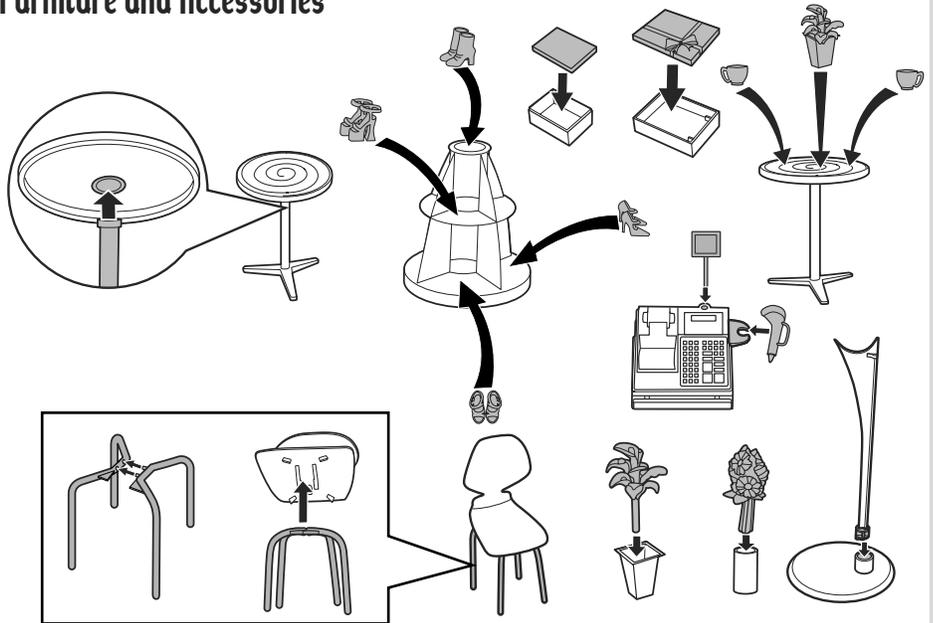


Salon Chair



Bags and Purses



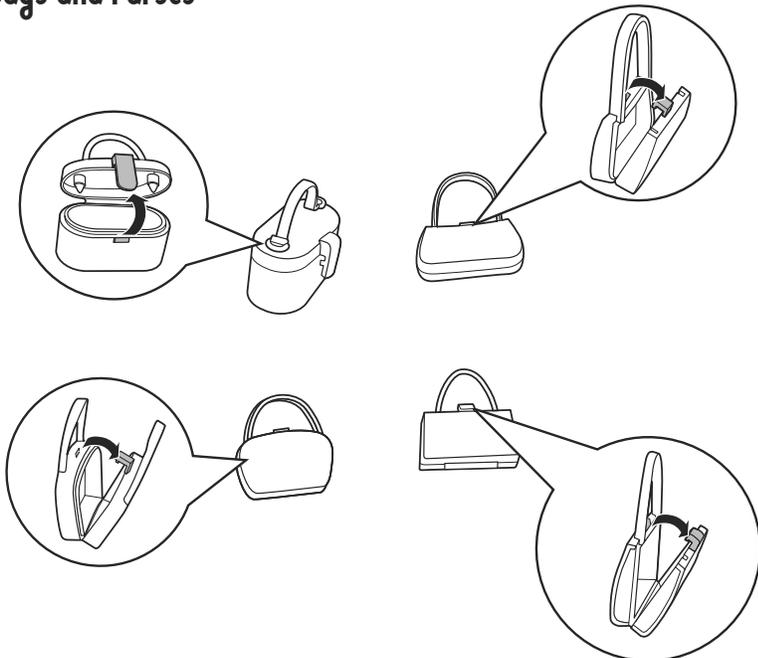


Boots

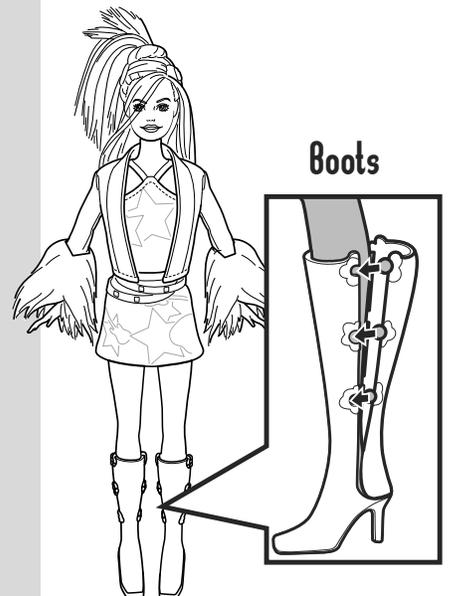


Doll and fashions not included.
Doll cannot stand alone.

Play Time!

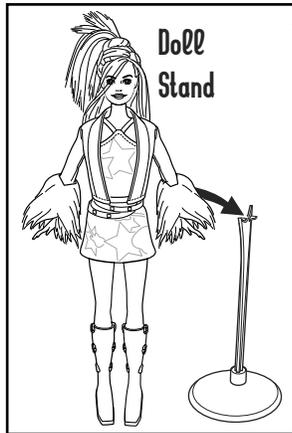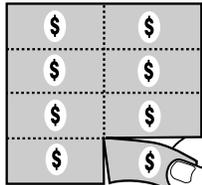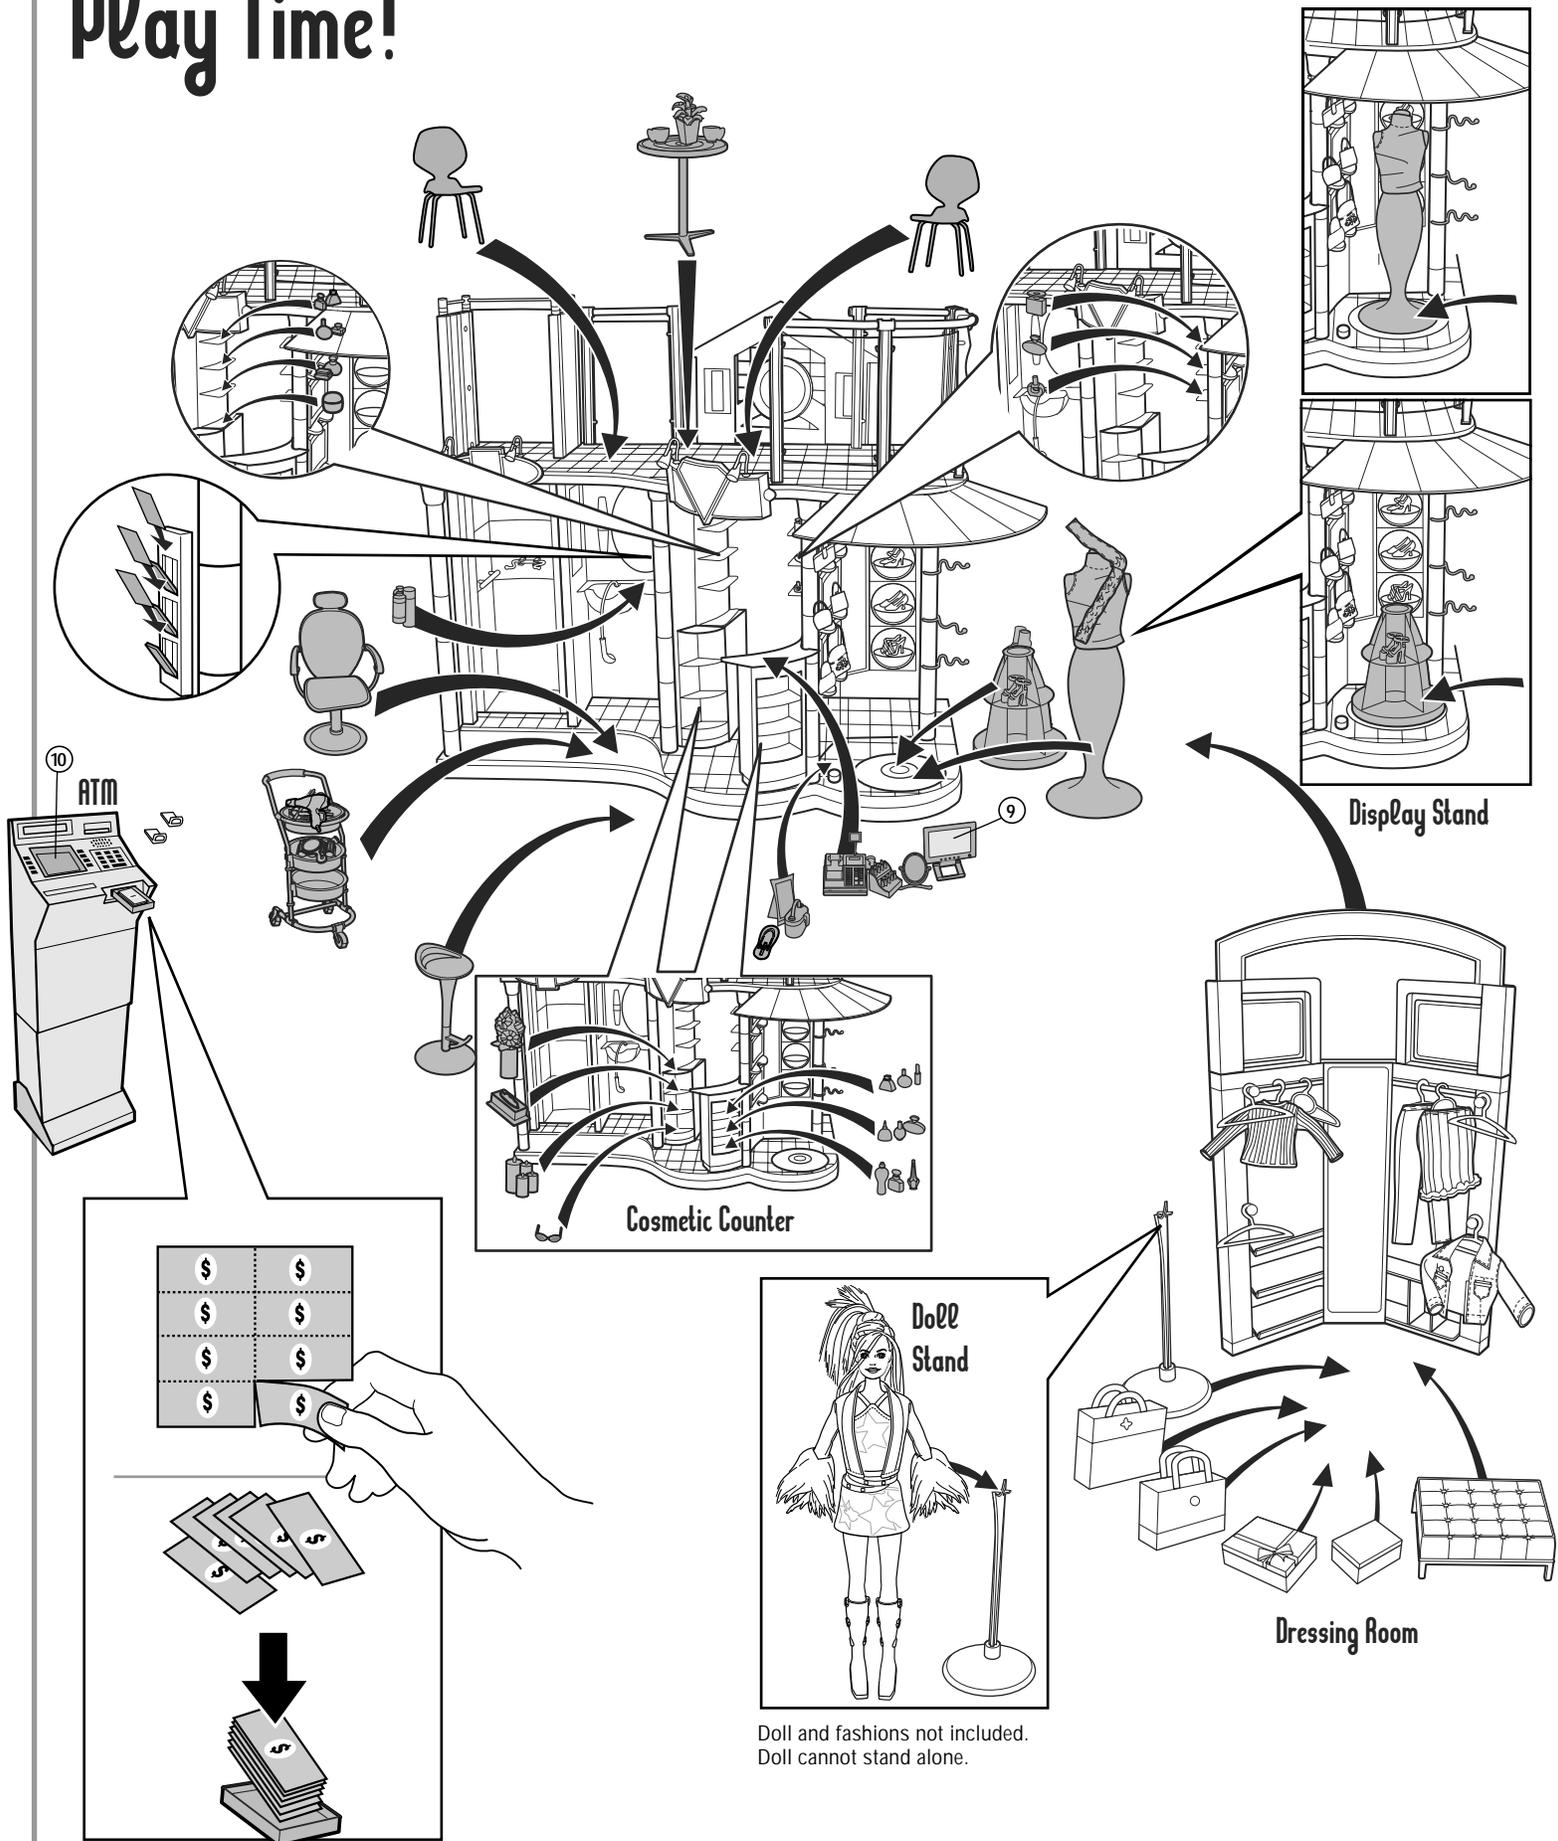

Doll and fashions not included.
Doll cannot stand alone.

Get money
to shop
from the
ATM!


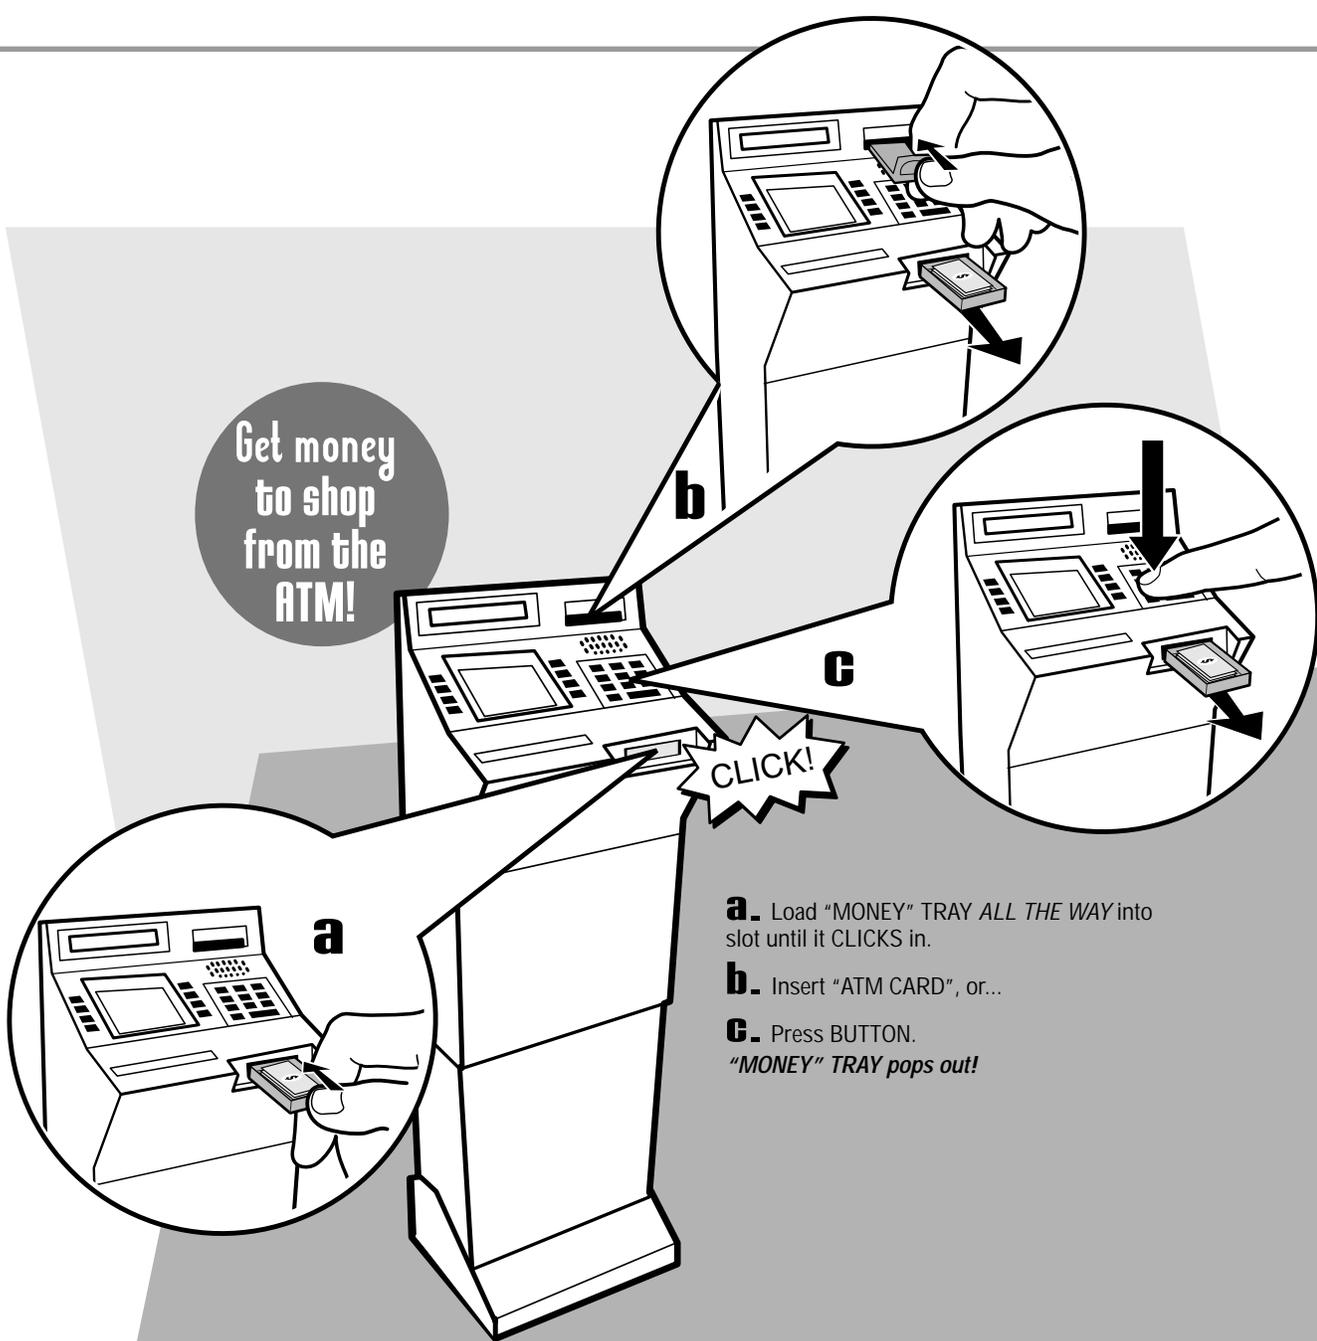


a. Load "MONEY" TRAY ALL THE WAY into slot until it CLICKS in.

b. Insert "ATM CARD", or...

c. Press BUTTON.
"MONEY" TRAY pops out!




Go
SHOPPING!

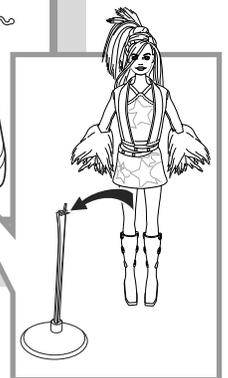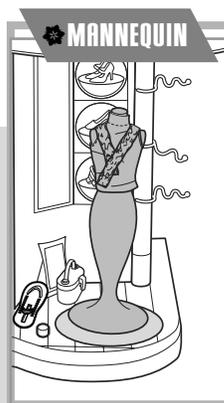

Elevator

going up! Slide handle UP!


Rear View

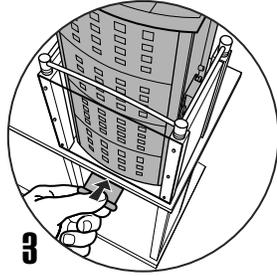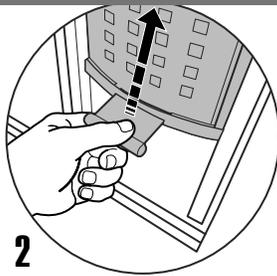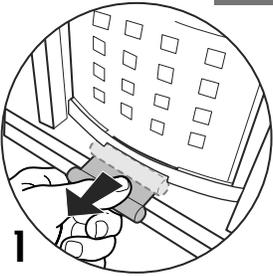

elevator lights up and dings!


Ding!

Rear View

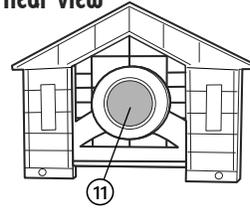


Dressing Room

Dolls and fashions not included.

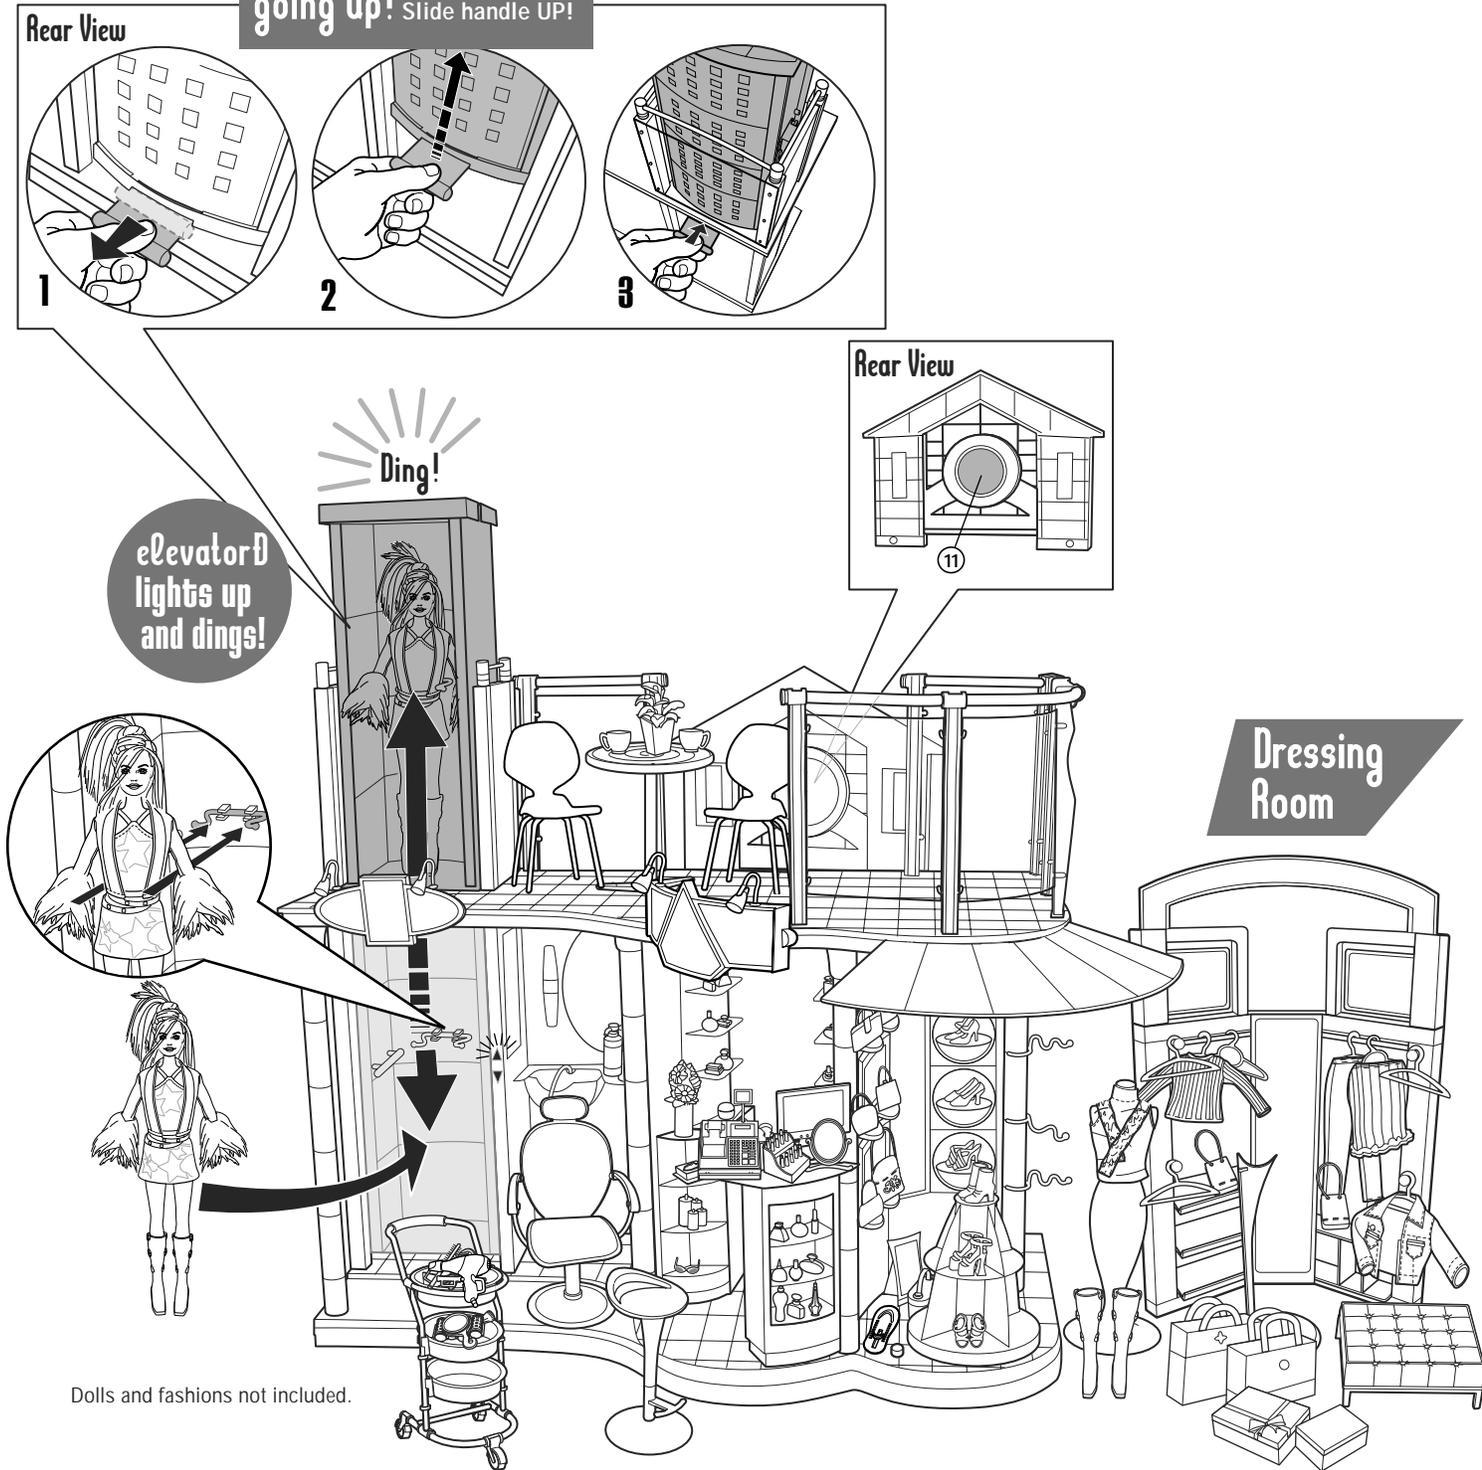

Male

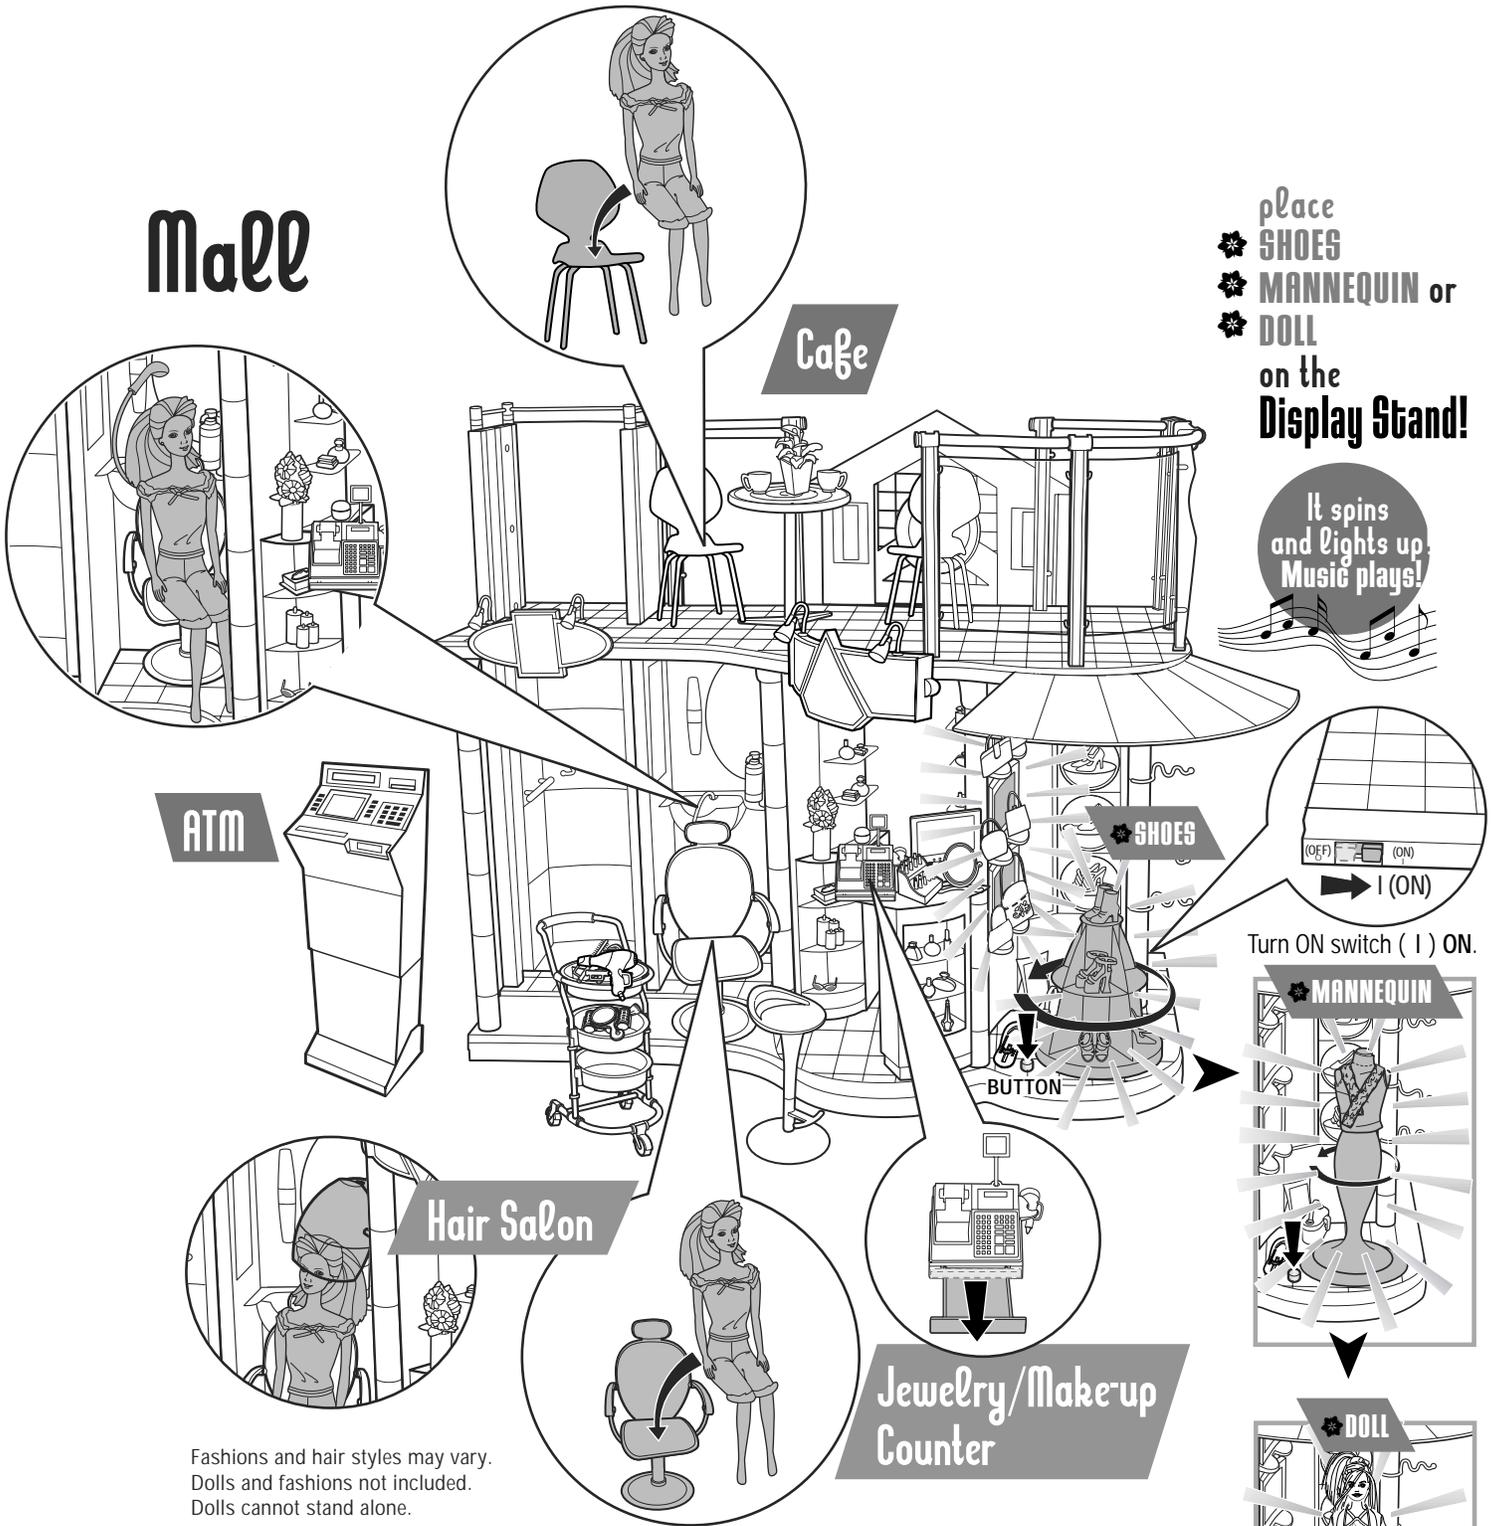

place
 * SHOES
 * MANNEQUIN or
 * DOLL
 on the
Display Stand!

It spins
 and lights up
 Music plays!

ATM

Cafe

Hair Salon

Jewelry/Make-up
 Counter

* SHOES

BUTTON

(OFF) (ON)
 I (ON)

Turn ON switch (I) ON.

* MANNEQUIN

* DOLL

FASHION SHOW!


Fashions and hair styles may vary.
 Dolls and fashions not included.
 Dolls cannot stand alone.

* PRESS BUTTON








- The display stand spins, colored lights flash and music plays!
- Press again for a 2nd tune!
- Press again for a 3rd tune!
- Press again to make music stop. Display stand spins and lights flash!
- Press one more time. Lights turn off and stand stops spinning.

Press button to play again!

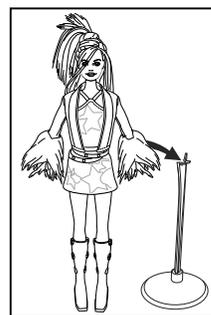

Storage

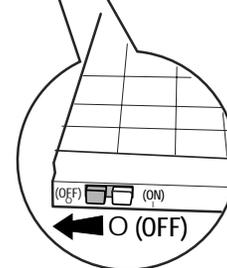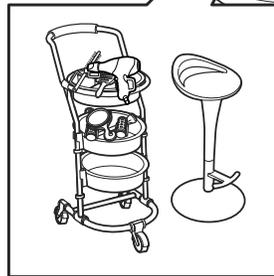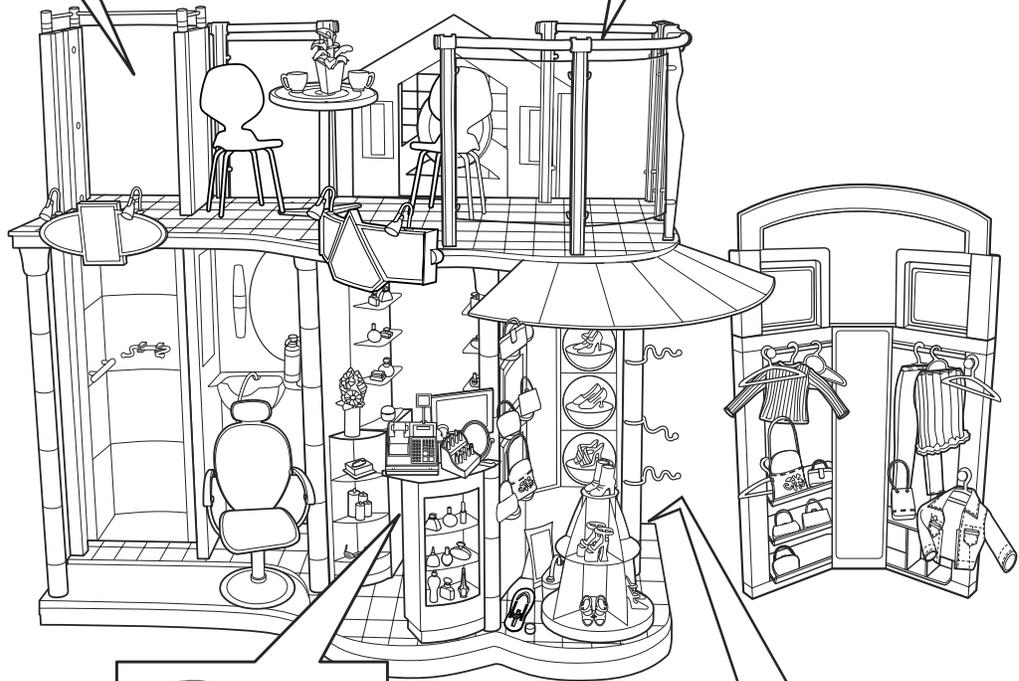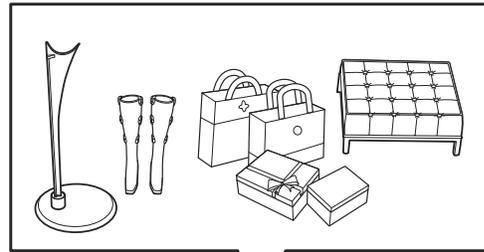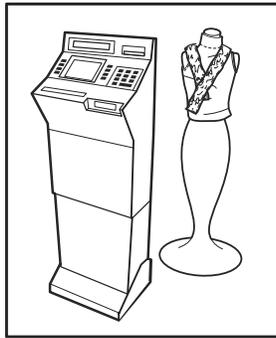

Turn ON/OFF switch (O) OFF.

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-665-6288.

Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Help line 01628500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.

Mattel, Inc., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-Toys.

CONSUMER INFORMATION

YOU CAN TELL IT'S MATTEL!™ CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Relations, Mattel, Inc.
333 Continental Blvd.
El Segundo, CA 90245 USA

1 (800) 524-TOYS

WE ARE DEDICATED TO QUALITY PRODUCTS.