

# Quick Start!



## For Best Results

1. Use **one finger** to touch words and pictures on the pages.
2. Do not rest hands or arms on the pages. Each page is "touch" and the unit "reads" everything that touches the page.
3. Make sure the unit is flat and the book is placed securely in the unit.
4. If the unit does not function properly, slide the reset switch on the back of the unit **Off** and then **On** again.



G7823  
Instructions

## Discover the joy of stories, with a gentle touch!

Please keep this instruction sheet for future reference,  
as it contains important information.

Requires four "AA" (LR6) **alkaline** batteries (not included).

An adult must install batteries.

Tool required for battery installation: Phillips screwdriver (not included).




Off Switch

## Let's Go

1. Install four "AA" (LR6) **alkaline** batteries inside the unit.
2. Be sure the reset switch (located on the bottom of the unit) is in the **On** position.
3. Your Power Touch™ Baby unit comes with a Baby Animals Book that **does not** require a cartridge. Additional books (sold separately) come with a cartridge that is required for use.

**Hint:** The cartridge included with your Power Touch™ Baby unit is non-functional. It has been included to show you where to insert other cartridges included with other books (sold separately).

4. With the book closed, and the cover upright, fit the top of the book binding into the top of the unit. Now, lower the other end of the binding into the bottom of the unit. Push to "snap" into place.
5. Flick the **On/Off** switch and slide the volume switch to a comfortable listening level.
6. Now, use your finger to touch words and pictures to hear stories, play music and much more!

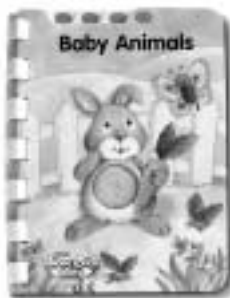

### Baby Animals Book Included

(Additional books with cartridges sold separately.)

# 3 ways to play

1. Story



2. Explore



3. Surprise



|                                                                                                                                                                                                |                                    |                                                                                                                                   |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| <div>Touch</div> <div></div> | Touch the words                    | <div>Listen to the words.</div> <div><b>Hint:</b> You will hear the words read after touching the <b>story mode</b> button.</div> |
|                                                                                                                                                                                                | Touch any object on the page       | <div>Listen to the object identified, a descriptive phrase, or even a fun sound!</div>                                            |
|                                                                                                                                                                                                | Touch the texture spot on the page | <div>Listen to the object identified, a descriptive phrase, or even a fun sound!</div>                                            |
|                                                                                                                                                                                                | Touch the hole in the page         | <div>Listen to a fun, musical riff.</div>                                                                                         |
| <div>Touch</div> <div></div>                                                                                | <div>Listen to the question</div>  | <div>Touch something on the page and hear it identified.</div> <div><b>Hint:</b> After the third question, pick a new mode.</div> |

### **Note to Parents**

*Listening to the rhythm and cadence of the words while reading a book provides a rich language model for baby. Seeing written words on a page and hearing those words tell a story or describe something lays the foundation for the "mechanics" of reading.*

*When first introducing this system to baby, be sure to use it like any book you would read to your child. Take a moment to point to an object on the page and describe it. For example, you might say, "See the bird." Point to it and then add more description, like "The bird is flying." Try this with other objects on the page too. If your baby seems to be responsive to the idea of object identification, you might play a "find" game. "Where's the bird? Show me where the bird is on the page. That's right. The bird is flying in the sky." This engages your baby in the book, even before learning how to read the words.*

*As your child grows into toddlerhood, words may begin to be recognized as part of the "ABC's" and a few sight words or symbols might be recognized, especially logos of familiar restaurants, stores or household items. This is an exciting time for learning! Take cues from your child, and offer books and reading opportunities to continue an interest and joy of reading. Research has shown that children who are read to very early, learn to love reading and become better at it!*



# Musical Fun to Explore!


Touch to hear a musical ditty with this instrument

Listen to the tune, "Twinkle, Twinkle Little Star"

Listen to musical riffs

Listen to the tune, "Row, Row, Row Your Boat"

Listen to fun songs

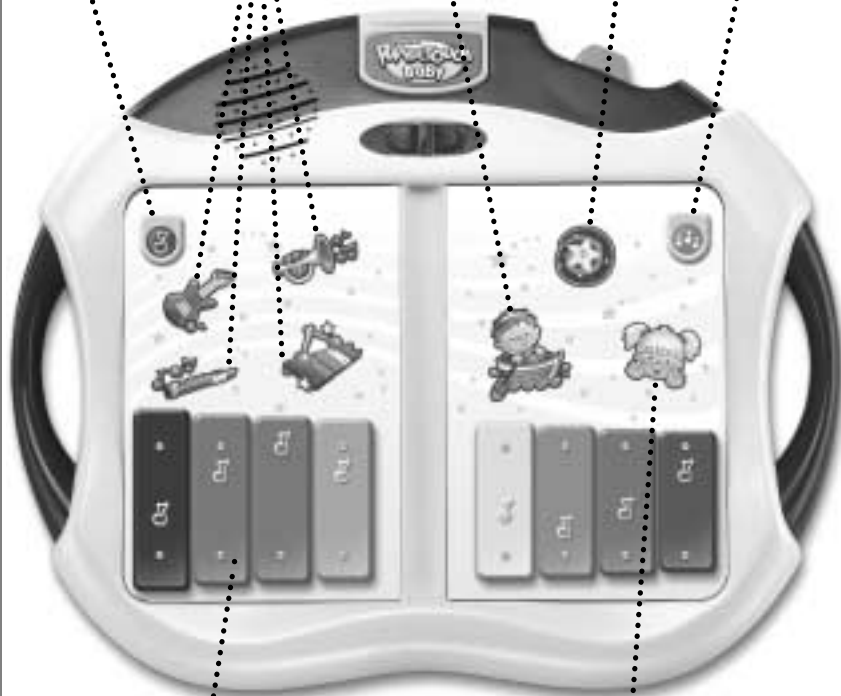

Press to hear a note.

Hint: Press one of the instruments above to hear the note played with that instrument.

Listen to the tune, "If You're Happy and You Know It"

# Troubleshooting Guide

| Problem                                                                                    | Solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|--------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>I've touched a picture or word and the unit doesn't recognize it correctly.</p>         | <ul style="list-style-type: none"> <li>• Try touching the word or picture again. Use <b>only one finger</b> so that you don't activate other objects on the page.</li> <li>• The book may have been placed upside down in the unit. Turn the book around and replace it in the unit.</li> <li>• The book may not be lying flat in the unit. Be sure the book binding is properly inserted into the unit and laying flat.</li> <li>• A book is being used with the wrong cartridge (additional books only). Match the title on the book cover with the title on the cartridge.</li> <li>• The page on the book is bent. Flatten the page.</li> <li>• Battery power may be weak. Replace <b>all</b> batteries with fresh, <b>alkaline</b> batteries. Do not mix old and new batteries.</li> <li>• You may need to reset the electronics in the unit. Slide the reset switch <b>Off</b> and then back <b>On</b> again.</li> </ul> |
| <p>You hear many sounds at the same time.</p>                                              | <ul style="list-style-type: none"> <li>• Use <b>only one finger</b> so that you don't activate other objects on the page. Be sure hands and arms are not resting on the page.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <p>The sound quality is faint or there is no sound at all.</p>                             | <ul style="list-style-type: none"> <li>• Adjust volume by sliding the volume switch.</li> <li>• The unit may have shut off automatically (after a few minutes). To turn back on, simply flick the <b>On/Off</b> switch.</li> <li>• The batteries are dead or weak. Replace <b>all</b> batteries with fresh, <b>alkaline</b> batteries. Do not mix old and new batteries.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <p>The unit functions erratically and <b>On/Off</b> switch does not work when flicked.</p> | <ul style="list-style-type: none"> <li>• Battery power is weak and you will need to reset the electronics. Slide the reset switch on the back of the unit to the <b>Off</b> position. Replace <b>all</b> batteries with fresh, <b>alkaline</b> batteries. Do not mix old and new batteries. Slide the reset switch to the <b>On</b> position.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

# Batteries

## Installation

- Loosen the screws in the battery compartment door with a Phillips screwdriver. Lift to remove the battery compartment door.
- Insert four "AA" (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- **Always use alkaline batteries for longer battery life.**
- Be sure the reset switch is in the **On** position.



SHOWN ACTUAL SIZE

Reset Switch



Bottom View

## Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

### Questions?

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS (5437)**, 8 AM - 6 PM EST, Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to:

Fisher-Price, Inc.  
Consumer Relations  
636 Girard Avenue  
East Aurora, New York 14052

### One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052, warrants to the original purchaser that Power Touch™ Baby is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

**SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.**

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.**

## Care

- Never place heavy objects on this toy.
- This toy is not intended for use outdoors.
- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Please do not take this toy apart.
- Do not drop this toy on a hard surface.
- Keep this toy away from direct sunlight and excessive heat.
- Keep water, sand and dirt off this toy.

## FCC Note (United States Only)

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.



## Discover the joy of stories with a gentle touch!

The PowerTouch™ Baby system offers a fun, new way for your child to begin developing a love of books. Each page is designed with lots of sounds, music and activities that help bring stories to life. Plus, PowerTouch™ Baby uses a "hands-on" approach to learning that helps children process new information, involving multiple senses – sight, sound, and touch. There are even fun textures – and, they all come to life with just a gentle touch!

**Lots of books for little fingers to discover!**



**For countries outside the United States:**

**CANADA Questions? 1-800-567-7724.** Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**GREAT BRITAIN** Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

**AUSTRALIA** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.  
Consumer Advisory Service 1300 135 312.

**NEW ZEALAND** 16-18 William Pickering Drive, Albany 1331, Auckland.

**ASIA** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.