



Getting Started

1. Be sure the **reset switch** (located on the bottom of the unit) is in the **On** position.
2. Insert the **cartridge** into the **cartridge port** at the top of the unit.
3. With the book closed and the cover upright, fit the top of the book binding into the top of the unit. Lower the other end of the binding into the bottom of the unit. Push to "snap" in place.
4. Flick the **On/Off switch** and slide the **volume switch** to a comfortable listening level.
5. Now **use your finger** to touch words and pictures to hear stories, play music and much more!

Let's Go!

Touch



Touch the words

Listen to the words.

Hint: You will hear the words read after touching the **story mode** button.

Touch any object on the page

Listen to the object identified, a descriptive phrase, or even a fun sound!

Touch the texture spot on the page

Listen to the object identified, a descriptive phrase, or even a fun sound!

Touch the hole in the page

Listen to a fun, musical riff.

Touch



Listen to the question

Touch something on the page and hear it identified.

Hint: After the third question, pick a new mode.




For Best Results



1. Use only **one finger** to touch words and pictures on the pages.
2. Do not rest hands or arms on the pages. Each page is "touch sensitive" and the unit "reads" everything that touches the page.
3. Make sure the unit is used on a **flat** surface.
4. The unit may not recognize the book page if the book is not properly positioned in the unit. Check to be sure it's not upside down or crooked in the unit.
5. The unit may also not recognize the book page if you have the wrong cartridge in the cartridge port. Match the title on the book cover with the title on the cartridge.
6. If the unit does not function properly, slide the **reset switch** on the bottom of the unit **Off** and then **On** again.
7. When sounds become faint or there are no sounds at all (and the volume is all the way up) or the unit does not function properly (and you have already reset the unit), it's time to replace the batteries in the unit! Replace **all four** batteries with fresh, "AA" (LR6) **alkaline** batteries.

Cartridge Storage

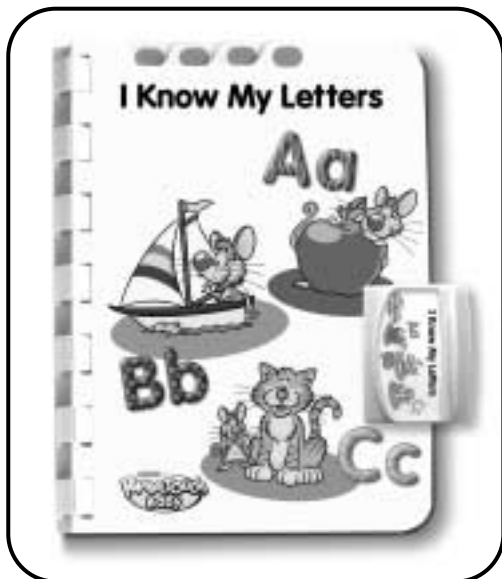

The cartridge has been designed to clip to the book for storage! Simply fit the clip on the back of the cartridge to the edge of the book.

Consumer Information

Questions?

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS (5437)**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price, Inc.
Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

www.fisher-price.com

©2004 Mattel, Inc. All Rights Reserved. © and ™ designate U.S. Trademarks of Mattel, Inc.
Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.