

fisher-price®




GJW90

Walk, Bounce & Ride Pony

Before You Begin



 Keep these instructions for future reference as they contain important information.



x3

Three AA batteries are required (included). Batteries included are for demonstration purposes only.

Alkaline batteries make this toy work longer before you need to change them.



Clean with a damp cloth. Do not immerse.



Adult supervision required.

Never use near steps.

Choose areas for riding that are free of obstacles.

Learn to stop safely.

Use with caution as this product requires skill to operate safely to avoid falls, collisions, and injuries to yourself (the rider) and others.

Maximum weight: 42 lb (19 kg)

Periodically inspect this product for wear or damage. Check all nuts and bolts, and tighten as needed. Replace worn or broken parts immediately.

Before You Begin



Adult assembly is required (because we needed to fit this toy in the box).



20

Plan on about 20 minutes for assembly.



You'll need a Phillips screwdriver (not included) for assembly and battery replacement. Do not over-tighten assembled screws or the screw in the battery door.





You may need to fill the seat with air using a manual air pump and standard needle.



Need some assembly help?

Use your smart device to scan the code. No app required! In camera mode, focus on the code. Then tap the pop-up to watch how to assemble the toy. Or visit: fisher-price.com/assembly/GJW90



Assembled Parts

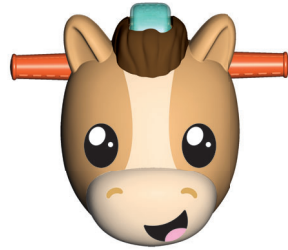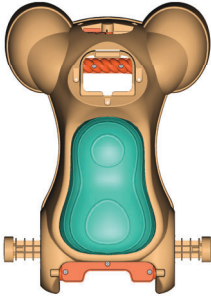

2 Rear Wheels
(larger and rounded on one side)



2 Front Wheels
(smaller and flat on both sides)

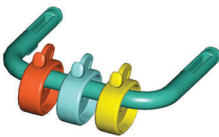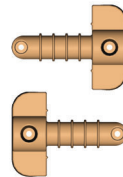


M4,5 x 19 mm

⚠ CAUTION

This package contains small parts.
For adult assembly only.



Assembly

1

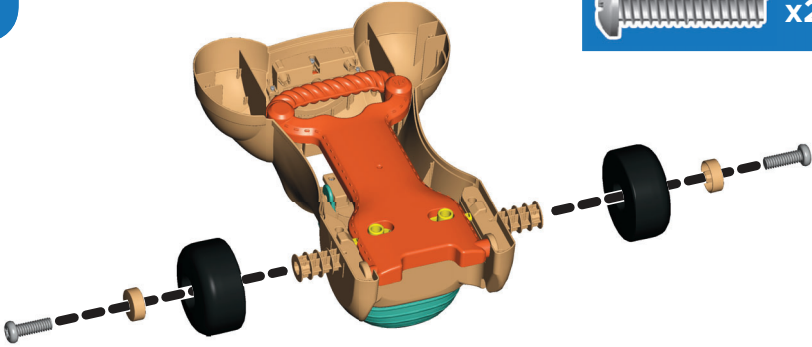

The rear wheels are larger and have a flat and rounded side. When assembling, make sure the flat side is toward the pony body.

2

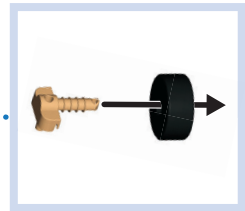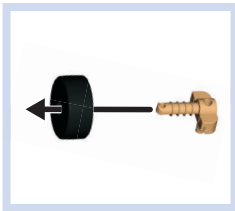


The front wheels are smaller and are flat on both sides.

Assembly


3



4

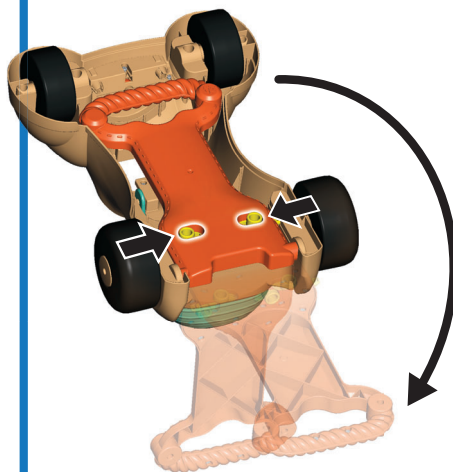


5

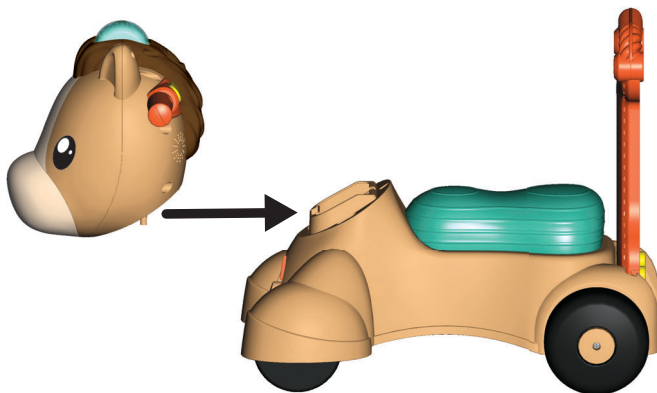

Assembly


6

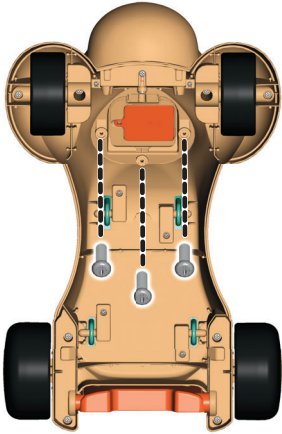

7



Replace Batteries

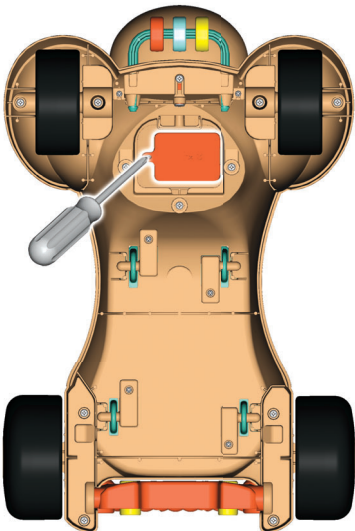

Loosen the screw in the battery door and remove the door. Remove the exhausted batteries and properly dispose.



 
Insert three, new AA (LR6) **alkaline** batteries. Make sure you insert the batteries correctly!

Replace the battery door and tighten the screws.

You may need to reset the electronics if this toy begins to operate erratically. Slide the power-volume switch off and back on.


When sound or lights become faint or stop, it's time for an adult to change the batteries.

Power, Volume, & Modes

Slide the switch to turn power ON with low volume , ON with high volume  or OFF .

Press the ABC or 123 buttons for learning songs, phrases and fun sounds!



Spin for colorful lights, phrases and songs.

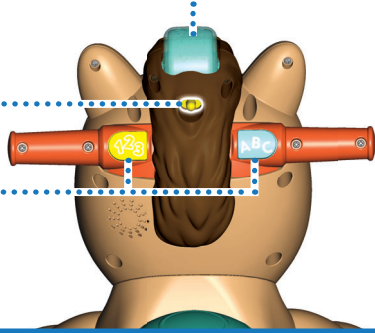

After a button press or roller spin, ride or push pony along for more music, phrases and sound effects. If motion doesn't activate pony, be sure to press a button or spin the roller to wake pony up.



Bounce & Ride

Fold the handle underneath pony and bounce or ride off into the sunset.

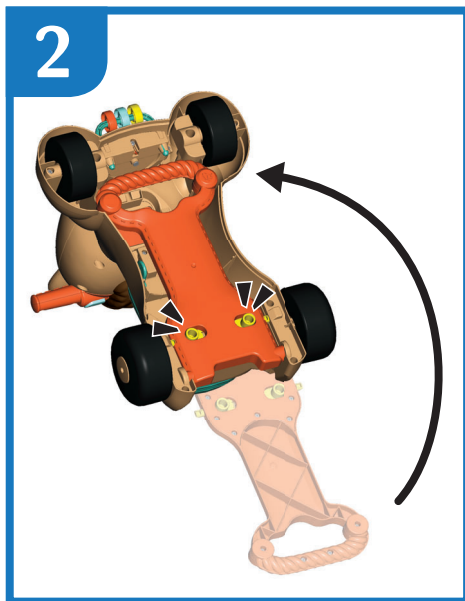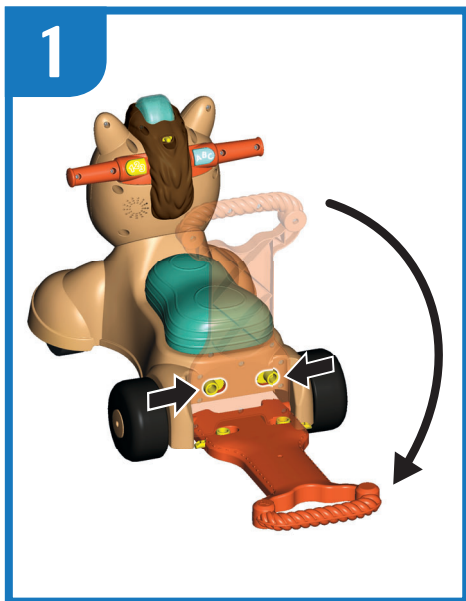


Walk

Unfold the handle and let pony help with baby's first steps.

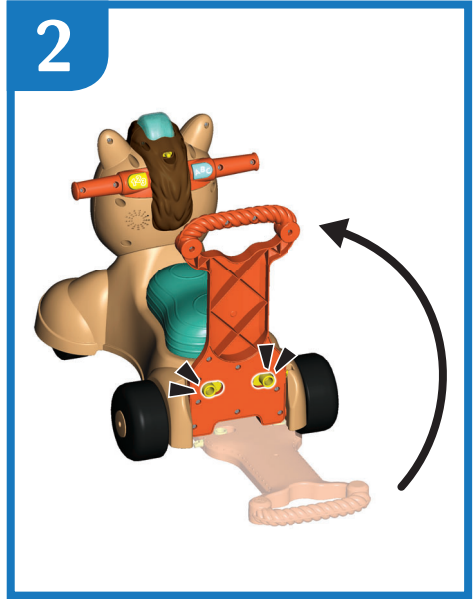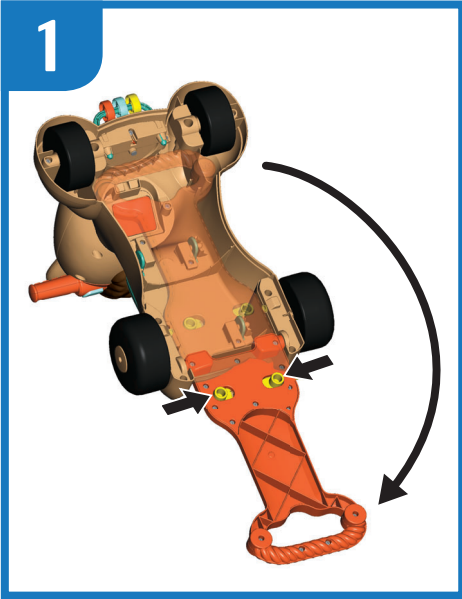

Whoa there, partner!

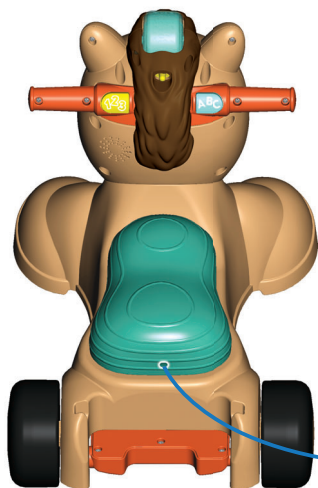

If you feel pony's seat is too soft, it may need to be inflated. Locate the valve hole on the back of the seat and inflate the seat using a standard needle and manual air pump. Do not over-inflate the seat more than 1 PSI (pounds per square inch).



Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment (+ and -).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



UNITED STATES

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052. Consumer Services: 1-800-432-5437.

CANADA

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2 Consumer Services/Service à la clientèle : 1-800-432-5437. www.service.mattel.com.

GREAT BRITAIN

Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK. www.service.mattel.com/uk.

NEDERLAND

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

SOUTH AFRICA

Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Let's be kids

GJW90-0970
1102318149-DOM

©2020 Mattel.
PRINTED IN MEXICO