

Color Pixter[®] Digital Camera

Owner's Manual

 
Model Number: H0162



Fisher-Price

Let's Go!

Before inserting the camera cartridge, turn power off! Insert the camera cartridge into the cartridge port. Turn power back on.

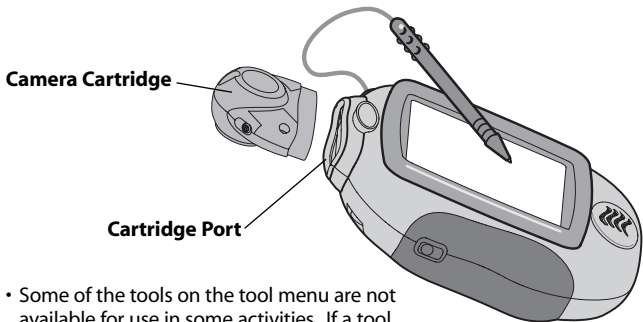


- Some of the tools on the tool menu are not available for use in some activities. If a tool is not available for use, you will hear a tone.
- Please keep this manual for future reference as it contains important information.

IMPORTANT! If the tip of the stylus and the image on screen do not align, it's time to calibrate them! Please refer to page 35, Calibrating the Stylus.


Features

 Indoor/Outdoor Switch

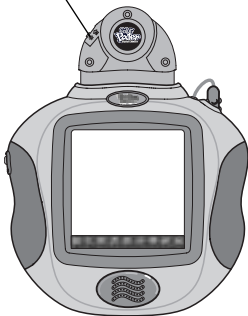

Front View

 
Lens

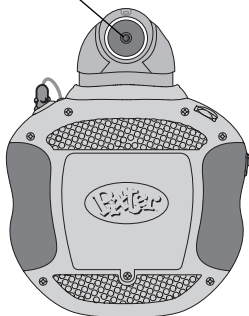

Back View

 Picture Time!

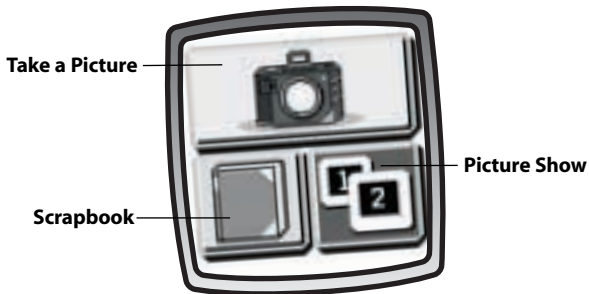

Take pictures, save them in your scrapbook
(where you can customize them) or watch a picture show!
Choose an activity: **Take a Picture**, **Scrapbook** or **Picture Show**.



Take a Picture

Indoor/Outdoor Switch



- First, adjust the camera to the lighting conditions.
 - Slide the switch to  for an indoor picture.
 - Slide the switch to  for an outdoor picture.



- Now, position your Pixter® unit so that you can see your subject on the screen.

Hint: Make sure the subject isn't closer than one foot.




- To adjust the contrast of the picture, touch Save It (and Adjust the Contrast)  on the tool menu with the stylus.

Image credit: Pixter.com






- Tap the contrast line with the stylus near the moon 🌙 to darken the image.
- Tap the contrast line with the stylus near the sun ☀️ to brighten the image.



- Now, touch the screen with the stylus to take your picture.



 
Scrapbook

- If you would like to save the picture in your scrapbook , touch the scrapbook  on the screen with the stylus.




- Look at how many pictures you have saved!


Hint: you can save up to 10 pictures in the scrapbook.

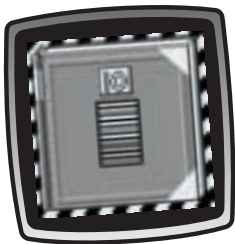

 - When the scrapbook contains 10 pictures, you'll see this image on the screen.
- If you take another picture and save it, the new picture will replace the first picture in your scrapbook.

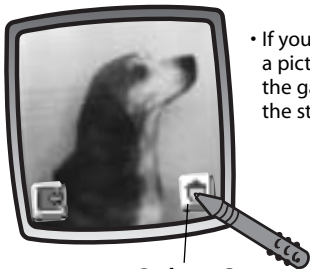

Garbage Can

- If you'd like to retake the picture or remove a picture from your scrapbook, touch the garbage can  on the screen with the stylus.

Scrapbook



- Touch the arrows on the bottom of the screen with the stylus to scroll through your pictures.



- When you find one that you like, touch your choice on the screen with the stylus.




- To customize your picture, use any of the tools on the tool menu: "Pencil" Tool  ; Straight Line  ; Shape Maker  ; Stamp It!  ; Erase It  or Special Effects Selector  .

Hint: In the Special Effects Selector tool, you'll find: Frame It, Typist, Filters, Rotator, Color Surprise and Backgrounds! Refer to pages 13-33 for information on how to use these tools.

"Pencil" Tool



 Touch for freestyle drawing or writing.

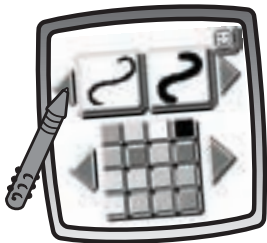


- Touch the arrows to choose the type of marking. Choose or or or .
 - Touch the arrows to choose a color palette. Now, choose a color for your "pencil" tool.
 - Touch to save your choices.
- Use the stylus to add interesting features to your picture.




Hint: If you'd like to save your customized picture, touch the *Save It* tool on the tool menu.

 
Straight Line

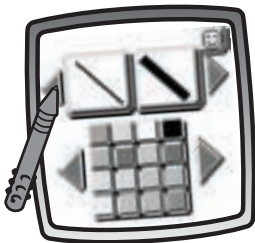


Touch to make straight lines.



 - Touch the upper arrows to choose the type of line. Choose  or .
- Touch the lower arrows to choose a color palette. Choose a color for the line.
- Touch  to save your choices.

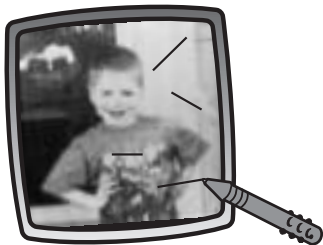


- Touch the screen with the stylus. Now, drag the stylus on the screen and stop. Look – a straight line!






Hint: If you'd like to save your customized picture, touch the *Save It tool*  on the tool menu.

 
Shape Maker

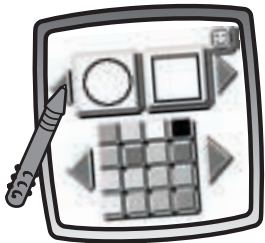


Touch to make shapes.



 - Touch the upper arrows to choose a shape. Choose   or  .
- Touch the lower arrows to choose a color palette. Choose a color for your shape.
- Touch  to save your choices.

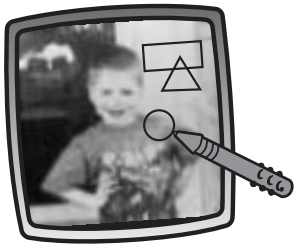


- Touch the screen and drag the stylus to make small or large shapes.

Hint: If you'd like to save your customized picture, touch the *Save It* tool  on the tool menu.


Stamp It!



 Touch for stamper art.

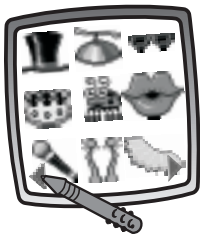

 
Touch the arrows on the bottom of the screen with the stylus to see each of the stamper designs.

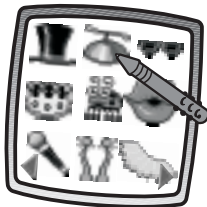

Touch the screen with the stylus to choose a stamper.



Touch the screen to add the stamper to your picture.





Hint: If you'd like to save your customized picture, touch the Save It tool  on the tool menu.

Magic Wand Eraser





Touch to make your stylus an eraser or go to special effects!




- Choose eraser , magic effects  or undo .
- Touch  to save your choice.




If you chose eraser , use your stylus to erase any part of what's on the screen.

Hint: If you'd like to save your customized picture, touch the Save It tool  on the tool menu.



 
If you chose undo ,
the last thing you did to
your picture is gone!



- If you chose magic effects ,
you first need to add black to
your picture. Use the “Pencil” tool,
Straight Line Maker or Shape
Maker tools to add black to
your picture.



- Now, touch the arrows on the bottom of the screen with the stylus to scroll through background choices. Touch your choice on the screen with the stylus.

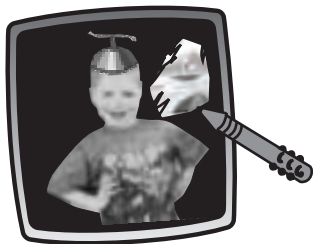

- Use your stylus to “scratch” through the black areas on your picture to reveal the hidden background.

Full Screen Erase



Touch to choose an animated full screen erase with cool sound effects.



Touch the screen with the stylus to choose the effect.



Watch and listen as your drawing disappears.

Special Effects Selector



Touch to choose a special effect.



Choose an effect: Frame It, Typist, Filters, Rotator, Color Surprise and Backgrounds.



Frame It



- Touch the arrows on the bottom of the screen with the stylus to scroll through different picture frames.

Hint: Look – your picture is inside the picture frame!



- When you find one that you like, touch your choice on the screen with the stylus.



Hint: If you'd like to save your customized picture, touch the Save It tool  on the tool menu.


Image credit: iStockphoto.com

 **Typist**

- To create a caption for your picture, touch each letter of the word with the stylus. Touch  to save your caption.



- Touch the screen with the stylus to place your caption.

Hint: If you'd like to save your customized picture, touch the Save It tool  on the tool menu.

 




Filters




- Choose a filter. Touch your choice on the screen with the stylus.

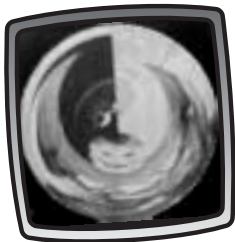

Fisheye



Zig Zag


Hint: If you'd like to save your customized picture, touch the Save It tool  on the tool menu.



Swirl



Pinch


Hint: If you'd like to save your customized picture, touch the Save It tool  on the tool menu.



Stained Glass



Wind Blur


Hint: If you'd like to save your customized picture, touch the Save It tool  on the tool menu.



**Old Fashioned
Black and White**




High Contrast

***Hint:** If you'd like to save your customized picture,
touch the Save It tool  on the tool menu.*



Negative


Hint: *If you'd like to save your customized picture, touch the Save It tool  on the tool menu.*



Rotator



- Look – your picture "turned"!


Hint: If you'd like to save your customized picture, touch the Save It tool  on the tool menu.



Color Surprise



- Your picture has new color.

Hint: If you'd like to save your customized picture, touch the Save It tool  on the tool menu.



Backgrounds




- Touch the arrows on the bottom of the screen with the stylus to scroll through different backgrounds and the pictures in your scrapbook.



- When you find one that you like, touch your choice on the screen with the stylus.





- Use the stylus to remove parts of the background to reveal a picture!

Hint: If you'd like to save your customized picture, touch the Save It tool  on the tool menu.


Picture Show




- Choose the type of picture show.
 - Touch  on the screen with the stylus for a *slow* picture show.
 - Touch  on the screen with the stylus for a *fast* picture show.




- Watch the picture show on the screen



 
Hint: *If you'd like to take a new picture or customize a picture, touch Home  on the tool menu with the stylus.*

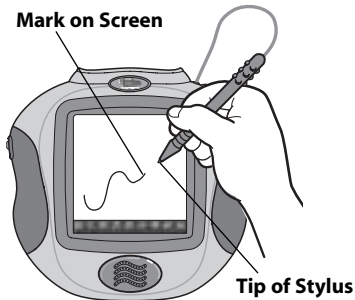
Calibrating the Stylus

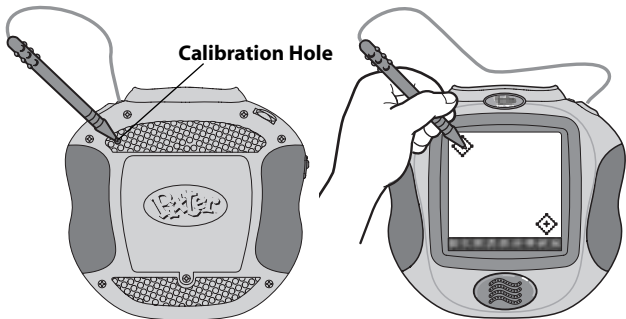 

IMPORTANT! The mark made on your screen from the stylus and the location of the tip of the stylus may not align. When this happens, you need to calibrate the stylus.



- Turn Pixter® power on. Wait until you see the Home Screen.
- Turn Pixter over and locate the calibration hole.
- Insert, push and hold the stylus in the calibration hole. Turn Pixter® over so that you can see the screen.
- When you see two , remove the stylus from the calibration hole.
- First touch the  in the upper left corner with the tip of the stylus.
- Then, touch the  in the lower right corner with the tip of the stylus.

Hint: After calibrating your screen, the contrast resets to the mid-level. To change the contrast on the screen, touch the Save It!  tool.

Care

- Keep water, sand and dirt off of the camera cartridge.
- Keep the camera cartridge away from direct sunlight and excessive heat.
- Do not immerse the camera cartridge. Simply wipe the outside of the camera cartridge with a cloth to clean.
- The camera cartridge has no consumer serviceable parts. Please do not take the camera cartridge apart.

One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants Pixter® Color Digital Camera is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost.

Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS (5437)**, 8 AM- 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price®
Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

For countries outside the United States:

CANADA

Questions? 1-800-567-7724, Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.



www.pixter.com

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2004 Mattel, Inc. All Right Reserved. ® and ™ designate
U.S. trademarks of Mattel, Inc.

PRINTED IN CHINA

H0162pr-0920