



www.fisher-price.com

H8757
Instructions



Please keep this instruction sheet for future reference,
as it contains important information.

Adult assembly is required for crib attachment.

Requires three "C" batteries (included).

Tool required for battery replacement: Phillips screwdriver (not included).



Peek-a-Boo Piano™

 
WARNING

To prevent child from climbing out of crib, do not attach this product to crib rail once child can sit up unassisted or can pull to a standing position.

CAUTION

- Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to a crib or playpen according to the instructions. Check frequently.
- Do not add additional strings or straps to attach to crib or playpen.

Battery Replacement

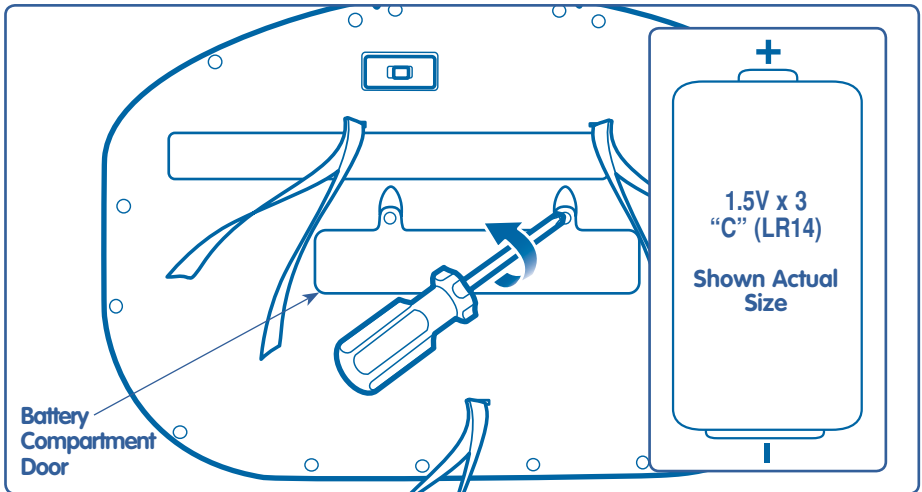

For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline "C" (LR14) batteries.

- Locate the battery compartment door on the back of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "C" (LR14) **alkaline** batteries.

Hint: We recommend using **alkaline** batteries for longer life.

 
- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Attaching to a Crib

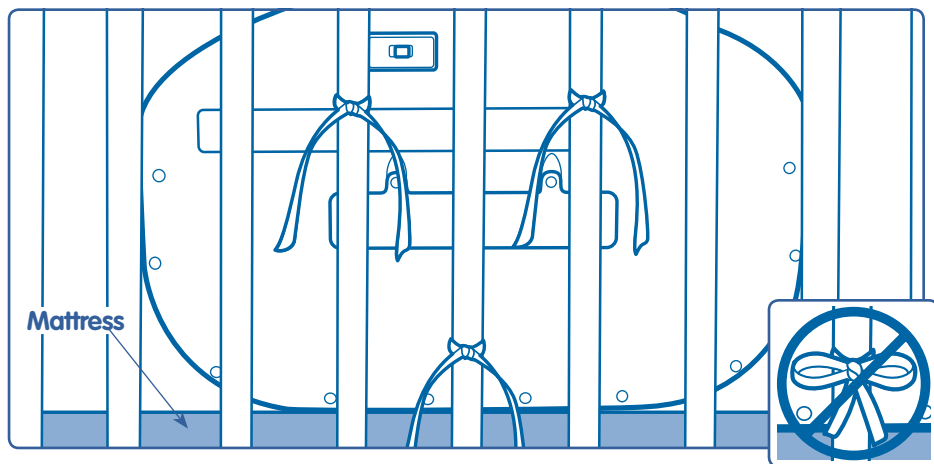

- Position the toy against the crib rails near the mattress.

 
Hint: For newborns, place the toy along a side rail where baby can easily hear and see it. For infants, place the toy near baby's feet.

- Tie each string tightly around a crib rail.

Hint: It is better to tie the strings in a knot rather than a bow, since a bow may be easily untied.

- You can easily remove the toy from the crib rails for floor play!

Lights, Music and Motion!

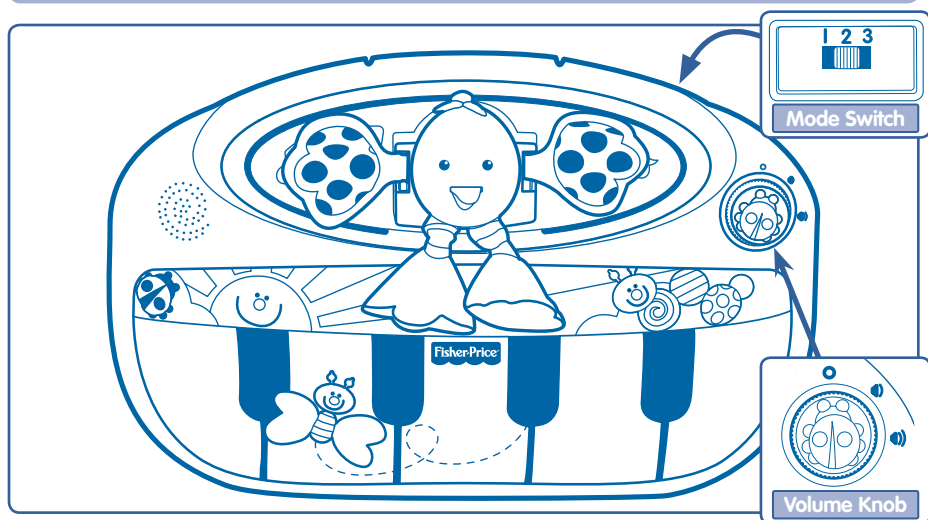

- Locate the power/volume knob on the front of the toy.
- Turn the knob to either on with low volume (🔊); or on with high volume (🔊).
- Turn the knob to the off position (⊖) when not in use.
- Locate the mode switch on the back of the toy.
- Slide the mode switch to **1**, **2** or **3**.

1 Soothing Music, Lights and Motions

Choose this mode for about 10 minutes of gentle music, soft lights and peek-a-boo birdie motion. Baby can press any key to restart.

2 Build a Song

Baby is rewarded when pressing or kicking keys. Each time a key is pressed, part of a song plays with lights and motion. Press again to hear and see more.

3 Sit and Play

When baby can sit up without help, place the toy on the floor. Press the keys to hear notes and create music along with lights and motions!

- When sounds, lights and motion from this toy become faint, slow or stop, it's time for an adult to change the batteries!

Care

- Wipe this product with a clean cloth dampened with a mild soap and water solution. Do not immerse this product.
- This toy has no consumer serviceable parts. Please do not take this toy apart.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Consumer Information

Visit us on-line at www.service.fisher-price.com.

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM- 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Write to:

Fisher-Price®
Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

For countries outside the United States:

CANADA

Questions? 1-800-432-5437, Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303; www.service.mattel.com/uk.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.