

Fisher-Price®

H9448

[www.fisher-price.com](http://www.fisher-price.com)















**GeoTrax**  
Rail & Road System

All About Trains Motorized Starter Set™

# Parts

- A. Engine
- B. Train Car
- C. 4 Straight Tracks
- D. Gantry
- E. Coal Loader Building
- F. Coal Loader Base
- G. Cross Track
- H. 2 Large Curved Tracks
- I. 4 Curved Tracks
- J. Crossing Gate
- K. Coal Boulder
- L. Crate
- M. 2 Signs

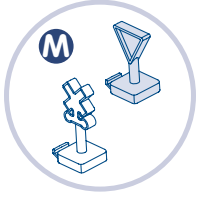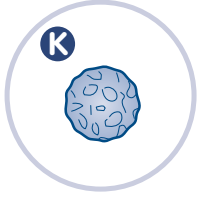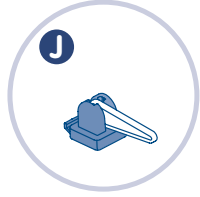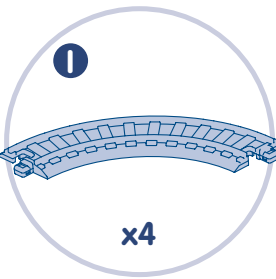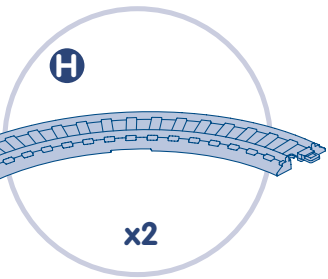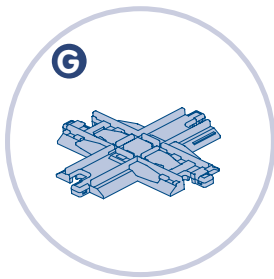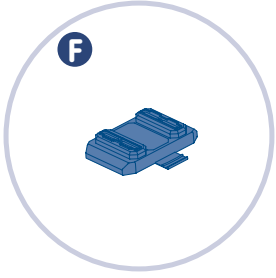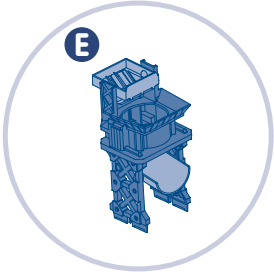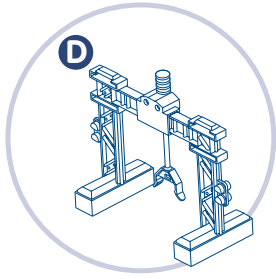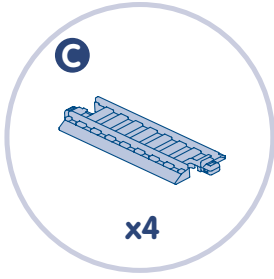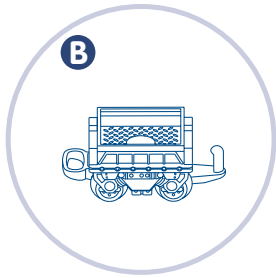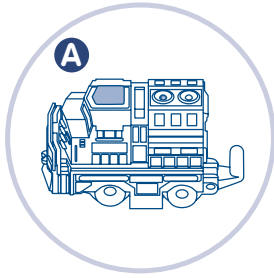


# Battery Installation



## SHOWN ACTUAL SIZE

We recommend the use of **alkaline** batteries for longer battery life.

- Locate the battery compartment on the back of the engine.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Lift the battery compartment door.
- Insert three "AAA" (LR03) **alkaline** batteries, as indicated inside the battery compartment.
- Close the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When the engine moves slowly, it's time for an adult to change the batteries!

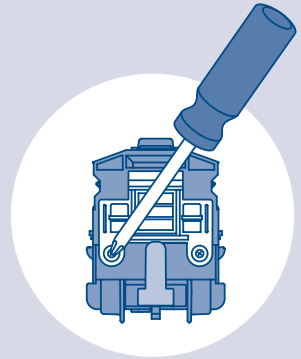


# Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# ■ Assembly

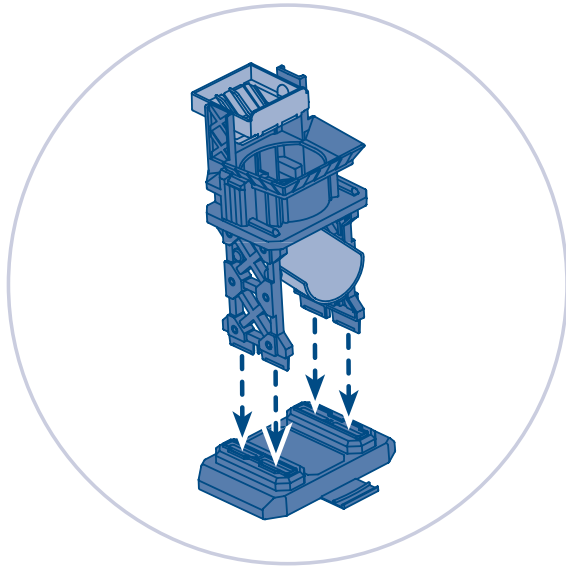

- "Snap" the coal loader building to the coal loader base.

# ■ Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

# ■ FCC Note (United States Only)



**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.


Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

# Track Layout



Track pieces easily snap together.

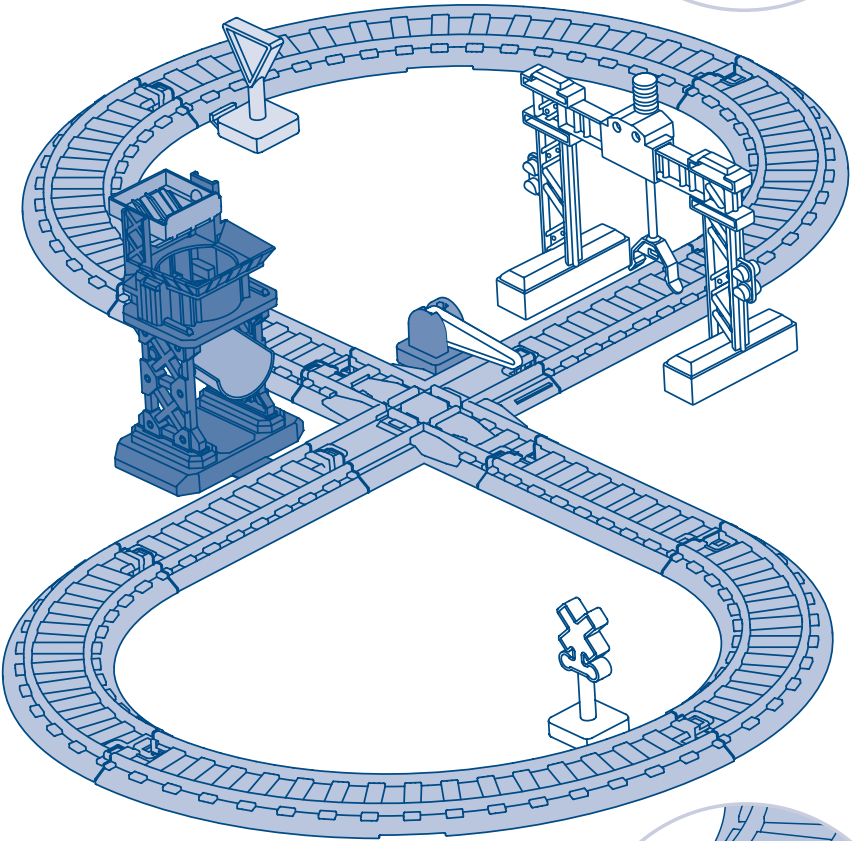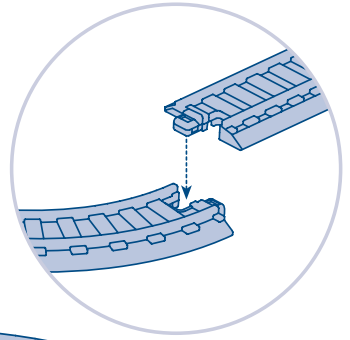

The signs have a small tab that fits into a matching notch in any track piece. Place the signs around the track.

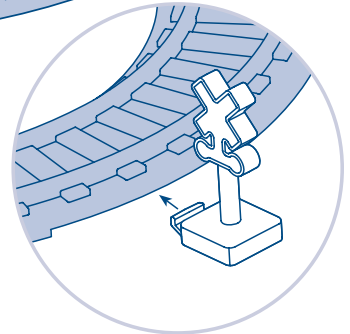

# All Aboard!

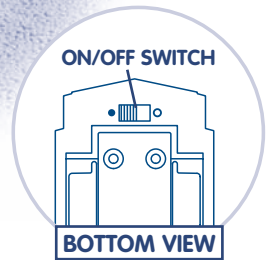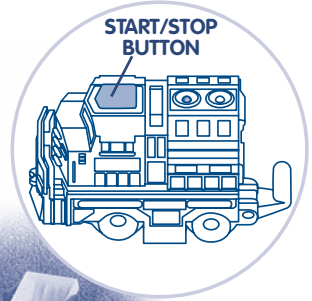



## WARNING

To prevent entanglement,  
keep hair away from wheels.


- Hook the cars together and place them on the track. Make sure the engine is in front.

**Hint:** We do not recommend using the engine on carpets. For best performance, use on the track provided or hard, flat surfaces.


- Locate the on/off switch on the bottom of the engine.
- Slide the switch to the on  position to turn the toy on.
- Press the start/stop button on top of the engine and the train moves forward. If the train does not start, slide the on/off switch on the bottom of the toy, off then on again. Press the start button again.
- Press the start/stop button again to stop the engine.
- Slide the on/off switch to the off  position when you are finished playing.

**Hint:** If the train drives slowly, the wheels on the engine or attached cars may be dirty. Wipe them with a clean cloth. If the train is still slow, batteries may be weak. Replace all three batteries in the engine with fresh **alkaline** batteries.

# ■ So Many Ways to Play!


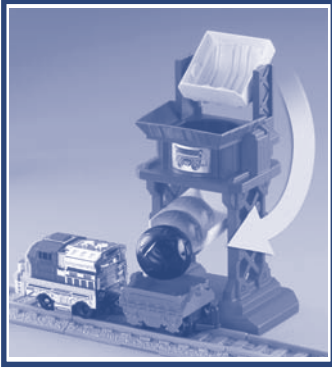


Press the tray and load the coal into the train car.

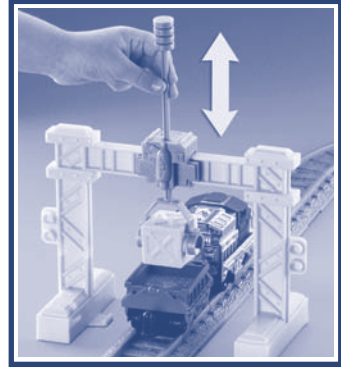

Use the gantry crane to load and unload the crate.

# ■ Try These Fun Layouts!

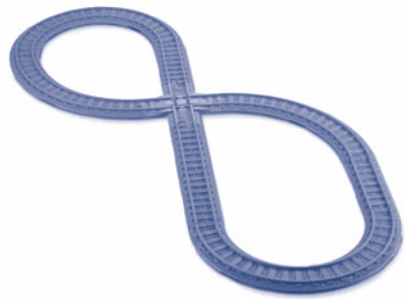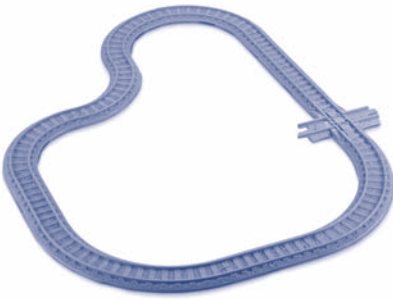

**The more you collect, the more fun it gets!**

Multiple track packs used to create this configuration. Each sold separately & subject to availability.

**Fisher-Price®**

**GeoTrax™**  
Rail & Road System

Visit [www.fisher-price.com](http://www.fisher-price.com)  
to see the entire world of  
GeoTrax® accessories!

For customer service, visit us on-line at [www.service.fisher-price.com](http://www.service.fisher-price.com).

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**,  
8 AM - 6 PM EST Monday through Friday. Hearing-impaired  
consumers using TTY/TDD equipment, please call 1-800-382-7470.

Write to us at:

Fisher-Price® Consumer Relations  
636 Girard Avenue, East Aurora, New York 14052

For countries outside the United States:

**CANADA:** Questions? **1-800-432-5437**. Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

**GREAT BRITAIN:** [Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB](http://MattelUKLtd.VanwallBusinessPark.MaidenheadSL64UB). Helpline: 01628 500303; [www.service.mattel.com/uk](http://www.service.mattel.com/uk).

**AUSTRALIA:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.  
Consumer Advisory Service 1300 135 312.

**NEW ZEALAND:** 16-18 William Pickering Drive, Albany 1331, Auckland.

**ASIA:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.