

## **Instructions for Power Station, Gamester's complete power and storage solution for the Game Boy Advance.**

### **CONTENTS**

- 1 x AC-DC adapter
- 1 x Power Station
- 1 x rechargeable battery pack
- 1 x terminal door

### **General**

The Power Station has been specifically designed for use with the Game Boy Advance and gives you the following features:

- Charges the Gamester rechargeable battery pack.
- Gives around 10 hours of play time.
- Stores your Game Boy Advance.
- Stores the Game Boy Advance's original battery door.
- Stores 4 game cartridges.

### **IMPORTANT**

1. This product has been specifically designed to charge the Gamester rechargeable battery pack only. Do not attempt to recharge any other batteries.

2. Rechargeable batteries are only to be charged under adult supervision.
3. Parents : Any battery charger to be used with the product should be regularly examined for potential hazards, such as damage to the cable or cord, plug, enclosure or other parts. In the event of such damage, the product must not be used until that damaged has been properly removed.
4. Exhausted batteries should be removed from the product.
5. The terminals of the battery compartment should not be short-circuited.

### **INSTALLATION**

1. Locate the Power Station on a flat surface.
2. Plug the power connector of the AC adapter into the socket at the back of the Power Station.
3. Plug the AC Adapter into an AC outlet.
4. The green 'power on' light will appear on the Power Station.

### **INITIAL CHARGE**

#### **Step 1**

- Remove the Gamester terminal door from the bottom of the Power Station.

#### **Step 2**

- Install the rechargeable battery pack into the Game Boy Advance.

#### **Step 3**

- Replace the original battery door with the Gamester terminal door as shown.



#### **Step 4**

- Place your Game Boy Advance into the Power Station.

#### **Step 5**

- A red light will appear on the Power Station which indicates that the unit is charging.

### **IMPORTANT:**

An initial charge of 14 hours is required.

To stop charging, the Power Station must be unplugged from the AC outlet.

## **AC-DC ADAPTER FOR GAME BOY ADVANCE POWER STATION**

### **Important Notice**

The Gamester AC-DC adapter has been specifically manufactured to power the Power Station from an AC outlet as specified in the rating box shown below. The adapter must not be altered, opened or modified in any way or used for any other purpose.

**Not for use with the Game Boy Classic,  
Pocket or Color.**

<b>RATING INPUT -</b>	120V ~ 60Hz A.C. only
<b>OUTPUT -</b>	6V --- 200 mA

FOR INDOOR USE ONLY

The AC adapter should be periodically checked for any external damage. Particular attention should be given to the condition of the cables, the adapter housing and the pins. Should any fault be found the adapter should not be used until professionally repaired or a replacement obtained.

The AC adapter may become warm during use. This is normal.

## **GAMESTER RECHARGEABLE BATTERY PACK**

### **Important**

Do not dispose of batteries in household waste.

You can return your old batteries to the official collection points in your local area.

### **MAINTENANCE**

- Handle this product carefully.
- Store this product away from dusty or dirty areas.
- Keep this product away from moisture or extreme temperature.
- Do not disassemble this product. If a problem occurs, consult your warranty card for replacement instructions.

**Please retain this for future reference.**

**RADICA:**



RADICA:®  
GAMESTER™  
POWER STATION AND "THE UNFAIR ADVANTAGE" ARE  
TRADEMARKS OF RADICA CHINA LTD.  
© 2001 RADICA CHINA LTD.  
PRODUCT SHAPE™  
ALL RIGHTS RESERVED

GAME BOY ADVANCE IS A REGISTERED TRADEMARK  
OF NINTENDO OF AMERICA LTD.

THIS IS A RADICA PRODUCT AND IS NOT ENDORSED,  
MANUFACTURED OR DISTRIBUTED BY NINTENDO CO.  
LTD.

E

**GAMESTER**

**power station™**  
NiMH Battery



**INSTRUCTION MANUAL**

**MODEL RC71084**

**For 1 player / Ages 8 and up**

**P/N 82361300 Rev.B**