



myphotobooth™




Model 74040  
For 1 User / Ages 8 and up  
**INSTRUCTION MANUAL**  
P/N 82384800 Rev.A

Now you and your friends can experience the thrill of a real photo booth in your own bedroom. You can get together, have fun and take silly poses with your friends at slumber parties or playing around after school. It is easy, turn the flash on, pull the lever down, strike a pose and you have an instant picture. My Photo Booth™ - instant poses, instant pictures!

### BATTERY INSTALLATION:

 My Photo Booth™ is powered by four (4) “AA” batteries. My Photo Booth™ has two battery compartment doors, one for the flash and one for the timer.

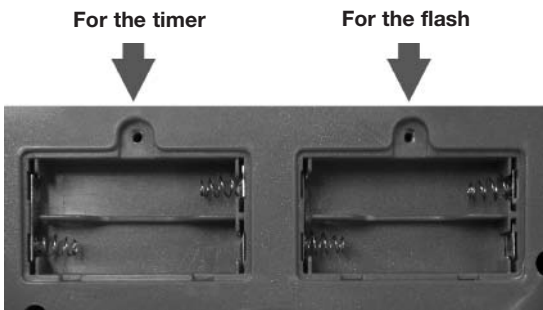

- Using a screwdriver, loosen the screw until the battery compartment door on the back of the product can be removed.
- Insert two (2) “AA” batteries (we recommend alkaline) as indicated inside each battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

### ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

### CAUTION:

- As with all small batteries, the batteries used with this product should be kept away from small children who might still put things in their mouths. If a battery is swallowed, consult a physician immediately.
- Be sure you insert the battery correctly and always follow the product and battery manufacturer’s instructions.
- Do not dispose of batteries in fire.
- Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.
- Do not cut undeveloped film. Finished photos may be cut 20 minutes after being taken. Prior to development, this film contains an alkaline paste that neutralises as the photo develops. In the unlikely event that paste appears, avoid contact with skin, eyes or mouth. If skin contact occurs, wipe off immediately and wash with plenty of water. If eye or mouth contact occurs, flush area continually with plenty of water and consult a doctor. Keep discarded materials away from small children and animals.

### To avoid the paste coming out of the film:

- Never remove unexposed film from its light proof container.
- Never cut or play with the portion of the film between the pictures.
- Never place any portion of the film or pictures in your mouth.
- When cutting photos, cut only on the designated lines and immediately discard the ends. Handle the portions that are cut off only by the tabs on the ends of the film.

### If paste appears on the film or camera during use:

 
- Avoid contact and keep the paste away from other people and animals.
- If the paste is on the camera, do not attempt to put another film cartridge in it.
- Discontinue use and call the Radica Help Line at 1-800-803-9611 (US) or 0871 222 8278 (UK) for handling and cleaning instructions.

E

### If you get paste on you:

- If you get paste on your skin, wash it off quickly with plenty of water.
- If you get paste in your eyes, flush with plenty of water and consult a doctor.
- If you get paste in your mouth, rinse with plenty of water.

### MY PHOTO BOOTH™ BUTTON FEATURES

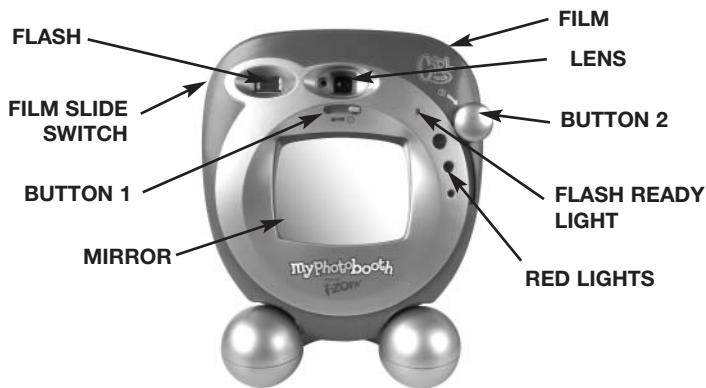

### USING MY PHOTO BOOTH™

My Photo Booth™ works with Polaroid™ Instant i-zone™ film that can be purchased at any major retailer. You can use any of i-zone's film including Pocket Film, Pocket Sticker Film and Pocket Fortune Film. To see more details about the film, visit [www.i-zone.com](http://www.i-zone.com).

### LOADING FILM

 
1. Slide the button located on the left-hand side of the product to the right.



2. Load film and slide film through the slot.



3. Close the door and make sure it's closed.
4. Pull tab straight and firmly until it is released.

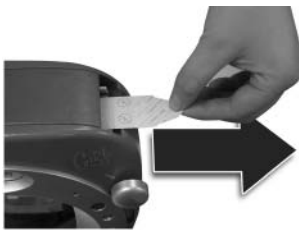

### TAKING PICTURES

5. My Photo Booth moves forward or backwards for the perfect pose. Select a position, look into the mirror and follow the below steps for taking a picture.



 
6. Slide button 1 to the left. Before going to step 7, make sure the flashlight is on.
7. Pull button 2 down to the bottom.



8. Finally, the red light flashes a few time, then the camera flash is triggered and there is a click sound. Please note: it takes a few seconds once you press the lever down before it will flash. Just keep posing and smile!



9. Pull the film out STRAIGHT for an instant picture.

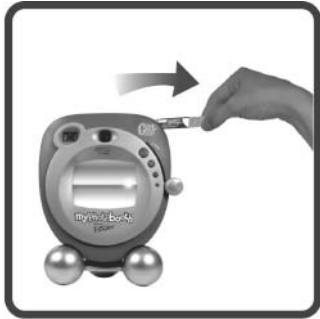

**Please note: For best results, place the film on a flat surface and wait up to two minutes for it to develop.**

**TROUBLESHOOTING**

If you pull Button 1 and it takes a long time for the flash ready light to come on. Change the flash ready light batteries. These batteries will need to be changed more often than the timer batteries.

If the film included with this product does not develop properly, do not contact Polaroid Corporation. For assistance, call Radica Product Support at 1-800-803-9611 (US) or 0871 222 8278 (UK).

**MAINTENANCE:**

- Handle this product carefully.
- Store this product away from dusty or dirty areas.
- Keep this product away from moisture or extreme temperature.
- Do not disassemble this product. If a problem occurs, remove and replace the batteries to reset the computer or try new batteries. If problems persist, consult the Warranty information located at the end of this Instruction Manual.
- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from this product.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

**FILM CAUTION:**

This process uses a caustic paste. If any paste appears, avoid contact with skin, eyes and mouth and keep away from children and animals. If you get some paste on your skin, wipe it off immediately and wash with water to avoid an alkali burn. If eye or mouth contact occurs, quickly wash the area with plenty of water and see a doctor.

**Please retain this for future reference.**

**FOR UNITED STATES**

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

**90-DAY LIMITED WARRANTY**

**(This product warranty is valid in the United States and Canada only)**

Radica Games Limited warrants this product for a period of 90 days from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 90-day warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: **Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA.** Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

**IMPORTANT:** Before returning the unit for repair, test it with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

**FOR UNITED KINGDOM**

**PRODUCT WARRANTY**

**(This product warranty is valid in the United Kingdom only)**

All products in the RADICA® range are fully guaranteed for a period of 6 months from the original purchase date under normal use, against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

In the unlikely event that you do experience a problem within the first 6 months, please telephone the UK Technical Support team: **Tel. 0871 222 8278. Calls are charged at 10p per minute and will show up on your standard telephone bill. Helpline hours are 2pm-11pm, Monday to Friday.**

**IMPORTANT:** Always test the product with fresh alkaline batteries. Even new batteries may be defective or weak and low battery power is a frequent cause of unsatisfactory operation.

**YOUR STATUTORY RIGHTS ARE NOT EFFECTED.**

Distributed in the U.S. by:  
**RADICA U.S. Ltd.**  
13628-A Beta Road  
Dallas, TX 75244-4510



Distributed in the U.K. by:  
**RADICA U.K. Ltd.**  
The Old Stables, Munns Farm,  
Cole Green, Hertfordshire,  
SG14 2NL, England



**RADICA:®**  
**GIRL TECH®**  
MY PHOTO BOOTH IS A TRADEMARK  
OF RADICA GAMES LTD.  
© 2004 RADICA GAMES LTD.  
PRODUCT SHAPE™  
ALL RIGHTS RESERVED

POLAROID® AND POLAROID I-ZONE® ARE REGISTERED  
TRADEMARKS OF POLAROID CORPORATION.  
ALL RIGHTS RESERVED.