

Fisher-Price®

STAR STATION™

ENTERTAINMENT SYSTEM

On-the-Go Microphone™

Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AAA" (LR03) alkaline batteries (not included).

Adult assembly is required for battery installation.

Tool required for battery installation:
Phillips screwdriver (not included).




Featuring hit music from

**KIDZ
BOP**

Today's most popular songs
sung by kids for kids™

www.fisher-price.com

Battery Installation

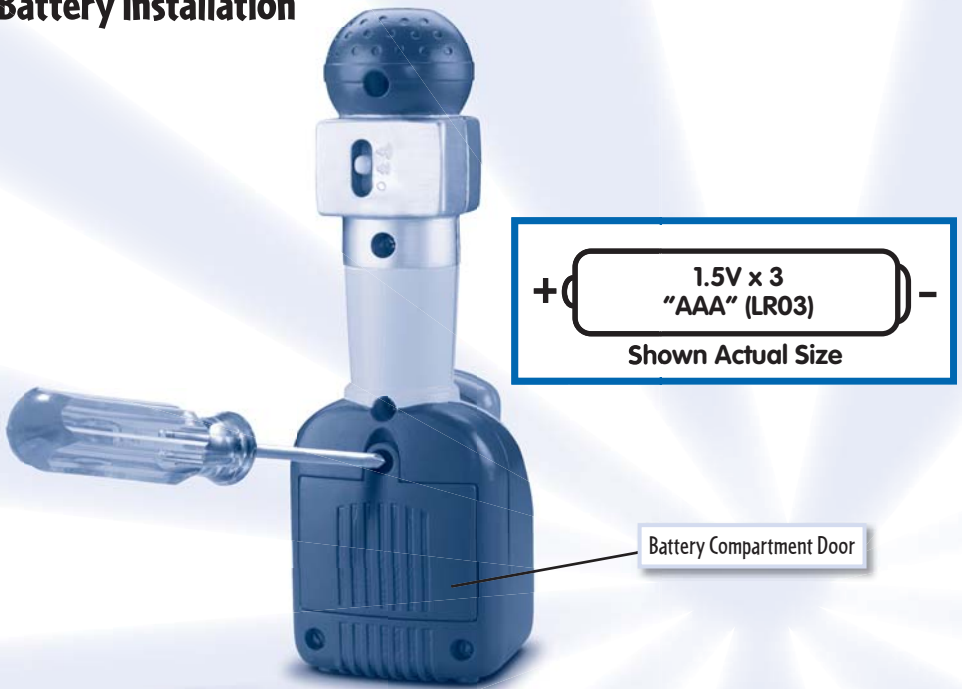

- Locate the battery compartment on the back of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "AAA" (LR03) **alkaline** batteries, as indicated inside the battery compartment.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When sounds become faint or stop, it's time for an adult to change the batteries!



Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of the product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

FCC Statement (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.



Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.




Take the Show on the Road!

- Insert the ROM cartridge into the slot in the microphone.



- Locate the voice volume switch on the back of the toy.
- Slide the voice volume switch on the back of the toy to either on with low volume  or on with high volume .

Hints:

- This switch controls the volume of your voice. Set to the off position  to listen to music only.
- If you hear feedback or distortion, slide the voice volume switch to low volume.



© & © 2005 Razor & Tie Direct, L.L.C. "Kidz Bop," "Razor & Tie" and the Razor & Tie Logo are registered trademarks of Razor & Tie Direct, L.L.C. and "Kid Friendly," "Kidz Bop Kids" and "Sung By Kids For Kids" are trademarks of Razor & Tie Direct, L.L.C.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2005 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

- Rotate the power/volume dial to turn the microphone on.

Hint: This dial controls the volume of the music. Turn the dial off when you are finished playing with this toy.



- Press the play/pause button to start the music and start singing. Press again to pause.
- Press the track forward button to move ahead to the next song on the ROM cartridge.
- Use the volume/power dial to adjust the music volume.

Hint: You can also sing without music by removing the ROM cartridge.





Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this product.
- This toy has no consumer serviceable parts. Do not take this product apart.

Consumer Information

Visit us on-line at www.service.fisher-price.com.

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

For countries outside the United States:

CANADA: 1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2;
www.service.fisher-price.com.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303;
www.service.mattel.com/UK.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

