 


BATTERY REPLACEMENT

Batteries included are for demonstration purposes only. Requires 3 AAA (LR03) alkaline batteries.

Toy uses 3 replaceable AAA (LR03) alkaline batteries. *When the screen flickers or becomes dim, change the batteries.* To replace batteries, use a Phillips head screwdriver (not included) to open battery door. Remove and set aside. Insert 3 replaceable AAA or LR03 alkaline batteries as shown. Use either AAA or LR03 alkaline batteries or equivalent. Replace battery cover and screw closed.

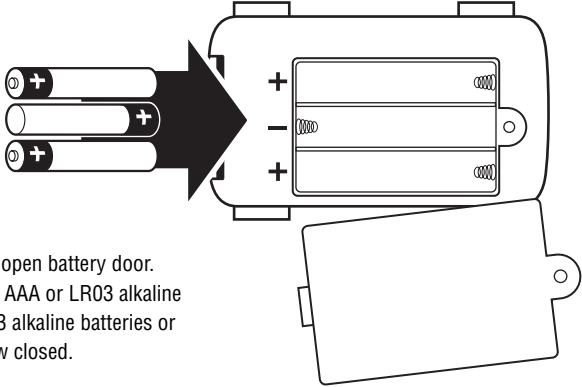

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CET APPAREIL NUMERIQUE DE LA CLASSE B EST CONFORME A LA NORME NMB-003 DU CANADA. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by consulting the dealer or an experienced radio/TV technician for help.

Mattel Inc.  
333 Continental Blvd.  
El Segundo, CA  
(310) 252-2000

We want you to have fun playing with our products.

Please give us your feedback by filling out the short on-line survey. Go to:  
<https://www.secure.mattel.com/elisten/surveys/J6746/J6746.html>

Thanks for helping us make great toys even better!

CONSUMER INFORMATION

**Need Assistance?** In the US and Canada, [service.mattel.com](http://service.mattel.com) \* or 1-800-524-8697, M-F 8AM – 6PM, ET.  
\*Website in English language only

[SERVICE.MATTEL.COM](http://SERVICE.MATTEL.COM)

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697.  
**Mattel U.K., Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303. [www.service.mattel.com/uk](http://www.service.mattel.com/uk)**  
Mattel Australia Pty., Ltd., Richmond, Victoria 3121. Consumer Advisory Service 1300 135 312 (valid only in Australia).  
Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.  
Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd,(993532-P) Lot 13.5, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410



 
INSTRUCTIONS

6+


J8324-0920G1  
J8325  
J8326  
J6746 ASST

CONTENTS


J8324\*

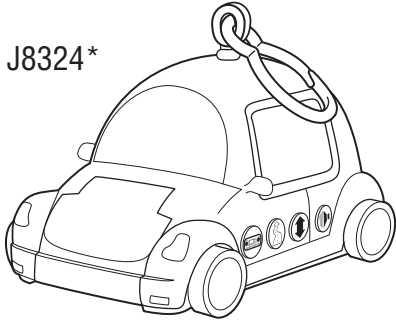

J8325\*

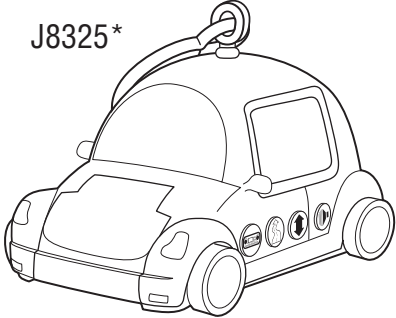 

J8326\*

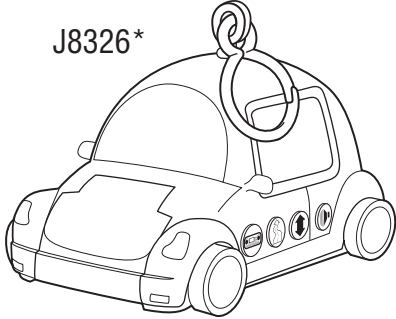 

\*Each sold separately, subject to availability.

Please remove everything from the package and compare to the contents shown here. If any items are missing, please call 1-800-524-8697.

*Keep these instructions for future reference as they contain important information.*

©2005 Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. All Rights Reserved.

4 Rear

1 Cover

GO AHEAD AND PUSH MY BUTTONS!



**RADIO**  
Press the radio button to change the tunes.



 
**DESTINATIONS**  
Change where your Pixel Chix™ friend goes.




**WINDOWS**  
Make the window go up and down, and change what happens.




**SOUNDS**  
Press for different car sounds.

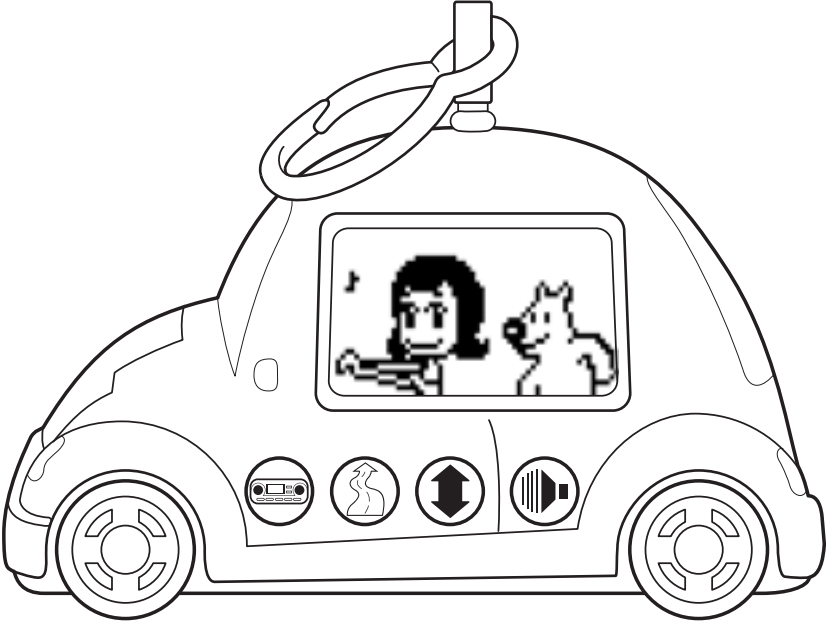

 FOR EVEN MORE FUN, CONNECT CAR TO HOUSE!

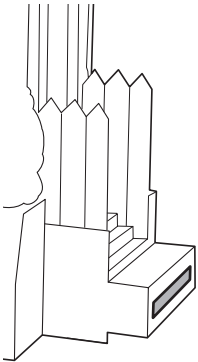

 Pixel Chix™ house sold separately, subject to availability.

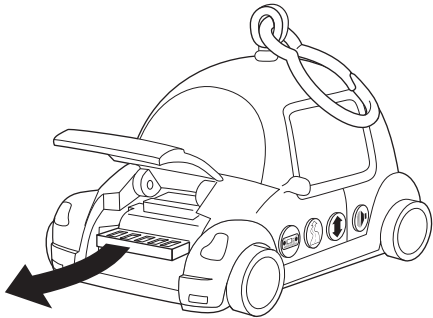

1. Connect car into any Pixel Chix™ house.
2. Your Pixel Chix™ friend goes from house to car.
3. Play with your Pixel Chix™ friend riding in the car.

 
CONNECT CAR TO 2 HOUSES, AND 2 FRIENDS RIDE IN THE CAR!



Pixel Chix™ houses sold separately, subject to availability.

1. Connect 2 houses together and then connect the car to the house at the end.
2. Two Pixel Chix™ friends\* go from the houses to the car.
3. Play with your 2 Pixel Chix™ friends riding in the car.

\*Hair color of the girl may different from the girl in the house.

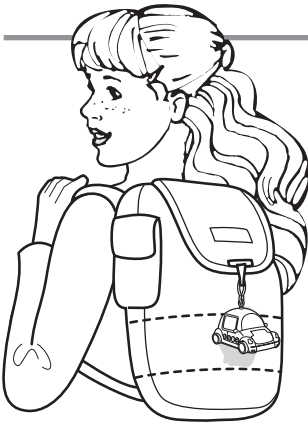

**Take your Pixel Chix™ Car with you.**  
The car clips onto your backpack or purse.

TROUBLESHOOTING

**SLEEP MODE begins after 2 minutes of inactivity.**

TRY ME PULL TAB

The pull tab in the Try Me slot should be automatically removed when toy is taken out of the package. If not, simply remove the pull tab before playing.

RESET BUTTON

If the game goes black or crashes, use the RESET button to start over. Ask an adult to insert a metal tip, such as a bent paper clip, into the hole.

When exposed to an electrostatic source, the product may malfunction. Reset the product if this occurs.

