

 


INSTRUCTIONS

THUNDER LAUNCHER™ PLAYSET

Please keep these instructions for future reference as they contain important information.

CONTENTS

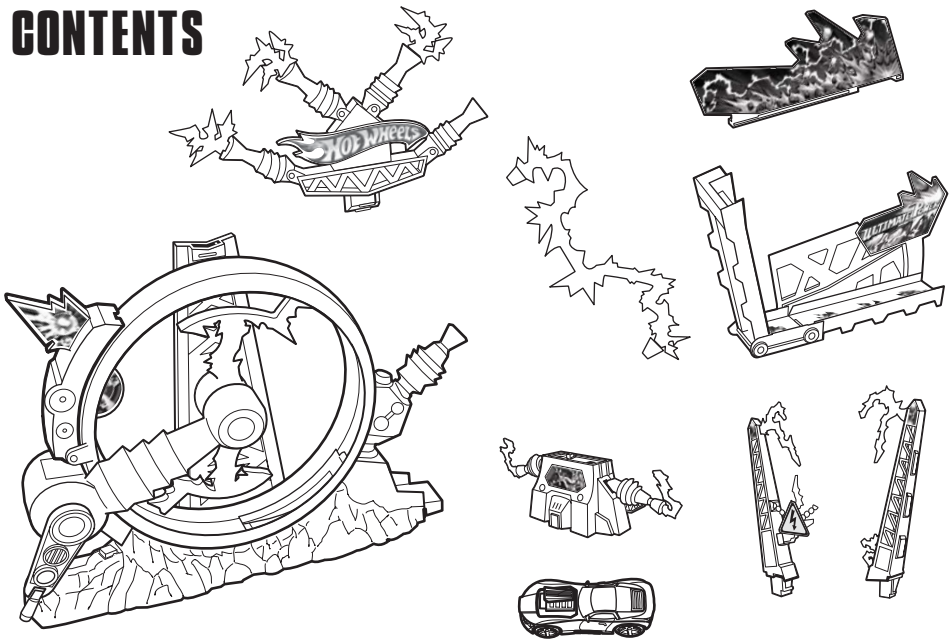

3 X "AA"

Playset requires 3 "AA" (LR6) alkaline batteries (not included).
Car requires 3 button cell (AG13, LR44) batteries.
Batteries included are for demonstration purposes only.

4+

L6871-0920G1

 


© 2007 Mattel, Inc. All Rights Reserved. Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Relations
1 (800) 524-8697 service.mattel.com • Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697.
• Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303 • Mattel Australia Pty Ltd., Richmond,
Victoria. 3121. Consumer Advisory Service - 1300 135 312. • Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China. • Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, Menara Lien Hoe,
Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.

BATTERY INSTALLATION / REPLACEMENT



PLAYSET

Open the battery cover with a Phillips head screwdriver (not included). Remove batteries included for demonstration purposes only and dispose of them safely. Insert 3 new “AA” (LR6) alkaline batteries in the orientation shown. Replace the battery cover and tighten screw. Change the batteries if the product does not function properly or if the sounds are garbled or play slowly. For best performance use only alkaline batteries.

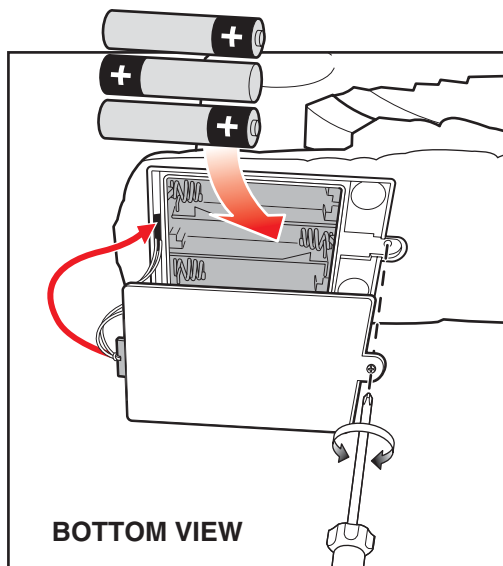

RUMBLERS™ CAR

  - Unscrew the battery cover with a Phillips head screwdriver (not included).
- Remove batteries included for demonstration purposes only and dispose of them safely. Install 3 new button-cell (AG13, LR44) batteries in the orientation (+/-) shown. For best performance, use only alkaline batteries.
- Replace battery cover and tighten screw.
- Replace the batteries if movement slows or lights dim.

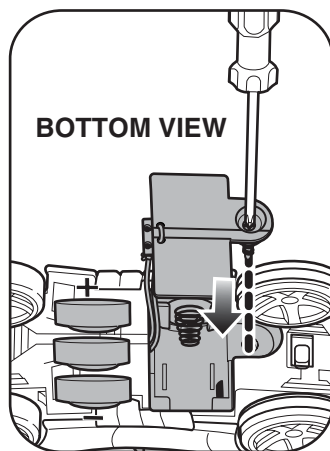



RECYCLE INFORMATION (USA ONLY)

Please recycle button cell battery(ies) contained in this product by:

- Visiting your nearest recycling center. For location of the nearest recycling center, visit us online at www.service.mattel.com.
- If a recycling center is not available in your area, contact us for a pre-paid mailing label. Visit us online at www.service.mattel.com or call toll-free at 1-800-524-8697.
- Valid in the US only.

ASSEMBLY

  1

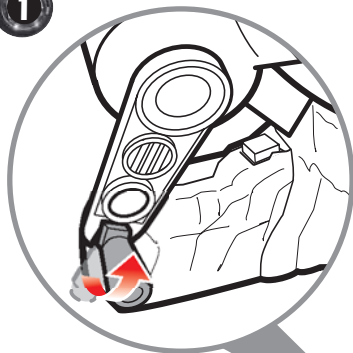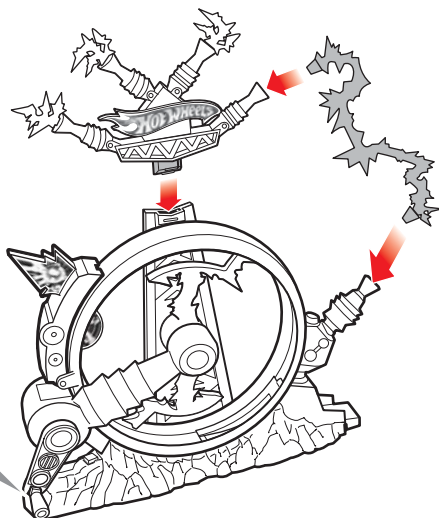


3




4

 
2

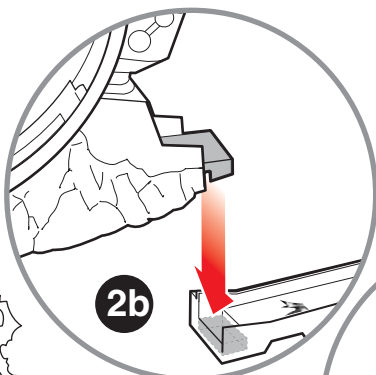

2b



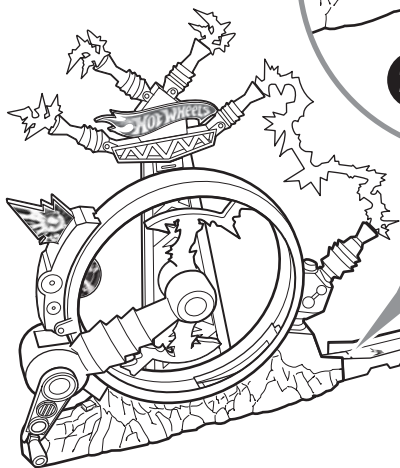 


4b


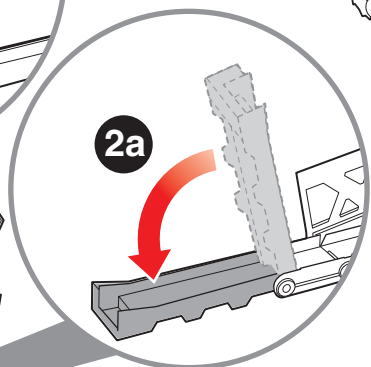 


2a

   
3

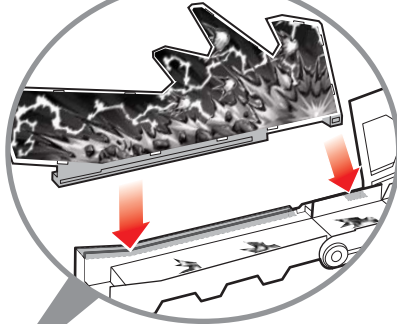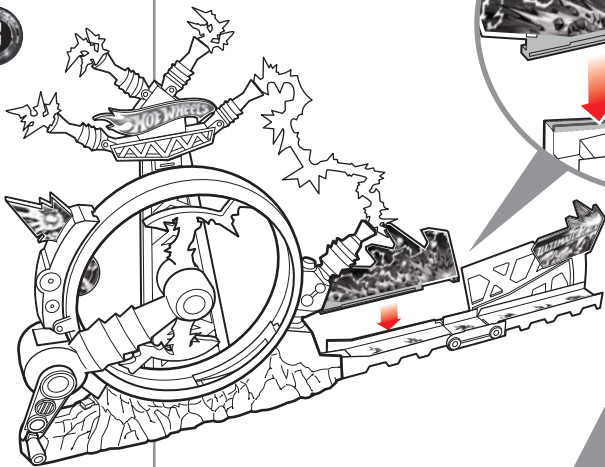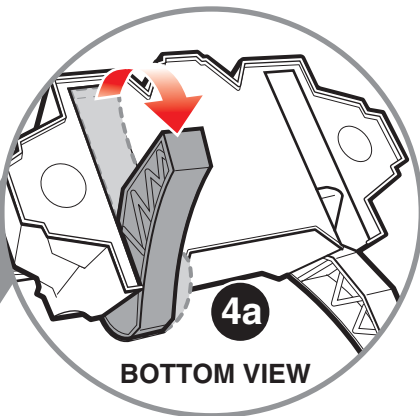

4

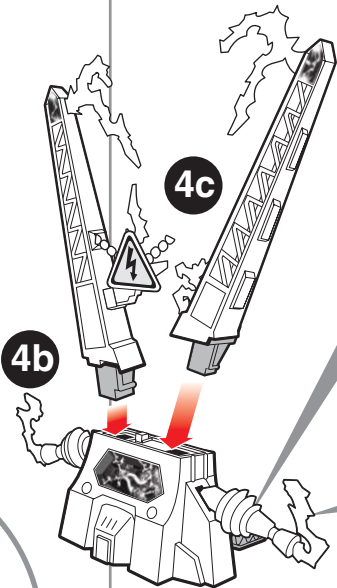 
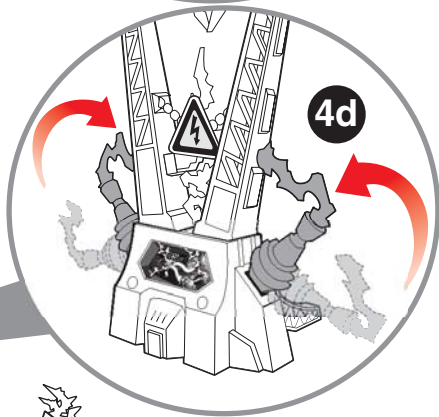 


FINAL ASSEMBLY

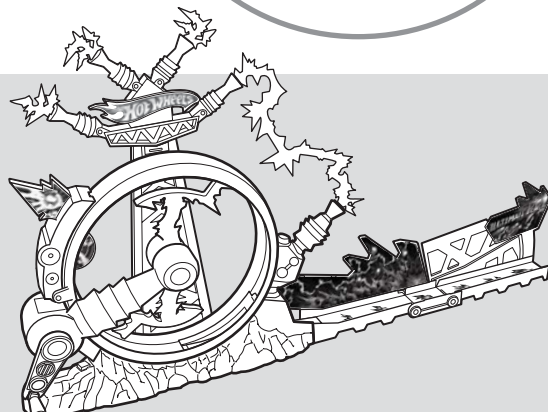 

GET READY TO PLAY



 
 
- 1** The crank handle is adjustable for use by either the right or left hand.

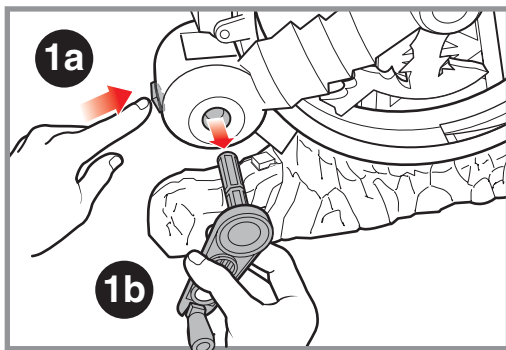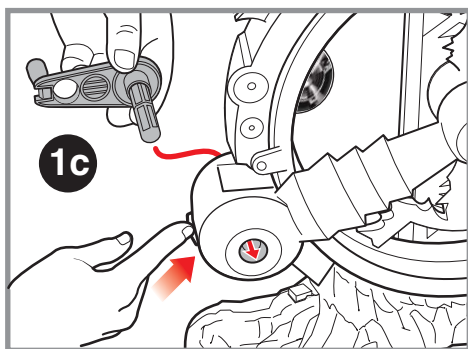

2

The ramp is adjustable.

    I=ON / O = OFF

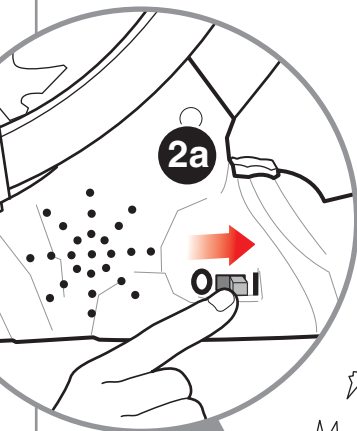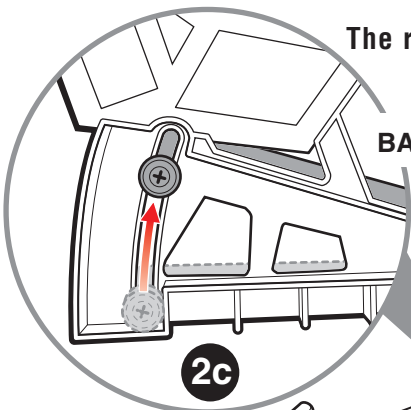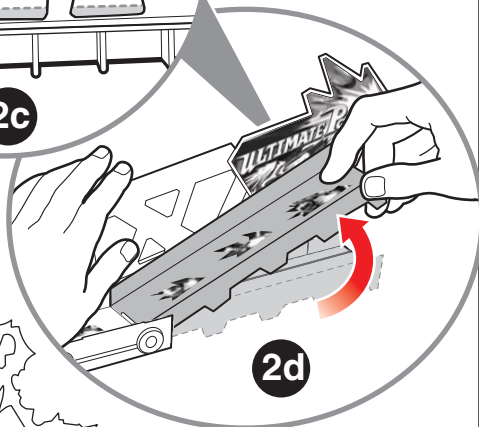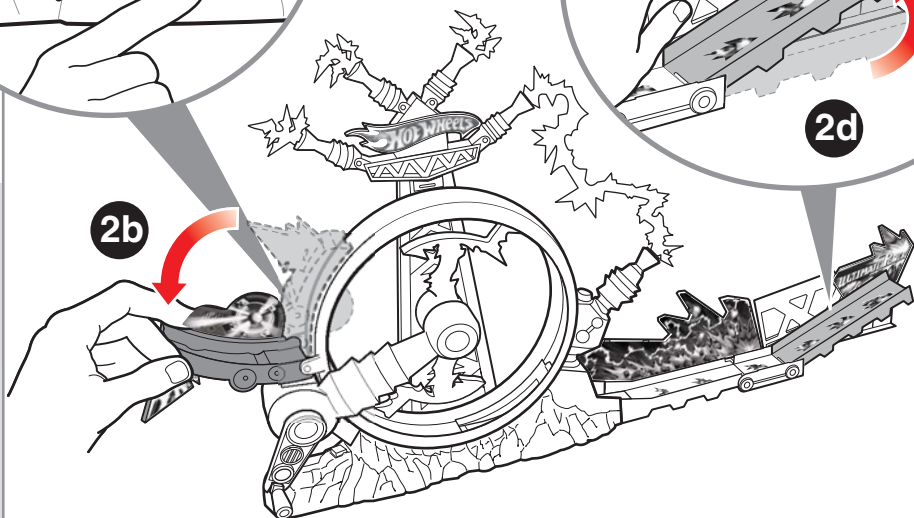

TO PLAY

4

 
 
1



Move the selection switch to activate vibrating engine with lights and sounds.




Move the selection switch to activate lights and sounds ONLY.

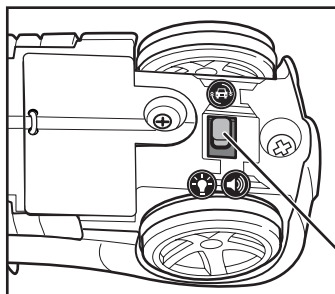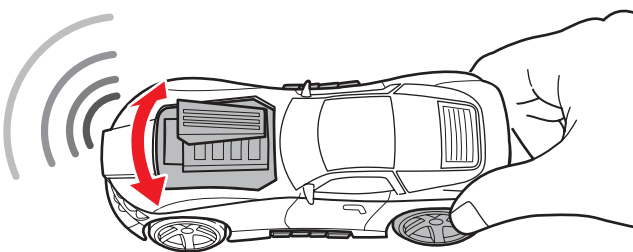

SELECTION SWITCH


2

 Load your cars into the Thunder Launcher™ playset and attempt to blast through the tower. Adjust the ramp to make sure you get a direct hit!

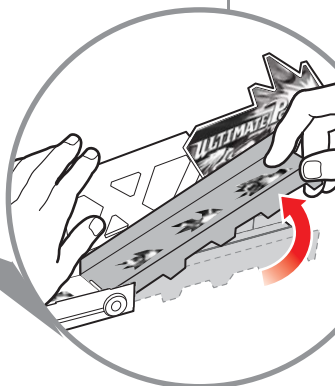

3

 Press down on the car to activate then push the car forward.

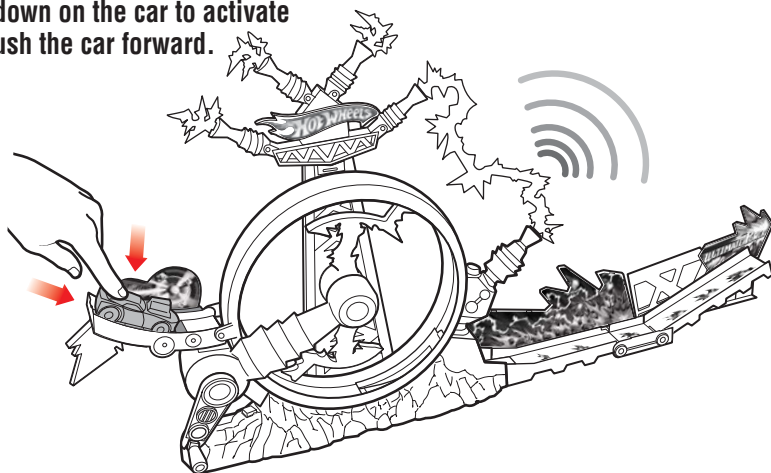

5

 
 
This equipment is designed to provide real-world experience and, if not used properly, may cause interference with other equipment. To determine if this is the case, consult the following:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment.
- Connect the equipment to a different power outlet.
- Consult the dealer or a qualified technician for assistance.

NOTE: Changes to this equipment may void the warranty.


4

Push the handle up to enter the lightning chamber.

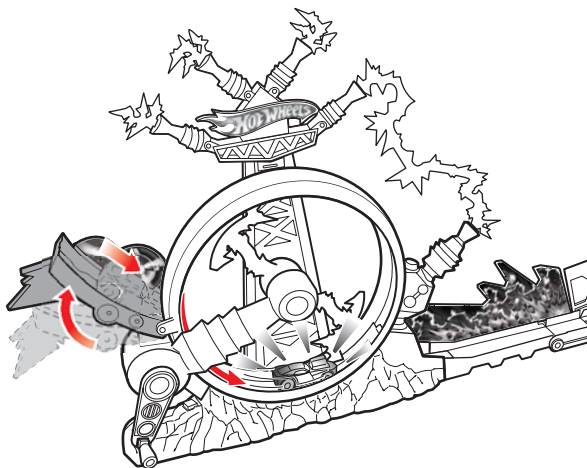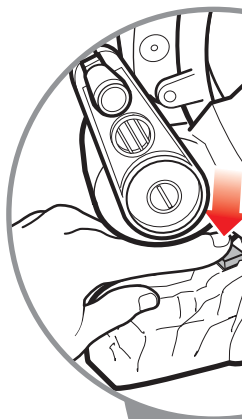

5

 Rotate the crank handle to build up your juice.

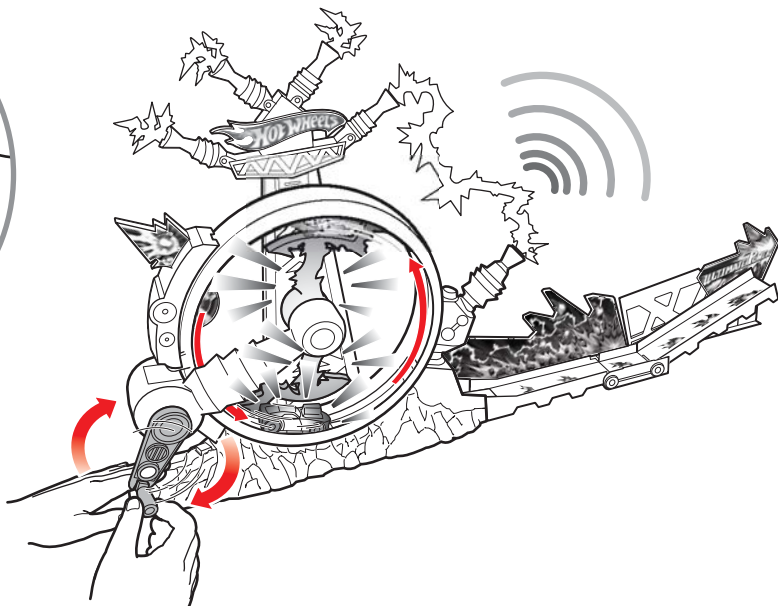




This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.



   Keep rotating the crank handle (6a) then push the button (6b) to blast out and make the tower explode!

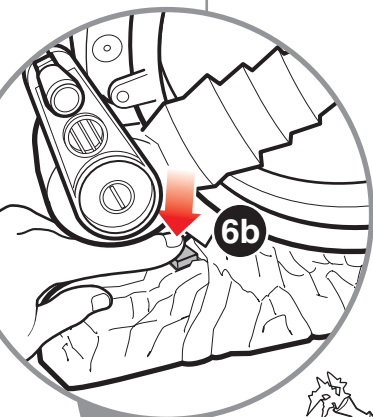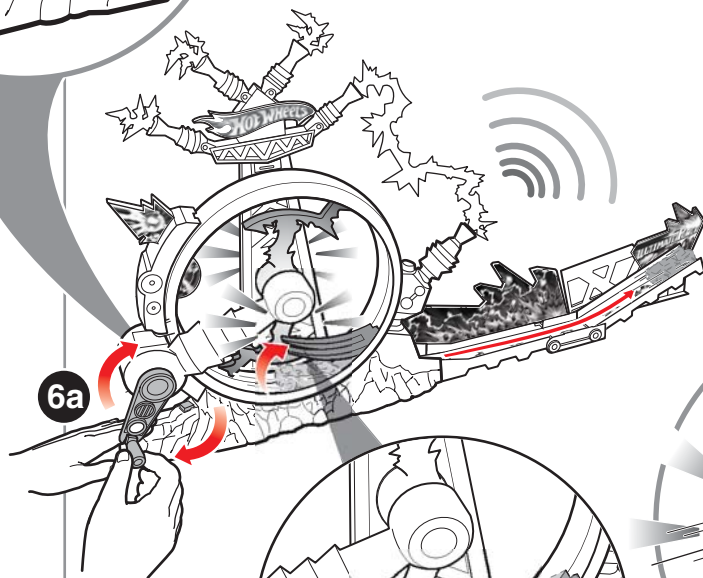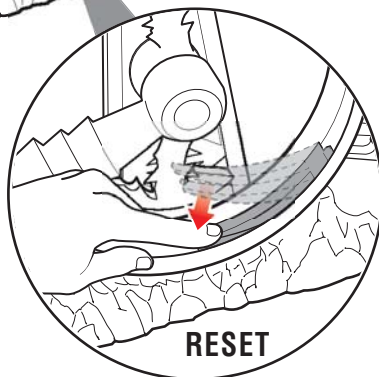

RESET



. These limits are designed
radiate radio frequency energy
or, there is no guarantee that
on, which can be
following measures:

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.

- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste [2002/96/EC]. Check your local authority for recycling advice and facilities.