



TETRIS®

big screen



N0494

For 1 player / Ages 8 and up

INSTRUCTION MANUAL


P/N 823C5300 Rev.C

E

HOW TO PLAY

The object of the game is to rotate and move the falling Tetriminos to complete full horizontal lines. Once a line has been filled, that line will disappear.

BUTTONS

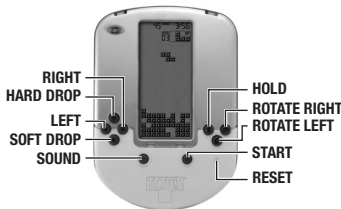

HARD DROP ⬇

GAME - HARD DROP (instantly drop the Tetrimino to the bottom).

LEFT ⬅

GAME - Move Tetrimino to the LEFT.
MENU- Decrease the SKILL LEVEL.

RIGHT ➡

GAME - Move Tetrimino to the RIGHT.
MENU - Increase the SKILL LEVEL.

SOFT DROP ⬇

GAME - SOFT DROP (Increase drop speed).
MENU - Select the GAME.

ROTATE COUNTER CLOCKWISE ↺

GAME - Rotate Tetrimino Counter Clockwise.
MENU- Toggle game OPTIONS.

ROTATE CLOCKWISE ↻

GAME - Rotate Tetrimino Clockwise.
MENU - Toggle game OPTIONS.

HOLD ⬇

GAME - Hold places the Tetrimino into the Hold queue.

START ⏸

GAME - PAUSE a game.
MENU - START game with current settings.
POWER - Turn unit ON.

SOUND - Turn sound ON/OFF.

RESET - Reset the game to its original settings. Use a small blunt object to press the reset button. This will erase all previous scores.

FEATURES

FOUR GAME MODES – MARATHON TETRIS, DIGG TETRIS, SPEED TETRIS AND ULTRA TETRIS.

SLEEP MODE - After 1 minute of inactivity, the game will shut down. Press the ⏸ button to turn unit back ON.

AUTO BACK LIGHT – This unit is equipped with a sensor that will automatically illuminate the screen, if your lighting conditions become dim.

BATTERY INSTALLATION / REPLACEMENT

This game is powered by two (2) AA (LR6) batteries.

- Using a screwdriver (not included), loosen the screw until the battery compartment door can be removed.
- Insert two (2) AA (LR6) batteries as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

- Batteries included are for demonstration purposes only.
- For longer life use only alkaline batteries.
- Replace the batteries when the product does not function properly.
- Remove batteries and dispose of them safely.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage;

- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.

- Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

CAUTION

- **Sometimes, a build-up of static electricity (from carpets, etc) may cause the game to stop working. Just reset the game, and it will work again.**
- **In an environment with radio frequency interference, the product may malfunction and require user to reset the product.**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are

designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Keep these instructions for future reference as they contain important information.

For product sold in Canada • Pour les produits vendus au Canada

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

(VALID FOR CANADA ONLY • VALABLE AU CANADA SEULEMENT)

Operation is subject to the following two conditions :

- (1) this device may not cause interference, and (2) this device must including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :

- (1) Il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Hereby, Mattel declares that this toy is in compliance with the essential requirements and other relevant provisions of Directives 2004/108/EC, 88/378/EEC. Suitable for use in all EU member states. A copy of the Declaration of Conformity may be obtained from Mattel UK Ltd.



Tetris® & © 1985~2008 Tetris Holding, LLC.
Licensed to The Tetris Company.
Game Design by Alexey Pajitnov.
Logo Design by Roger Dean.
All Rights Reserved.
www.tetris.com

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1.800.803.9611 (US and Canada only), M-F 9AM - 7PM & SAT 11AM - 5PM, Eastern.

SERVICE.MATTEL.COM



CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

© 2009 Mattel, Inc. All Rights Reserved.

RADICA USA Ltd., 16650 Westgrove Dr., Suite 500, Addison, TX 75001. www.radicagames.com Helpline 1.800.803.9611 or service.mattel.com

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1.800.803.9611.

Retain this address for future reference: Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB, Helpline 01628 500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.

Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.

Mattel, Inc. 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1.800.803.9611.