

This is a battery-operated product.  
1 flyer (0000718496) is required to be placed inside the packaging.


Disney • PIXAR  
**TOY STORY**  
**BUZZ LIGHTYEAR DELUXE ACTION WING PACK** 4+

**INSTRUCTIONS**

Please keep these instructions for future reference as they contain important information.

THIS IS NOT A FLYING TOY.

**CONTENTS**

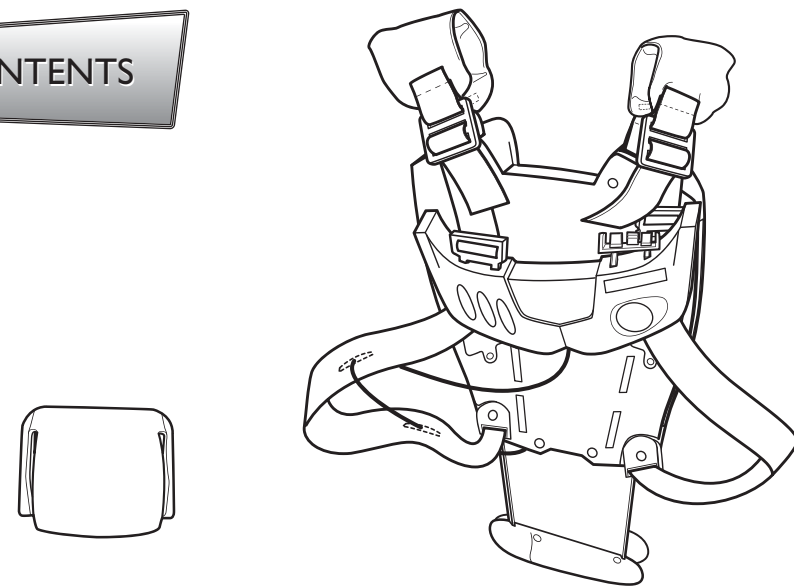

Mattel, Inc. All Rights Reserved.  
Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Dimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Linn Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867. Mattel, Inc. 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697.


© Disney/Pixar

service.mattel.com

P3296-0920



**BATTERY INSTALLATION**

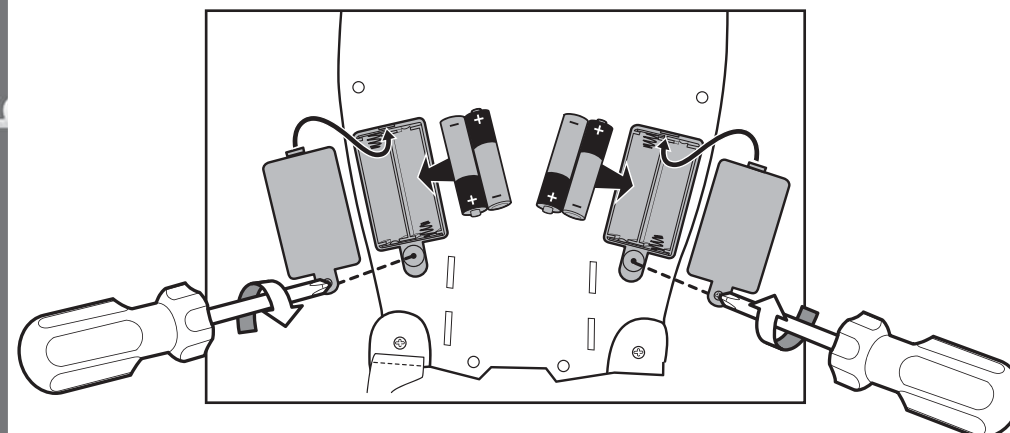

**ADULTS NOTE:** Batteries included are for demonstration purposes only

- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Install 4 "AA" (LR6) batteries in the orientation (+/-) shown (not included).
- Replace battery cover and tighten screw.
- For longer life use only alkaline batteries.
- Replace the batteries if sounds play slowly or lights dim.

**BATTERY SAFETY INFORMATION**


In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.




Protect the environment by not disposing of this product with household waste (2002/96/EC).  
Check your local authority for recycling advice and facilities.

**ASSEMBLY**

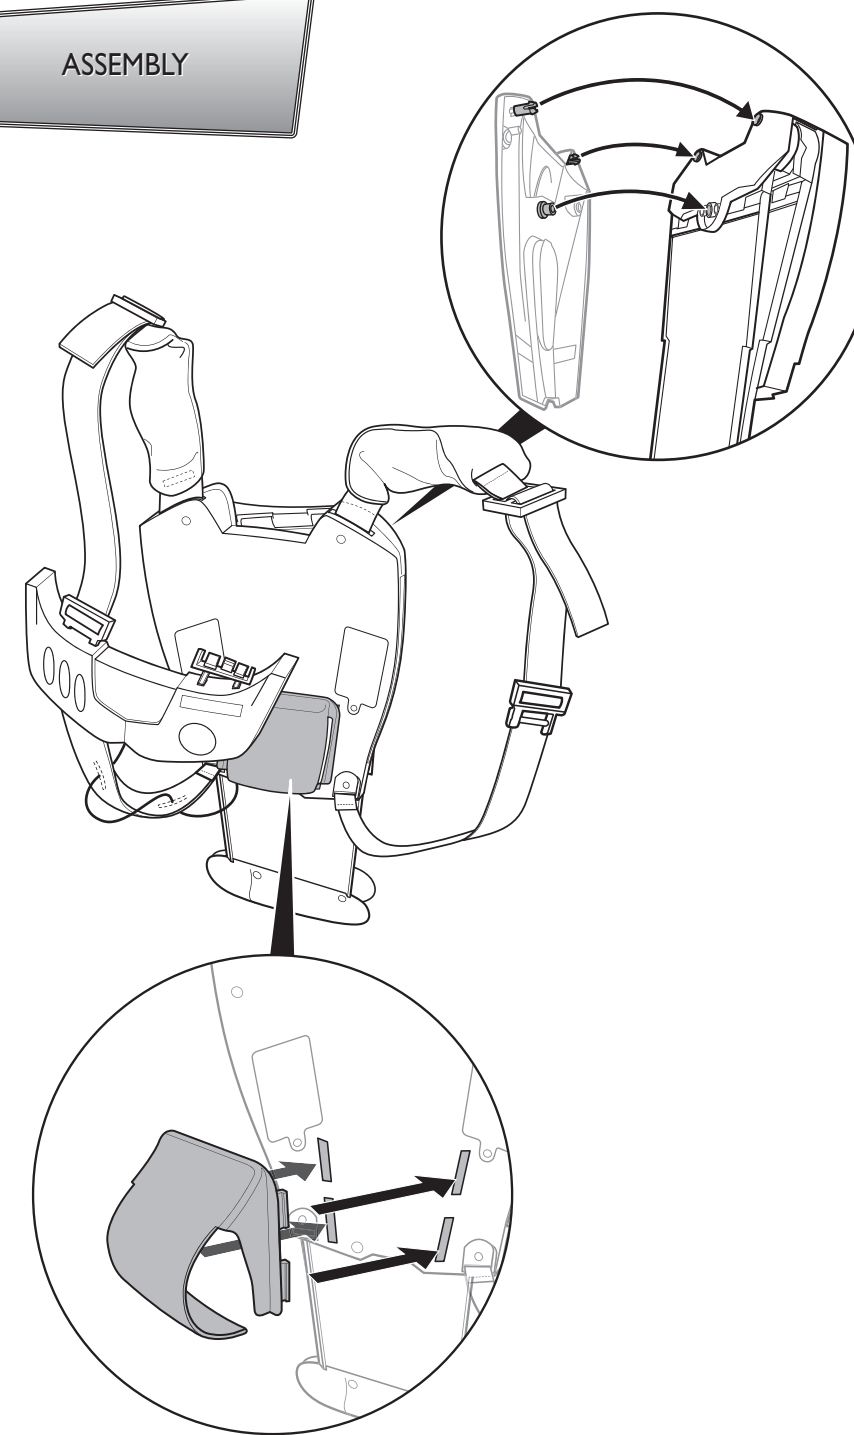

**TO PLAY**

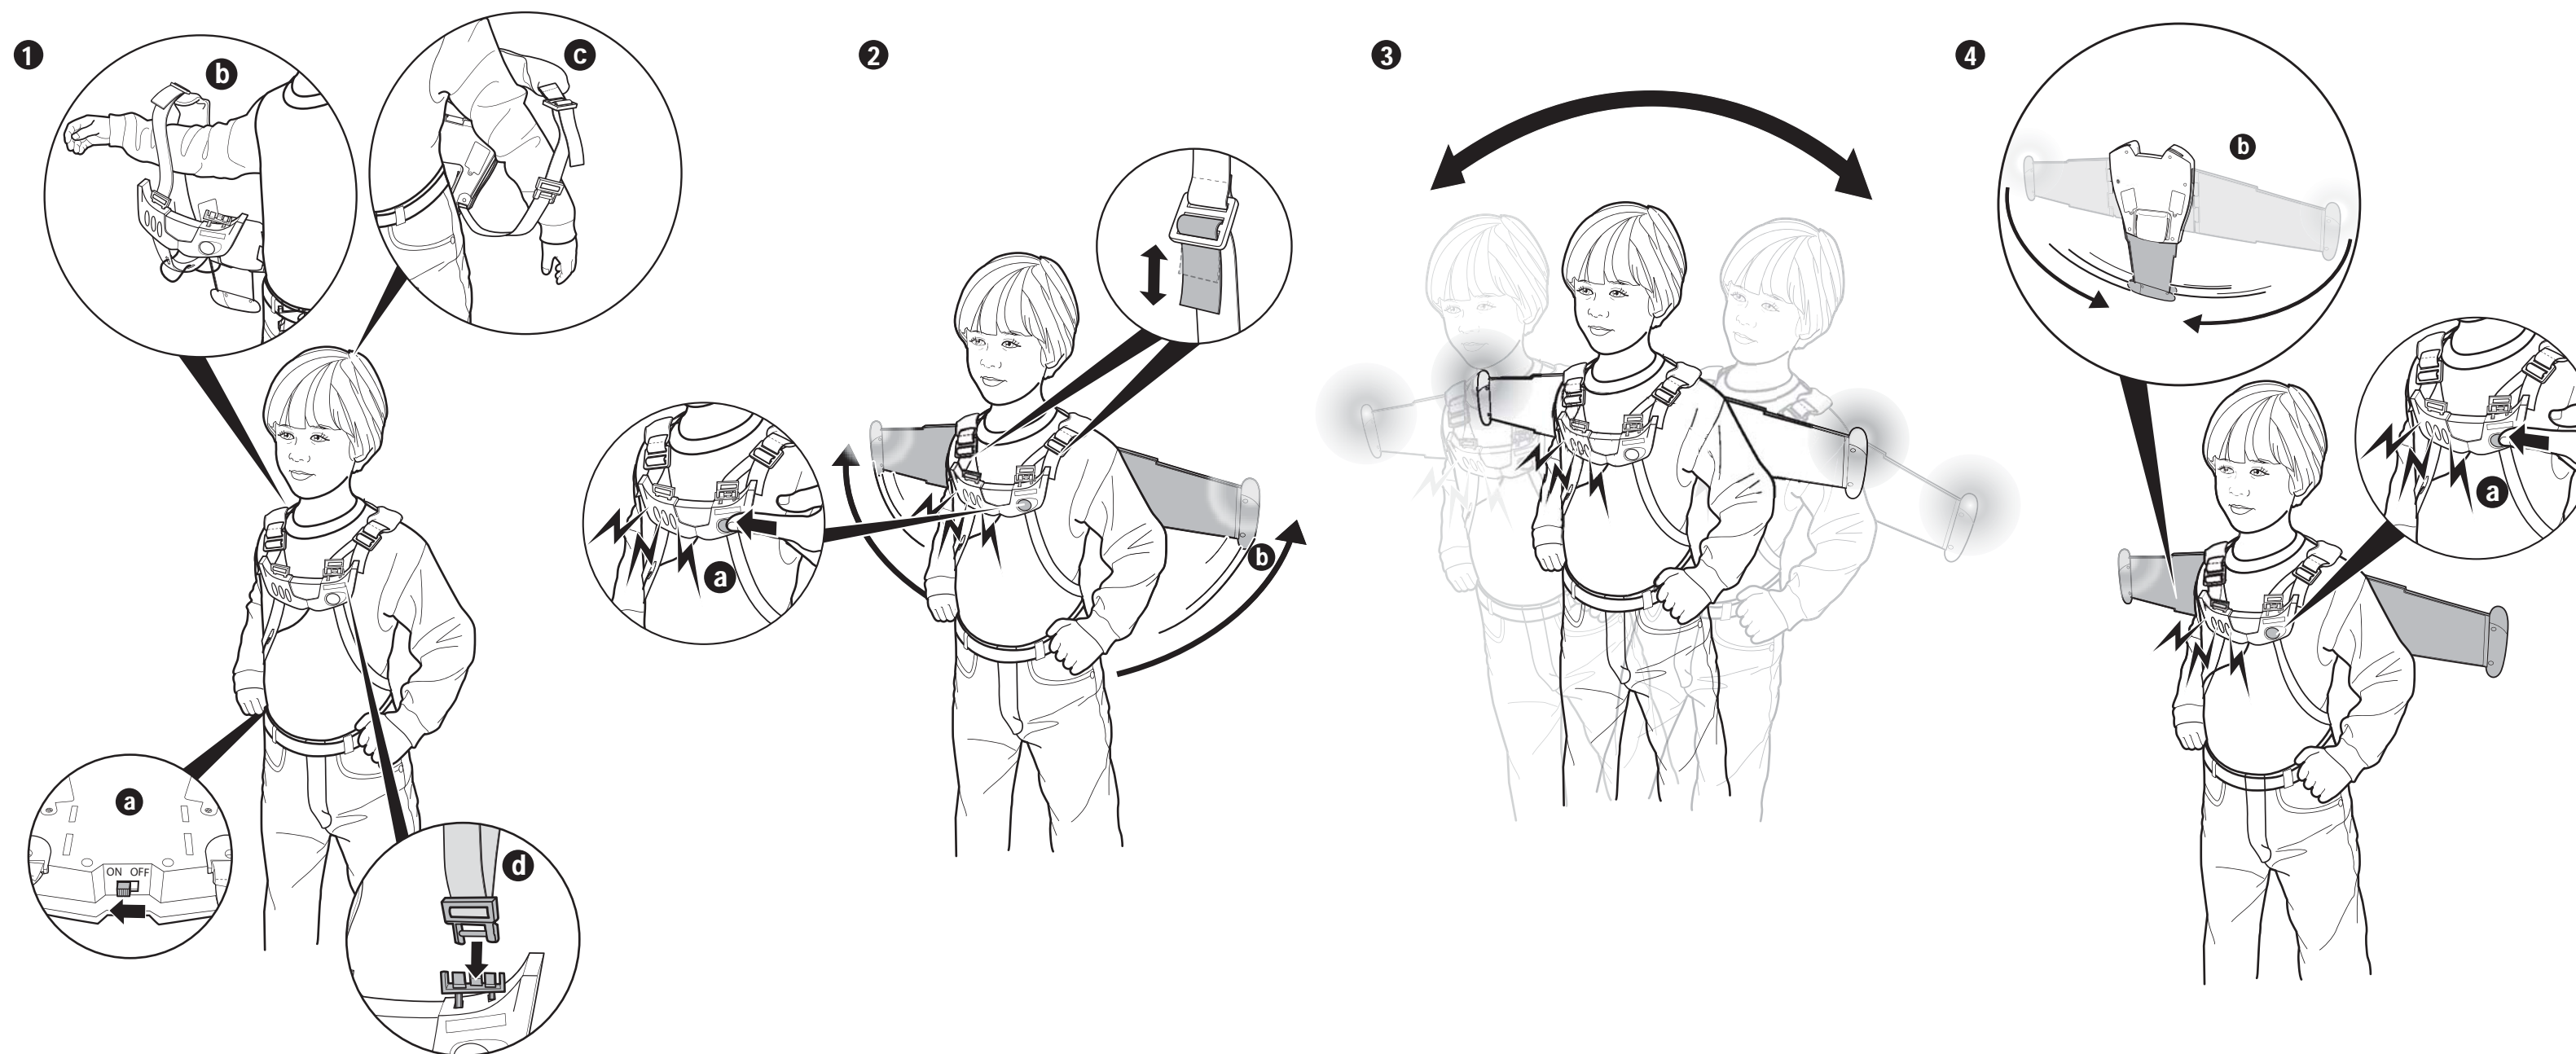

**INSTRUCTION SHEET SPECIFICATIONS**

Toy: TS BASIC BUZZ WING PACK  
Toy No.: P3296  
Part No.: 0920  
Trim Size: 17.55"x8.26"  
Folded Size: \_\_\_\_\_  
Type of Fold: \_\_\_\_\_  
# colors: One  
Colors: Black  
Paper Stock: White Offset  
Paper Weight: 70 lb.  
EDM No.: \_\_\_\_\_