 


This is a battery-operated product.  
1 flyer (00007-184966) is required  
to be placed inside the packaging.

### INSTRUCTION SHEET SPECIFICATIONS

Toy: DELUXE BUZZ  
Toy No.: R0354  
Part No.: 0920  
Trim Size: A4  
Folded Size: A5  
Type of Fold: accordian  
# colors: One  
Colors: Black  
Paper Stock: White Offset  
Paper Weight: 70 lb.  
EDM No.:

#### BATTERY INSTALLATION

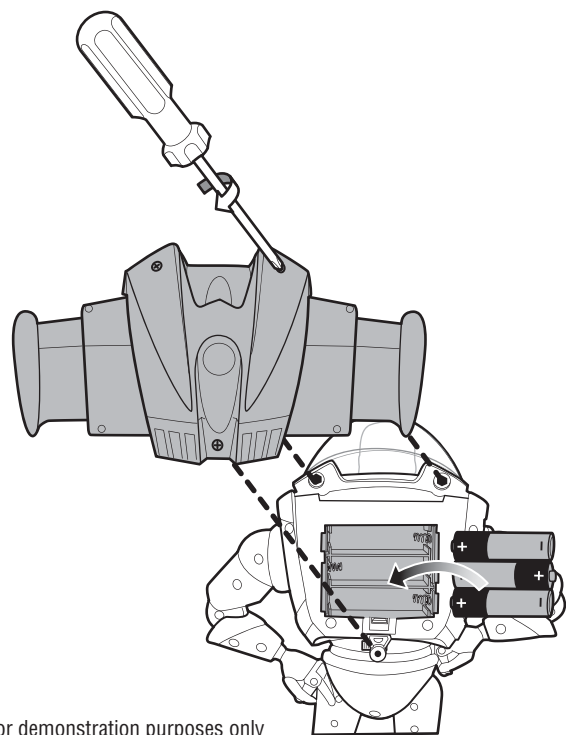

#### ADULTS NOTE: Batteries included are for demonstration purposes only

- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Remove batteries included for demonstration purposes and dispose of them safely.
- Install 3 AA (LR6) alkaline batteries in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- For longer life use only alkaline batteries.
- Replace the batteries if sounds distort or lights dim.

#### BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2002/96/EC).  
Check your local authority for recycling advice and facilities.



 
## ULTIMATE SPACE RANGER BUZZ LIGHTYEAR

4+

### INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

#### CONTENTS

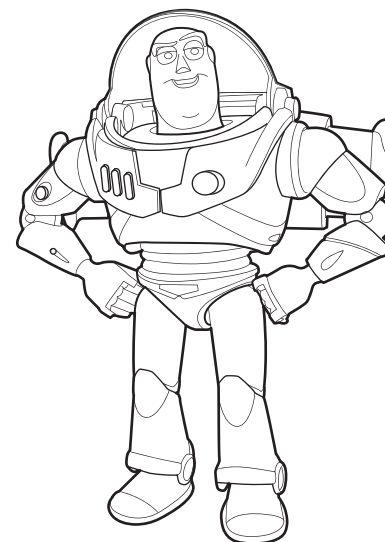

Mattel, Inc. All Rights Reserved.

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1 (800) 524-8697. Retain this address for future reference. **Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB, Helpline 01628 500303.** **Mattel Australia Pty., Ltd., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312.** **Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: **Mattel SEA Ptd Ltd.** (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867.**

R0354-0920






© Disney/Pixar

service.mattel.com


#### TO PLAY

   1.

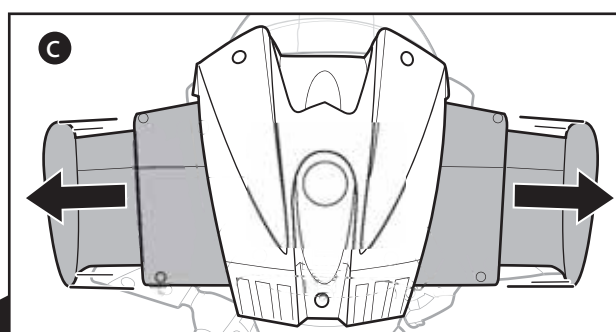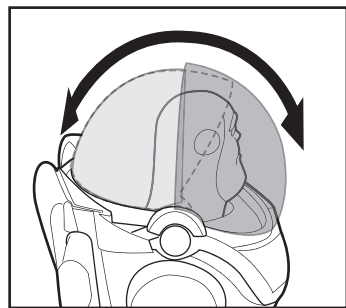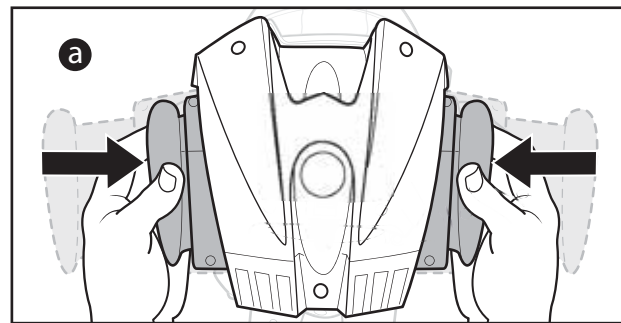


Press the red button for the wings to pop-out.

 2.


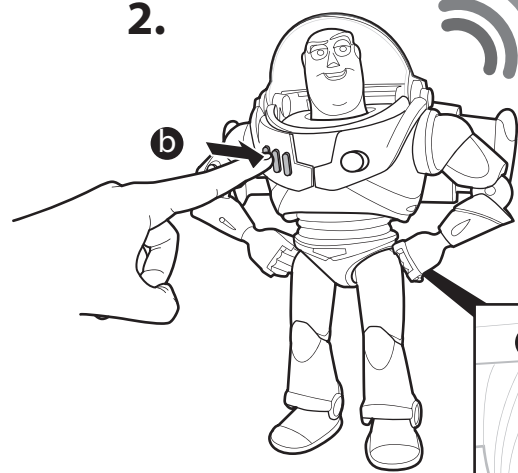


I = ON O = OFF

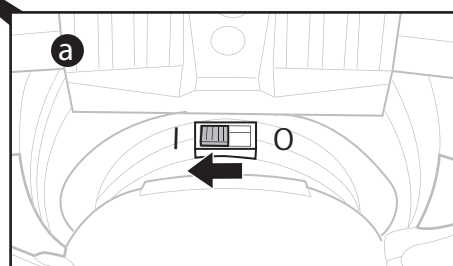 

Press any of the other buttons on the chest to hear cool Buzz Lightyear phrases.

  3.

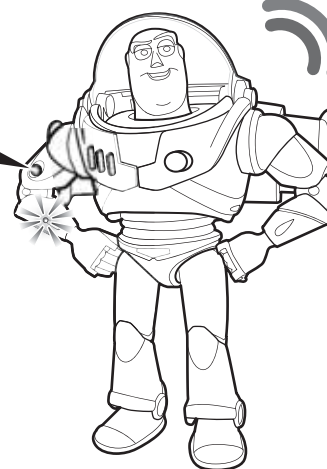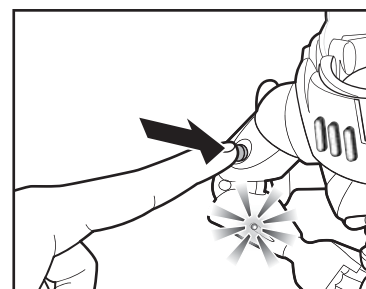

Press the button on the arm to hear laser sounds.