 









# Rockin' Rampage

## INSTRUCTIONS

### CONTENTS





4+

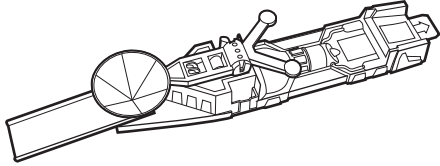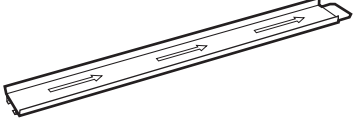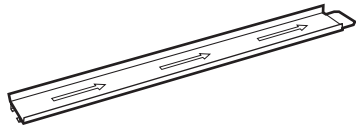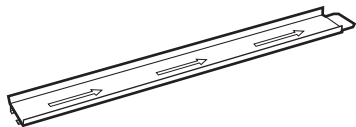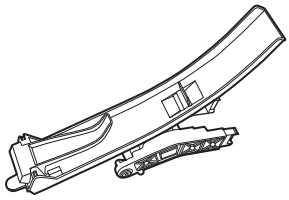

© 2010 Mattel, Inc. All Rights Reserved. Mattel, Inc. 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. • Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697. • Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. • Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.Consumer Advisory Service - 1300 135 312 Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. • Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867. service.mattel.com

## ASSEMBLY


1.

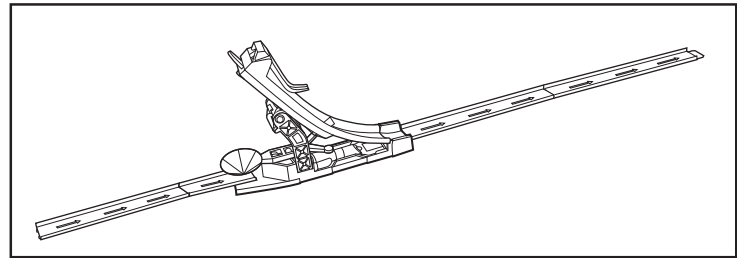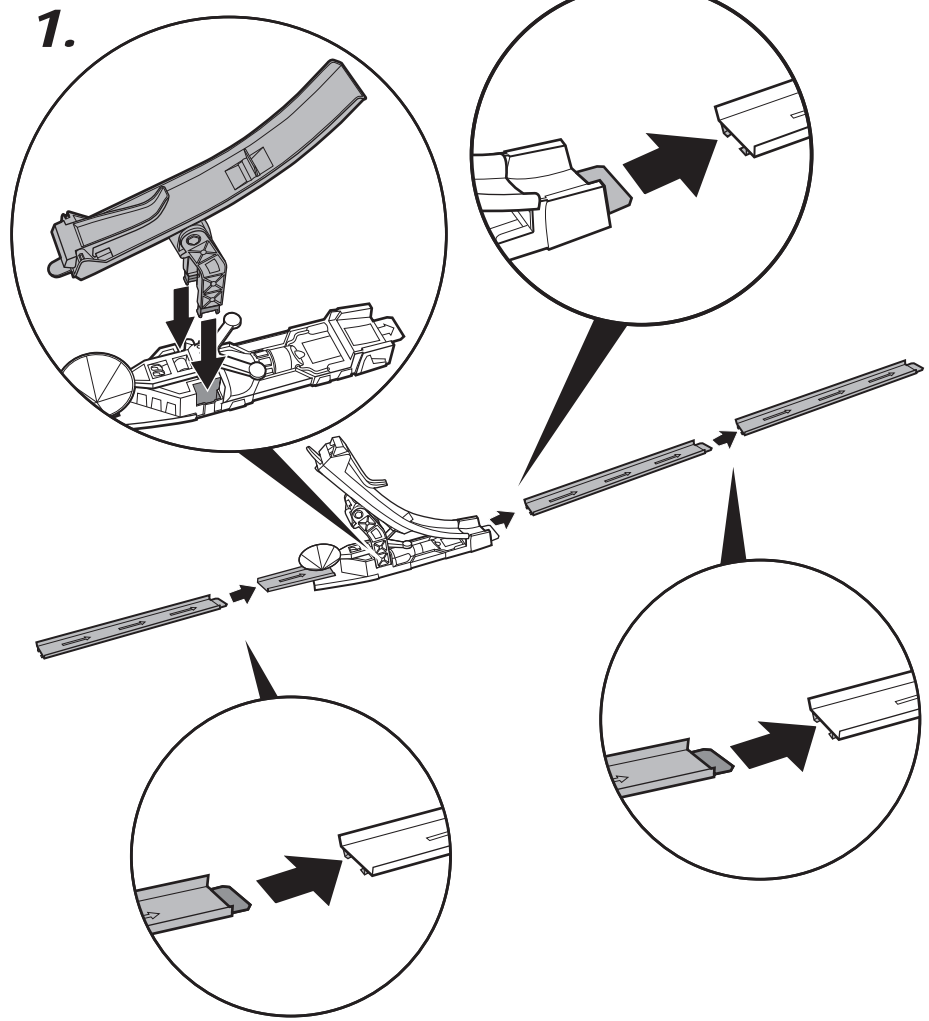

## TO PLAY


Note: All launch buttons are green.  
All reset buttons are red.

1.

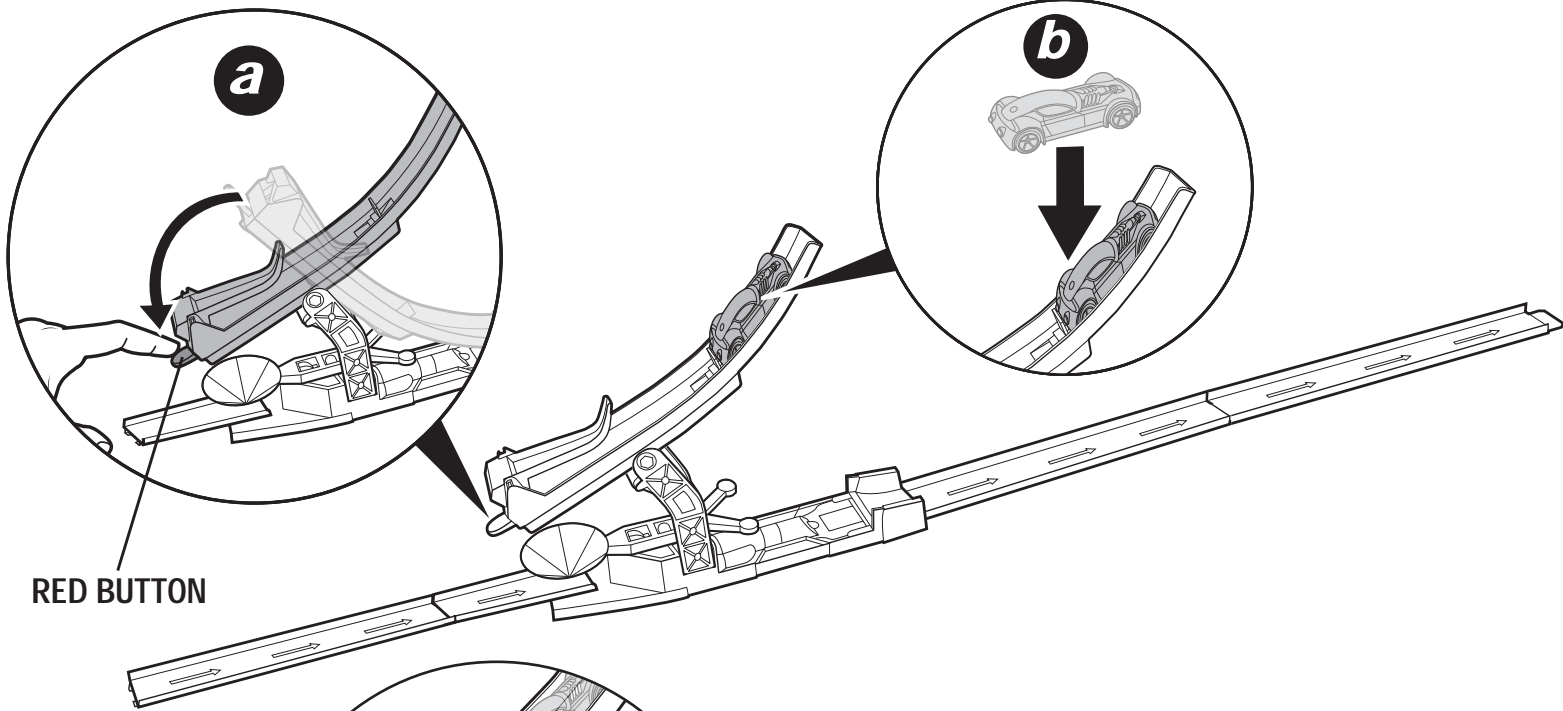

RED BUTTON

2.


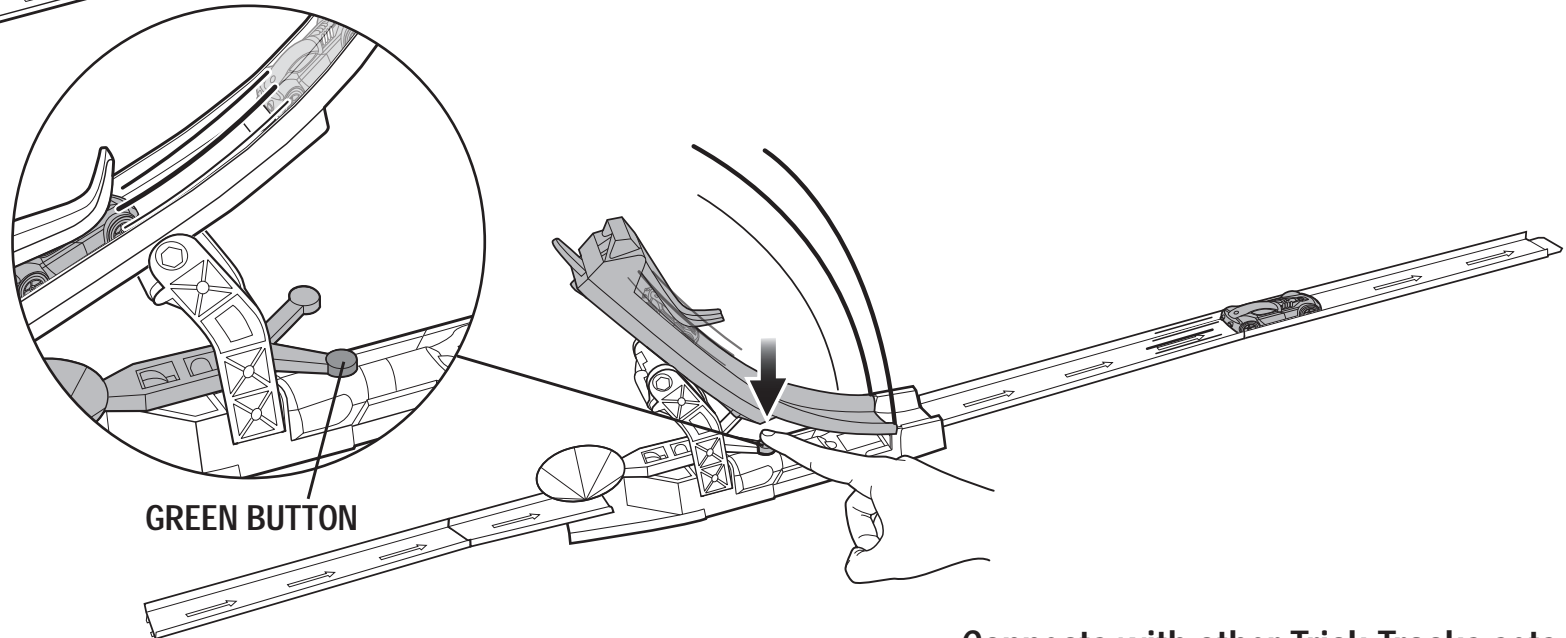


GREEN BUTTON


Connects with other Trick Tracks sets.

**TO PLAY**

2.

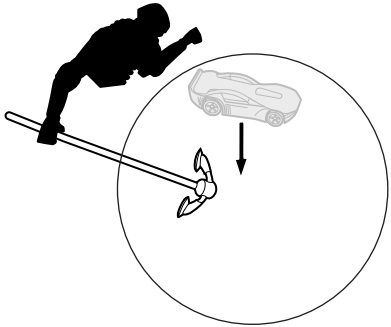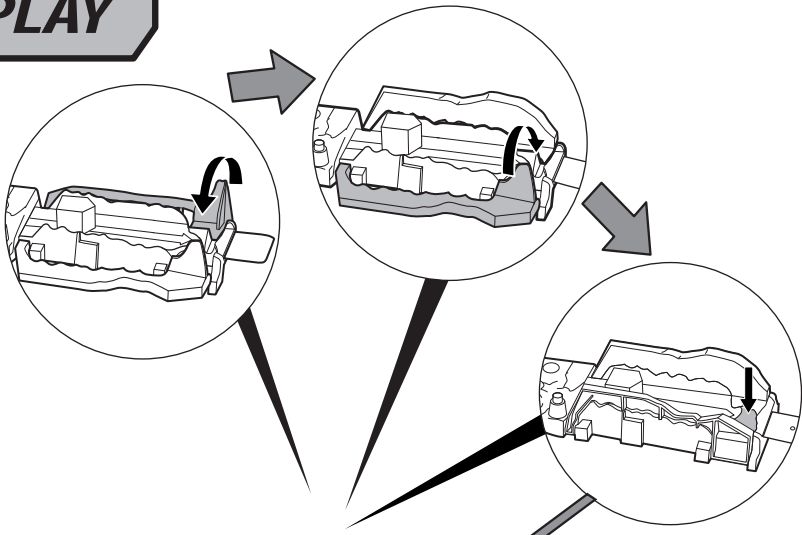


3.

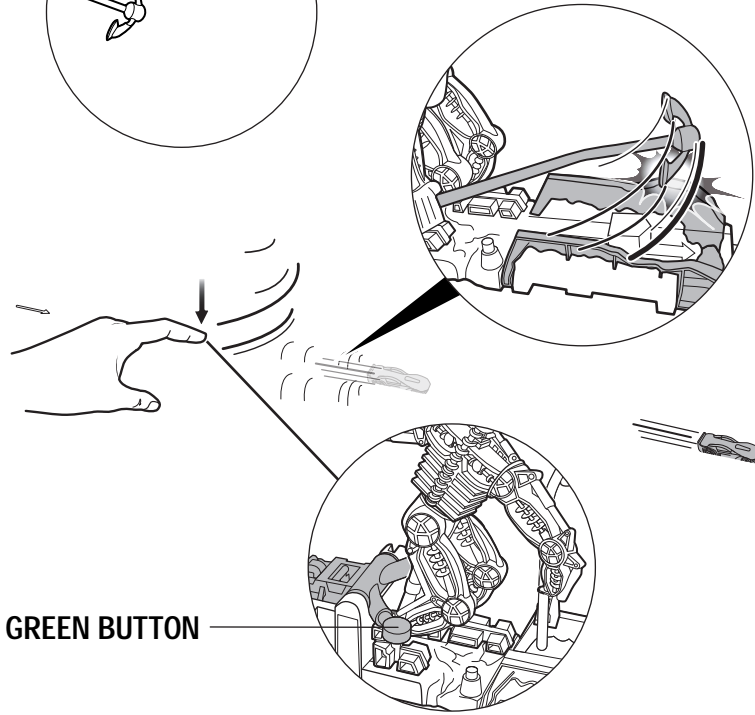


GREEN BUTTON

Connects with other Trick Tracks sets.

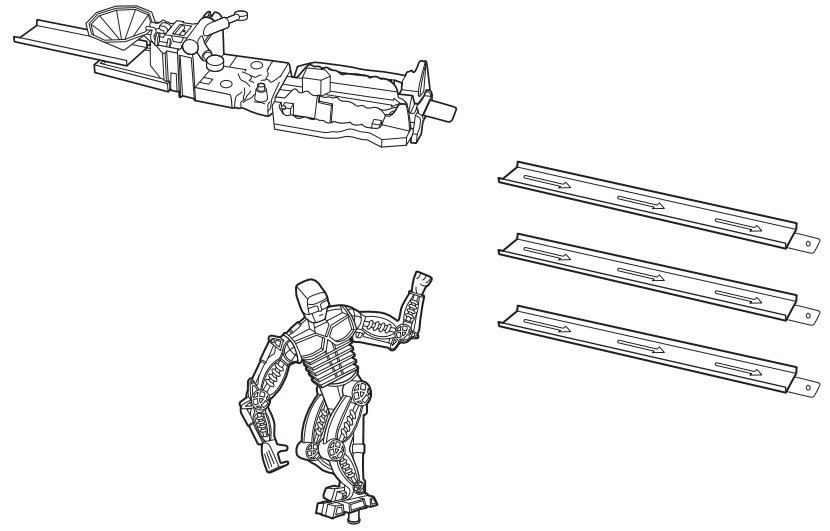

**ASSEMBLY**


1.

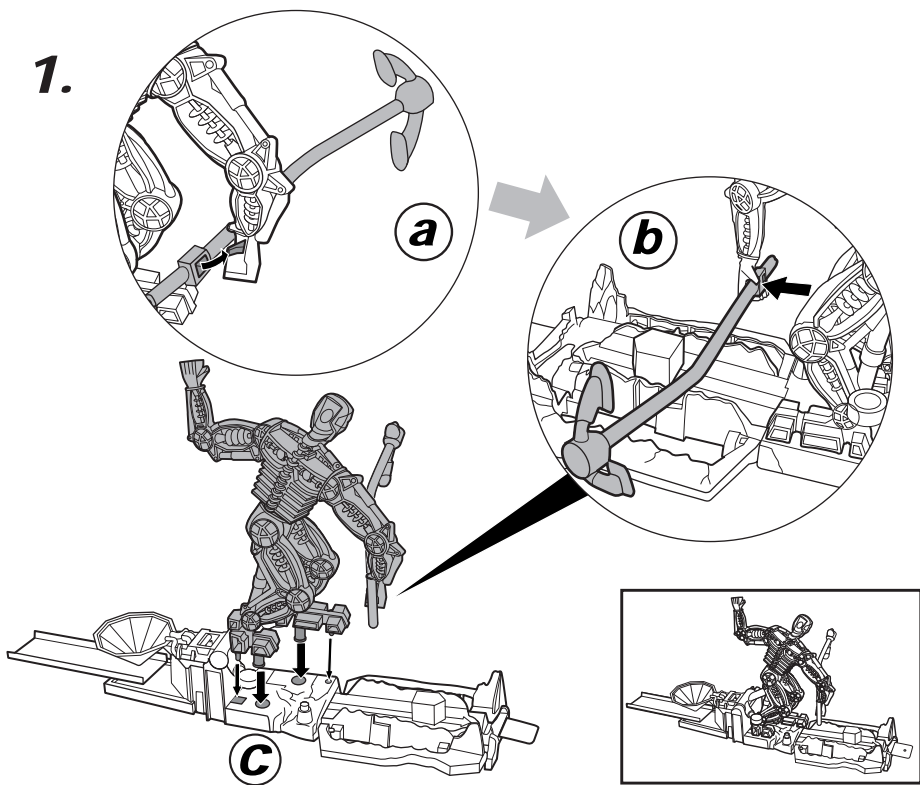

**REPLACE RUBBER BAND**


ADULT SUPERVISION REQUIRED.

1.

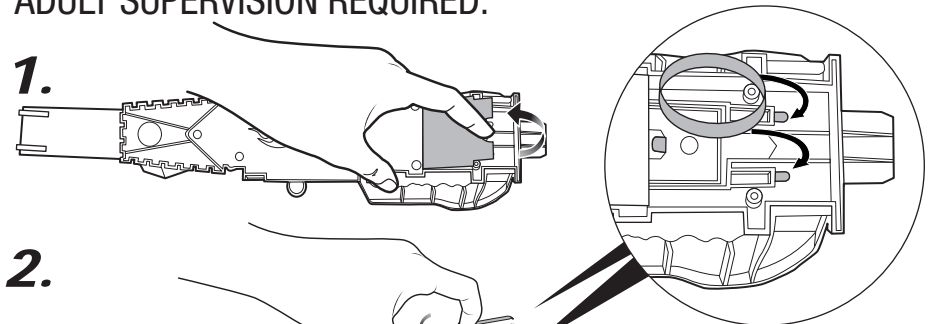

2.

3.

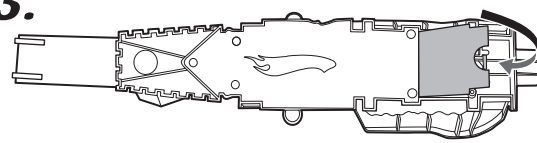

**TO PLAY**

Note: All green buttons are launch buttons.

1.

