

Play My Way

R4568



Fisher-Price

www.fisher-price.com

Consumer Information



WARNING

CHOKING HAZARD – Small Parts

Not suitable for children under 3 years.

- Please keep this instruction booklet for future reference, as it contains important information.
- This product (art supplies) may stain or stick to some surfaces. Place newspaper or another protective material on the play area before use.
- Software should be installed by an adult.
- For proper use of this product we recommend that your computer meet minimum system requirements.

Minimum System Requirements

Operating System.....	Microsoft® Windows Vista™ or Windows XP
Processor.....	1.2GHz
Memory.....	256MB RAM
Hard Drive.....	200MB available
Video Resolution.....	800x600 32-bit color DirectX9.0c compatible
Sound.....	16-bit DirectX compatible
CD or DVD Drive	

Recommended:

Printer, Internet Connection (for software updates)

Install the Software

- You will need Administrator privileges to install the software. If you have multiple logons on your computer, be sure the logon you are using has Administrator privileges.
- Insert the CD into the CD-ROM or DVD drive of your computer.
- The software installer launches automatically. Follow the on-screen instructions to complete installation.
- You will be asked to set a password as part of the installation process. Refer to the Parental Controls section for instructions to set a password.

Note: You will need to install all components to use this software.

- If Installation of the software does not launch automatically, go to the “Start” menu, click on “Run” and type “D:\”.

Note: If you are using Windows Vista™, you will need to restart your computer after installing the software.

Uninstall the Software

 
- Click on the following items (in order):
 - “Start” menu on your computer task bar
 - “Programs”
 - “Fisher-Price”
 - “Play My Way”
 - “Stickers – Stencils – Stampers Fun”
 - “Uninstall Stickers – Stencils – Stampers Fun”


Start the Software



- Double-click on the Stickers – Stencils – Stampers Fun icon on your computer desktop.

Main Menu

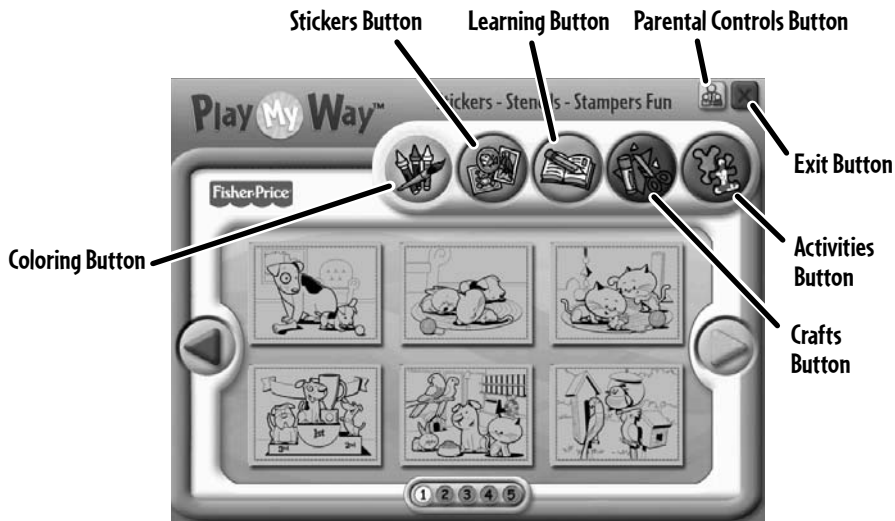


- From the main menu, click on a button to choose from coloring, stickers, learning, craft or activity prints.
- Click on the large arrows ◀ ▶ on each side of the screen or the numbers on the bottom of the screen to view more pictures.
- Click on the parental controls icon  to set a password, receive software updates, and control the number of prints your child can print during each session of use.




Parental Controls



Parental Controls Button

- To set up or change parental controls, click on the Parental Controls button , located on the upper right portion of the main menu screen.



- Click on the Password, Software Update, Number of Prints or System Information button.
- Note:** When you click on the System Information button, you can review information about your software, operating system, firmware and accessories.
- To exit, click on the  button.



Parental Controls



Password

- Protect your desktop and hard drive by setting a password. Click the ON radio button.
- Type your password in the Enter Password and Confirm Password fields. Select a hint to help you remember your password.

Note: If you set a password, you cannot enter Parental Controls or exit the software without entering the password.

- Click on the checkmark button to save your password.



Software Update

- Click the ON radio button to automatically check for software updates.

Note: You must have an Internet connection on your computer for this feature to work.

- Click on the checkmark button to save your selection.



 
Parental Controls




Number of Prints


- Click on the arrows to select the number of prints for each session.
- Choose a number from 0 to 20 or select unlimited. If you do not make a choice, the number of prints defaults to unlimited.
- Click on the checkmark button to save your selection.


Coloring

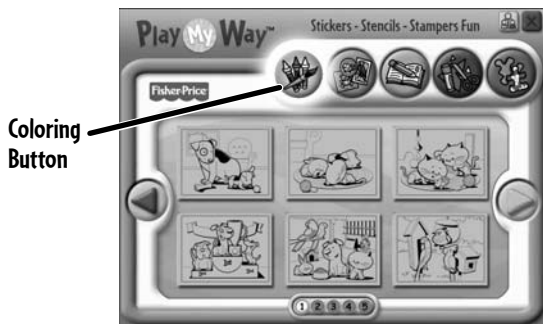

- Click on the coloring  button for prints you can color!
- Click on a picture to print it. Click on the arrows or numbers to see more pictures.

 
Stickers

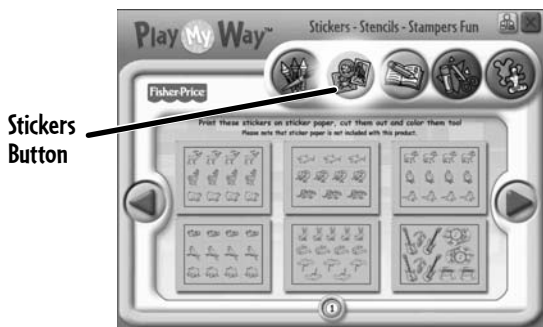

- Click on the stickers  button to print stickers you can color!
 - Click on a sticker sheet to print it. Click on the arrows or numbers to see more sticker sheets.
 - Color the stickers, then cut them out and stick them to your projects!
- Note:** Use sticker paper (not included and sold separately), or use plain paper and tape or glue your stickers to your projects.


Learning



- Click on the learning  button for prints with letters, numbers, writing and addition!
- Click on a print to print it. Click on the arrows or numbers to see more prints.


Crafts



- Click on the crafts  button for instructions for fun craft projects!
- Note:** Craft projects may require more than one piece of paper to print.
- Click on a project to print it.


Activities



- Click on the activities  button for prints with fun activities you can complete and then color!
- Click on the arrows or numbers to see more activities.
- Click on an activity to print it.

Printables



- Click on the picture you want to print! The printer icon  will appear over the picture you are printing.

Note: Make sure your printer is ON and connected to your computer.

Stickers - Stencils - Stampers Fun!



- Use the included art supplies to complete your printed projects!

Cleanup and Storage



- To remove markings from skin, use soap and water.
- Replace the caps on the markers and ink pad after each use.
- All your supplies easily store inside the bin.
- Store your bin in the art center (sold separately and subject to availability).



CONSUMER ASSISTANCE

1-888-892-6123 (US & Canada)

1300 135 312 (Australia)

 service.fisher-price.com

Fisher-Price, inc., 636 Girard Avenue, East Aurora, NY 14052.

Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Windows is a registered trademark of Microsoft Corporation in the United States and other countries.

Windows Vista is either a registered trademark or trademark
of Microsoft Corporation in the United States and/or other countries.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2009 Mattel, Inc. All Rights Reserved.

® and TM designate U.S. trademarks of Mattel, Inc., unless otherwise indicated.

PRINTED IN CHINA

R4568a-0920

