



- Align the raised tab on a handle with the slot in the head socket. Insert the handle into the socket.

Hint: You can also insert the handle into the socket and turn it so that the raised tab inserts into the slot in the socket.

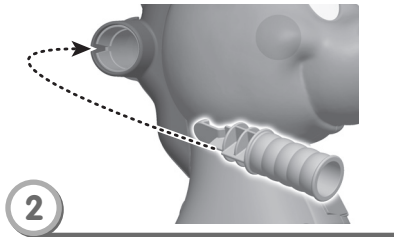

- Align the raised tab on the other handle with the slot in the head socket on the other side. Insert the handle into the socket.

Hint: You can also insert the handle into the socket and turn it so that the raised tab inserts into the slot in the socket.

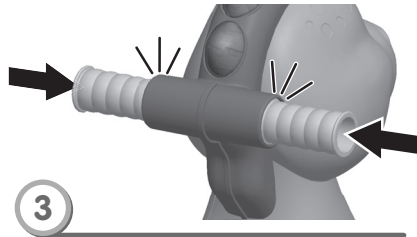

- Push both handles at the same time to “**snap**” them together. Pull on each handle to be sure they are secure in the sockets.



Fisher Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A. ©2010 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

PRINTED IN MEXICO T4262pr-0921