



## Installing Software

- Before inserting the CD-ROM, insert the USB included with the Kid Tough™ video camera into the USB port on your computer.
- If you have multiple logons on your computer, be sure the logon you are using has Administrator privileges. You will need Administrator privileges to install this software.
- Insert the computer software CD into the CD-ROM or DVD drive of your computer.
- The software installer launches automatically. Follow the on-screen instructions to complete installation.

**Note:** You need to install all components to use this software.

- If installation of the software does not launch automatically, go to the “Start” menu, click on “Run” and type “D:\setup”.

## Uninstalling Software

- Click on the following items (in order):
  - “Start” menu on your computer taskbar
  - “Programs”
  - “Fisher-Price”
  - “Video Software”
  - “Uninstall Video Software”

If you have any questions or require additional assistance, please contact us at **1-888-892-6123** (US & Canada). Hearing-impaired consumers may call **1-800-382-7470**.