



TROUBLESHOOTING GUIDE

If you have questions or difficulty operating your Race Set –
the cause is often a simple problem. And there’s often a simple fix. Usually a quick “pit stop” will get you racing again. Please check below, and then turn to the Maintenance section of the Instruction Manual for detailed information.

If your vehicle stops...

- You may need to clean the track. *Please see Maintenance section: Track Cleaning.*
 - You may need to clean the vehicle. *Please see Maintenance section: Vehicle Cleaning.*
 - Check power connections. *Please see Power Connection section.*
 - Check your vehicle’s alignment. *Please see Maintenance section: Alignment.*
 - Check your vehicle’s contacts. *Please see Maintenance section: Contacts.*
 - Check to make sure track sections are properly connected. *Please see Basic Track Assembly section.*
 - Check your vehicle’s heat shield. *Please see Maintenance section: Heat Shield.*
-

If your vehicle runs slowly or hesitates...

- You may need to clean the track. *Please see Maintenance section: Track Cleaning.*
 - You may need to clean the vehicle. *Please see Maintenance section: Vehicle Cleaning.*
 - Check your vehicle’s alignment. *Please see Maintenance section: Alignment.*
 - Check your vehicle’s contacts. *Please see Maintenance section: Contacts.*
 - Check to make sure track sections are properly connected. *Please see Basic Track Assembly section.*
-

If your vehicle spins out or flies off the track...

- You may need to clean the vehicle. *Please see Maintenance section: Vehicle Cleaning.*
 - Check your vehicle’s alignment. *Please see Maintenance section: Alignment.*
 - Check to make sure track sections are properly connected. *Please see Basic Track Assembly section.*
 - Check your vehicle’s heat shield. *Please see Maintenance section: Heat Shield.*
 - Check your vehicle for a missing guide pin. *Please see Maintenance section: Chassis Parts.*
-

If your vehicle runs in on one lane, but not the other...

- You may need to clean the track. *Please see Maintenance section: Track Cleaning.*
 - You may need to clean the vehicle. *Please see Maintenance section: Vehicle Cleaning.*
 - Check power connections. *Please see Power Connection section.*
 - Check your vehicle’s alignment. *Please see Maintenance section: Alignment.*
 - Check your vehicle’s contacts. *Please see Maintenance section: Contacts.*
 - Check to make sure track sections are properly connected. *Please see Basic Track Assembly section.*
 - Check your vehicle’s heat shield. *Please see Maintenance section: Heat Shield.*
-

If your vehicle runs backwards...

- Your vehicle’s rear axle assembly may be installed backwards. *Please see Maintenance section: Chassis Parts.* Remove the rear axle assembly, reverse it and reinstall.
-


IF YOU STILL HAVE PROBLEMS –
OR IF ANY PARTS ARE MISSING OR DAMAGED – DON'T
RETURN YOUR RACE SET TO THE STORE! CALL OUR RACING
SUPPORT TEAM TOLL-FREE AT 1-888-557-8926 FOR HELP.



ASSEMBLY MAP

This page shows the contents list and large-scale Layout Drawings of the fully-assembled track (tracks are not drawn to scale). You'll need to refer to it as you assemble your race set. Refer to the Instruction Sheet for detailed step-by-step instructions for setting up and using your race set.



CONTENTS LIST

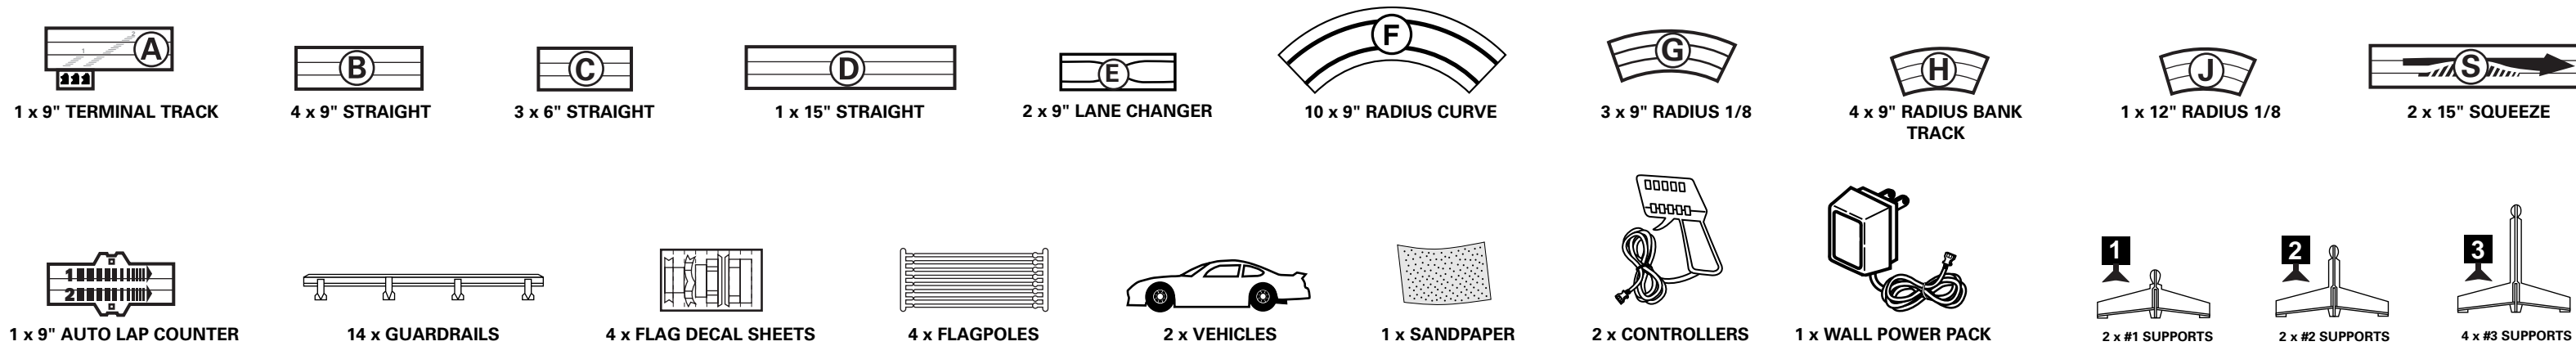

Refer to the package for color photographs of the assembled layouts.

MAIN LAYOUT DRAWING

ALTERNATE LAYOUT DRAWING

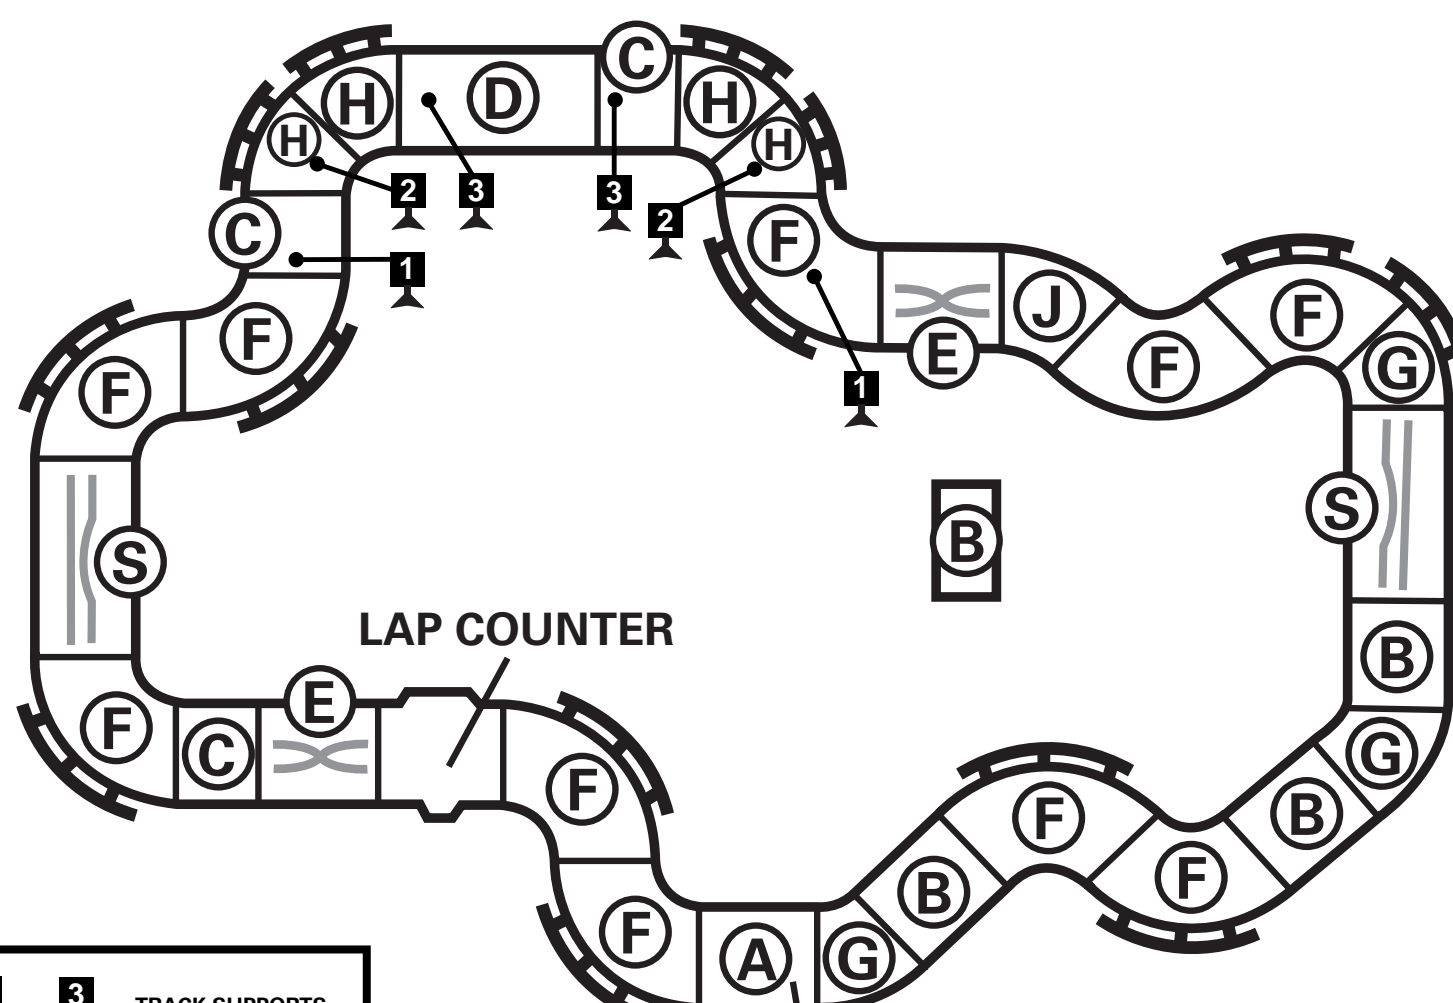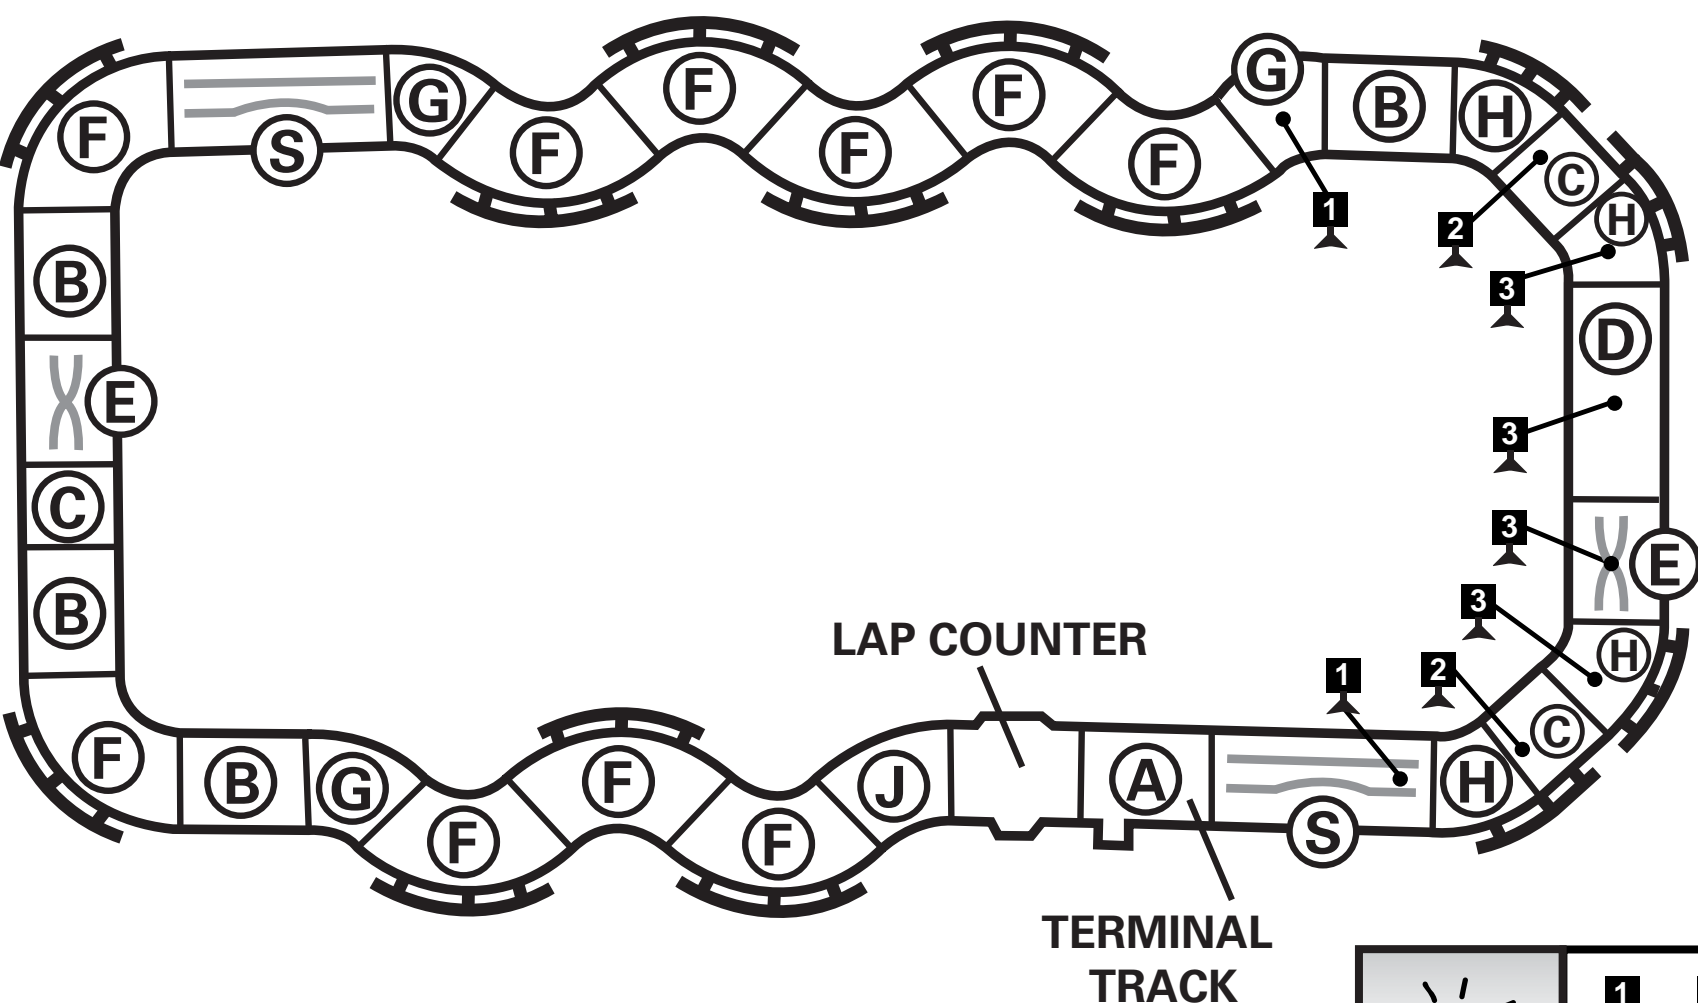

	1 2 3 = TRACK SUPPORTS
	= GUARDRAILS

IF ANY PARTS ARE MISSING OR DAMAGED - DON'T RETURN YOUR RACE SET TO THE STORE! CALL OUR RACING SUPPORT TEAM TOLL-FREE AT 1-888-557-8926 FOR HELP.