

Fisher-Price®

**Kid
Tough™**
DVD player



**IMPORTANT SAFETY INSTRUCTIONS -
SAVE THESE INSTRUCTIONS.**

⚠ CAUTION - ELECTRICALLY OPERATED PRODUCT

Not recommended for children under 3 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock.

DOLBY
DIGITAL

Consumer Information

DANGER

To prevent electric shock, do not immerse in water; wipe clean with a damp cloth. Do not expose the product to rain or moisture. To reduce the risk of fire or electric shock, carefully follow these instructions.

- Please read the booklet before first-time use. Keep these instructions for future reference, as they contain important information.
- Requires one 4.8V rechargeable NiMH battery pack (included inside the DVD player) for operation and a power adapter (included) for charging/DC power use.
- Before first-time use, charge the 4.8V NiMH rechargeable battery pack inside the DVD player for 8 hours. After the initial charge, recharge the battery pack (inside the DVD player) for 6 hours. Each battery charge lasts approximately 2 hours.
- Charge the 4.8V NiMH rechargeable battery pack (inside the DVD player) only with the supplied power adapter. Do not use any other power adapter.
- When using this product with the power adapter plugged into a wall outlet, be sure it is used where there is adequate ventilation. To prevent overheating, keep away from heat sources such as radiators, heat registers, direct sunlight, stoves, amplifiers, fire, excessive heat or other appliances that produce heat.
- The power adapter is not a toy. Do not use extension cords with the power adapter.
- Power adapter specifications: Input 120 VAC, 60 Hz, 0.3 A; Output 9V, 1200mA, 10.8VA.
- Do not connect to more than the recommended number of power supplies.
- **Adults Note:** Adult supervision is required. Regularly examine this product for damage to the cord, plug, housing or other parts that may result in the risk of fire, electric shock or injury. If the product is damaged, do not use it.

Consumer Information

- Even with proper care, the rechargeable battery pack inside the DVD player will not last forever. The life of the rechargeable battery pack depends on how well you follow these instructions and the total number of hours it is used. If you should need to replace the rechargeable battery pack, contact Fisher-Price® Consumer Relations at www.service.fisher-price.com or call **1-800-432-5437** to purchase one. You will be sent a 4.8V NiMH rechargeable battery pack, a required battery compartment tool and replacement instructions. **NEVER** use this product without this battery pack connected. This product will be **PERMANENTLY DAMAGED** if the power adapter is used without the battery pack connected.
- Do not recharge this product if it shows leakage.
- Avoid leaving the DVD player where it will be subjected to high temperatures, such as direct sunlight, on the dashboard or near hot air from the heater.
- The DVD player can be used while the battery pack (inside the DVD player) is being charged.
- This DVD player is a Class 1 Laser Product.
- Complies with 21 CFR 1040.

⚠ CAUTION – This product has been designed with two interlock switches to prevent access to laser exposure while the product is being used as directed in the Owner's Manual. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Optical Specifications

Item	DVD	Temperature
Wavelength	650+/- 10nm	@25°C
Emission Power (TYP)	0.31mW	@25°C
Emission Power (MAX)	0.70mW	@25°C



Charging the Battery

(Inside the DVD Player)



Power Adapter

IMPORTANT! Fully charge the DVD player (with battery pack inside) for **8 hours before first-time use.**

- Fit the power adapter pin into the DC input jack \ominus $\overset{9V}{\ominus}$ \ominus $\overset{DC}{\oplus}$ \oplus on the DVD player.
- Plug the power adapter into a standard wall outlet.

 
 
 
Notes: If power flow to the wall outlet is controlled by a switch, make sure the switch is "ON". Use the power adapter only in a wall outlet. Do not plug the power adapter into a ceiling outlet. To connect to a supply that is not in the United States, use an adapter (not included and sold separately) with the proper configuration for the power outlet.

Charging the Battery

(Inside the DVD Player)

- The L.E.D. light will flash when there is approximately 10 minutes of battery power left. **For best performance, it is recommended that you completely drain the battery pack inside the DVD player before recharging.** After the first charge, recharge the battery pack (inside the DVD player) for 6 hours.
- **Charging the battery pack (inside the DVD player) with the DVD player power OFF:**
 - If you are charging the battery pack inside the DVD player while the DVD player power is OFF, the L.E.D. will flash until the battery pack inside the DVD player is fully charged. When it is fully charged, the DVD player L.E.D will turn off.
- **Charging the battery pack (inside the DVD player) with the DVD player power ON:**
 - You can also charge the battery pack inside the DVD player while the DVD player power is ON, but it will take longer. The L.E.D. on the DVD player will remain on while the battery pack is charging.
 - When the battery pack inside the DVD player is charged, disconnect the power adapter pin from the DC input jack on the DVD player. Unplug the power adapter from the wall outlet.

Getting Started

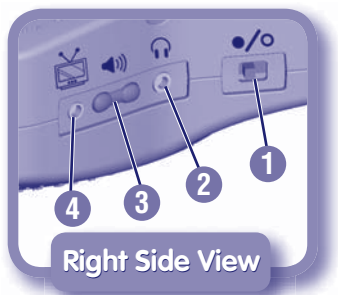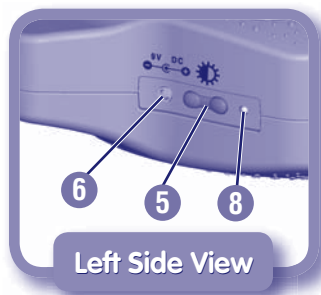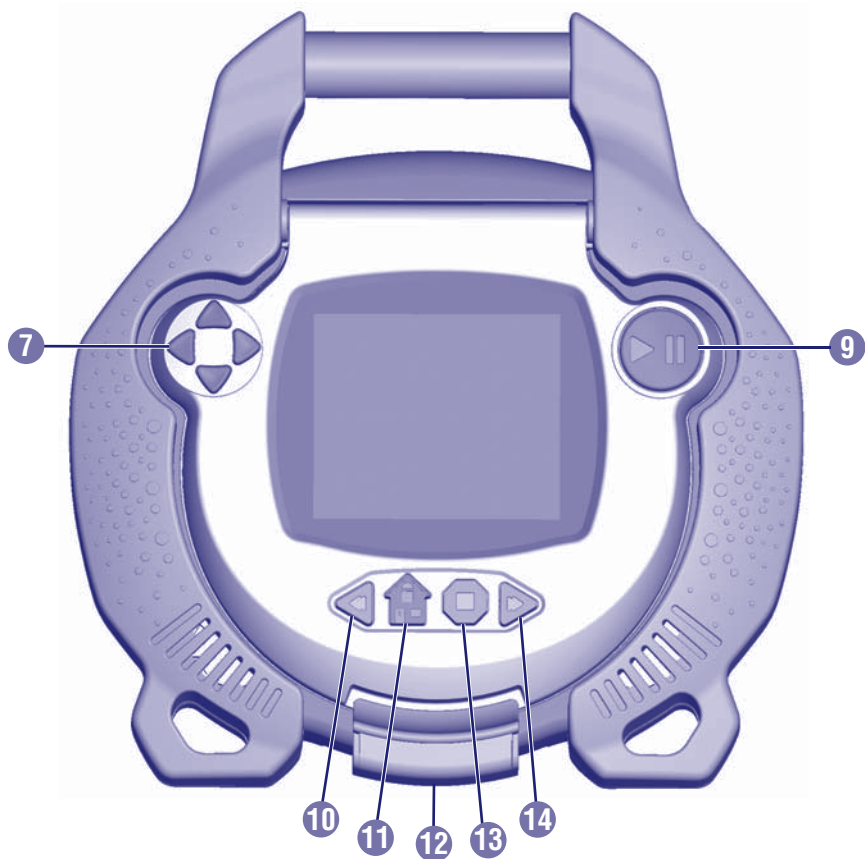

Getting Started

- 1 Power Switch** – Slide the switch ON ● or OFF ○.
- 2 Headphone Jack** – Plug headphones (sold separately) into this jack for individual listening.
- 3 Volume Button** – Press one side to adjust the volume up or the other side to adjust volume down.
- 4 TV Output Jack** – Plug an AV cable (sold separately) into this jack to play DVDs on a TV.
- 5 Contrast Button** – Press either side of the button to adjust the level of contrast.
- 6 DC Input Jack** – Plug the power adapter into this jack to charge the battery pack or use DC power.
- 7 Selection Buttons** – Press to navigate through menus or games.
Note: These buttons do not work when a DVD or CD is playing.
- 8 L.E.D.** – A steady light indicates DVD player power is on or charging with power on. A flashing light indicates when battery power is low or the product is charging with the DVD player power OFF.
- 9 Play/Pause Button** – Press to play or pause a DVD or CD, or to make selections in menus or games.
- 10 Previous Button** – Press once to go back a chapter on a DVD. Press and hold to rewind.
- 11 Home Button** – Press this button at any time when a DVD is playing to go to the main menu.
Note: This button does not work when a CD is playing.
- 12 Latch** – Pull to open the door to insert a DVD or CD into the player.
- 13 Stop Button** – Press this button to stop the DVD or CD that is playing.
- 14 Next Button** – Press once to skip ahead to the next chapter on a DVD. Press and hold to fast forward.

On Screen Displays

When you press buttons on the DVD player, icons appear on the screen. Here's what they mean:



Appears when a DVD or CD is loading in the player.



Appears when the button pressed cannot execute the action.



Appears when you press the play/pause button.



Appears when you press the play/pause button a second time. While a DVD is playing, press the play/pause button again to resume.



Appears when you press the previous button once and indicates you are going back to a previous chapter on a DVD.



Appears when you press and hold the previous button. It indicates you are rewinding a DVD.



Appears when you press the next button once and indicates you are skipping ahead to the next chapter on a DVD.



Appears when you press and hold the next button. It indicates you are fast forwarding a DVD.



Appears when you press the stop button.



Appears if you press the home button while a movie is playing.



Appears if the DVD player door is not completely shut and latched.



This icon flashes on the screen if there is no DVD or CD in the player, or if it cannot read the DVD or CD inserted.

Hint: If there is a DVD or CD in the player, make sure it is properly inserted.



These icons appear to indicate if a DVD or CD is playing.



Appears across the top of the screen when you press either side of the volume button.



Appears across the top of the screen when you press either side of the contrast button.

 
Parental Controls



- To access the Parental Controls menu, slide the DVD player power switch ON ●. Quickly press and hold **both** the home and stop buttons at the same time while the Fisher-Price® logo is still falling on the screen.


Note: If a DVD or CD is installed in the player and starts playing, you will not be able to access the Parental Controls menu. Slide the power switch OFF, back ON and then quickly press the home and stop buttons at the same time.

Parental Controls

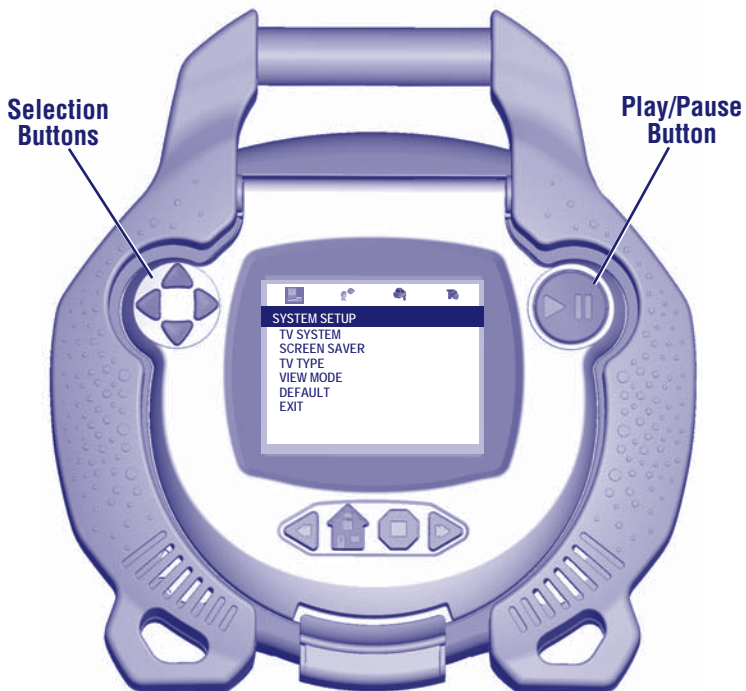

- Press the selection buttons to navigate through the menu options.
- Press the play/pause button to make a selection.

 Parental Controls

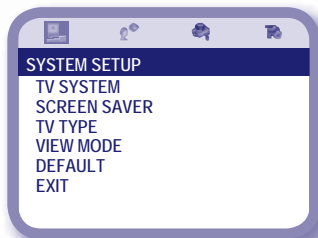

System Setup

TV System – Select NTSC, PAL or Auto.

Screen Saver – Turn the screen saver on or off.

 
TV Type – Select 4:3 Pan & Scan, 4:3 Letter Box or 16:9 Wide Screen.

View Mode – Select obverse or reverse.

Default – Select to restore the DVD player to the factory settings.

Exit – Select to return to the top of the system setup menu.

Parental Controls

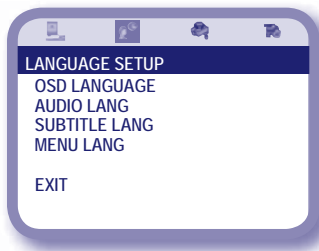

Language Setup

 
OSD Language – Select the language for the on-screen display.

Audio Language – Select the language to play the DVD.

Subtitle Language – Select the language for the DVD's subtitles.

Menu Language – Select the menu language you want to display.

Exit – Select to return to the top of the system setup menu.

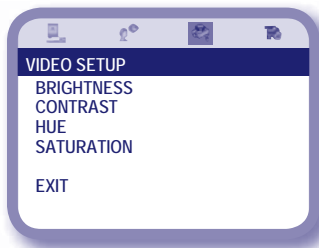

Video Setup

 
Brightness – Select to adjust the level of brightness on the screen.

Contrast – Select to adjust the amount of contrast on the screen.

Hue – Select to adjust the hue on the screen.

Saturation – Select to adjust the amount of saturation on the screen.


Exit – Select to return to the top of the system setup menu.

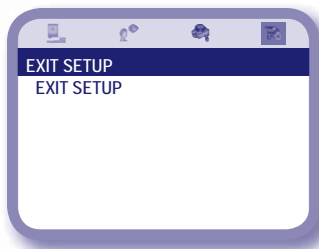


Exit Setup

Select to exit the parental controls menu.

 Inserting a DVD or CD

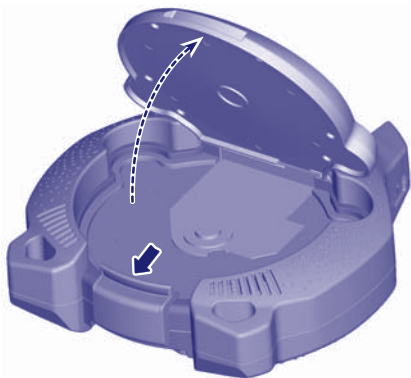

- Slide the power switch on the side of the DVD player ON ●.
- Pull the latch to open the door.
- Fit a DVD or CD into the player and press down around its center hole. Make sure you hear a **“click”**.
- Press to close the door. Make sure you hear a **“click”**.

Hint: If the door is not properly shut, you will see the door open symbol  on the screen.

Easy for Kids to Use!



- Pull out the legs in the back of the DVD player to stand up the DVD player on its own.

Battery Power







- If the DVD player is paused or stopped for 5 minutes, the screen saver will appear. After another 5 minutes, the DVD player enters sleep mode. You will need to slide the power switch OFF and then back ON.

DC Power (with Power Adapter)



- If the DVD player is paused or stopped for 10 minutes, the screen saver will appear. After another 10 minutes, the DVD player enters sleep mode. You will need to slide the power switch OFF and then back ON.

Watching Movies



- Press the home  button to go to the DVD main menu.
- Use the selection buttons  to choose a menu option.
- Press the play/pause  button to play the DVD (or make another selection).
- Press the previous  button to go back to a previous chapter. Press and hold the previous button to rewind.
- Press the next button  to skip ahead by chapter. Press and hold the next button to fast forward.
- Press the stop  button to stop the DVD.

Hint: If you press the stop button once and then press the play button, the DVD plays from the same place you stopped it. If you press the stop button twice, the DVD will play from the beginning.

- If your DVD includes a game or activity:
 - From the DVD menu, use the selection buttons  to locate the game or activity option.
 - Press the play/pause  button to select the game or activity.
 - Use the selection buttons in the game or activity, to move around the screen. Then, use the play/pause button to make selections.

Listening to Music



Note: The CD will begin playing as soon as you close the door on the DVD player.

- Press the previous ◀ button to go back to a previous song. Press and hold the previous button to rewind the song.
- Press the next ▶ button to skip to the next song. Press and hold the next button to fast forward the song.
- Press the stop ◻ button to stop playing.



Note: The home button is not active when a CD is playing.

Connect to TV

(AV cable sold separately.)



IMPORTANT! Your TV must have audio and video input jacks.

- Plug an AV cable (sold separately) into the TV output jack  on the DVD player.
- Plug the audio-video pins on the AV cable into the matching colored input jacks on your TV (yellow for “Video In” and white for “Left Audio In” and red for “Right Audio In”).
- Turn your TV power ON. Slide the power switch on the DVD player ON .
- To find the picture on your TV screen, set your TV’s mode selector to INPUT or VIDEO IN.

On-the-Go Travel



Car Adapter



(Sold Separately)



Headphones

(Sold Separately)



- Insert the pin on a car adapter (sold separately) into the DC input jack  on the DVD player. Then plug the other end of the car adapter to the DC power socket in your vehicle.
- Insert a headphone pin (sold separately) into the headphone jack  on the DVD player. Make sure the headphones used is equipped with a 3.5 mm pin.

Note: Do not display the DVD player where it is viewable by the driver. Some states restrict the use of monitors or televisions in vehicles. Where use is permitted, the DVD player should not be used where it is viewable by the driver.

Battery Pack Replacement

(Inside the DVD Player)

To purchase a 4.8V NiMH rechargeable battery pack, please contact Fisher-Price® Consumer Relations at www.service.fisher-price.com or call **1-800-432-5437**. You will be sent a 4.8V NiMH rechargeable battery pack, a required battery compartment tool and replacement instructions.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- If replacing the battery pack, insert it as indicated inside the battery compartment.
- Always remove an exhausted battery pack from the product. Dispose of the battery pack safely. Do not dispose of product in a fire. The battery pack inside may explode or leak. Contact Fisher-Price® Consumer Relations at **www.service.fisher-price.com** or call **1-800-432-5437** to purchase a battery pack with required battery compartment tool and replacement instructions.
- Never short-circuit the battery pack terminals.
- Use only batteries of the same type, as recommended.

Troubleshooting

Problem	Solution
No image on screen	DVD player power is not on. Slide power switch ON.
	4.8V NiMH rechargeable battery pack power is weak. Charge the battery pack for 6 hours or use the DVD player with the power adapter plugged into a standard wall outlet.
	DVD player is in sleep mode. Slide the power switch on the DVD player OFF and then back ON again.
DVD or CD does not play	There is no DVD or CD in the player. Insert a DVD or CD.
	DVD player door is open. Make sure the door is closed and latched.
	DVD or CD is not properly inserted into player. Check to make sure the DVD or CD is inserted with the playback side facing down.
	DVD or CD is dirty. Clean the disc.
	Enhanced DVD's or CD's may not work with this DVD player. Use only purchased DVD's or CD's.
No sound	Headphone (not included) pin is inserted into the headphone jack. Use the headphones (not included) or remove the headphone pin from the headphone jack.
	AV cable (not included) plug is inserted into TV connect jack. Watch DVD on TV or remove the AV cable (not included) plug from the TV connect jack.

Troubleshooting

Problem	Solution
DVD player operates erratically	4.8V NiMH rechargeable battery pack power is weak. Recharge the battery pack for 6 hours or use the DVD player with the power adapter plugged into a standard wall outlet.
	Static electricity can cause the DVD player to operate erratically. Electronics need to be reset. Slide the power switch on the DVD player OFF and then back ON again.
Battery compartment door feels warm	It is normal for the battery to get warm during charging and is not reason for concern.
L.E.D. on DVD player is flashing	The L.E.D. begins flashing approximately 10 minutes before power turns off and the battery needs to be charged. Recharge the battery pack for 6 hours.
	Battery pack is charging while DVD player power is OFF.
DVD player power switch is in the ON position ● but there is no power and power adapter is plugged into player and wall outlet	DVD player is in sleep mode. Slide the power switch on the DVD player OFF and then back ON again.

Care

- Keep water, sand and dirt off of the DVD player.
- The DVD player has no consumer serviceable parts. Do not take this toy apart.
- Before cleaning, unplug the power adapter from the DVD player. Wipe this product clean with a damp cloth. Do not use alcohol, benzene, thinner, other chemical cleaners or aerosol cleaners on or in this product. Do not immerse.

FCC Statement

United States Only

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

ICES-003

This Class B digital apparatus complies with Canadian ICES-003.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB, Helpline: 01628 500303,
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.



www.fisher-price.com

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

This product contains one or more programs protected under international and U.S. copyright laws as unpublished works. They are confidential and proprietary to Dolby Laboratories. Their reproduction or disclosure, in whole or in part, or the production of derivative works therefrom without the express permission of Dolby Laboratories is prohibited. Copyright 1993-2002 by Dolby Laboratories.

All rights reserved.

Manufactured under license from Dolby Laboratories.



"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2008 Mattel, Inc. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, Inc. unless otherwise indicated.