




fisher-price.com

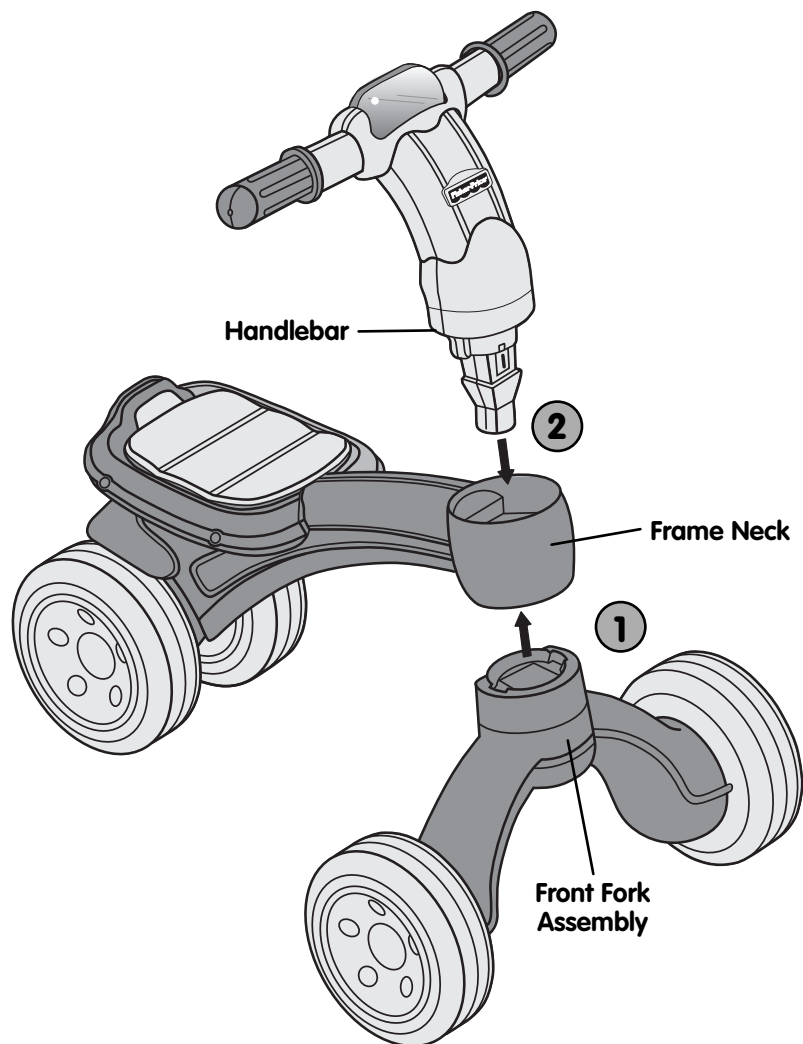

- Please keep this instruction sheet for future reference, as it contains important information.
- Maximum weight: 45 lbs. (20 kg).
- Adult assembly is required. No tools are needed for assembly.
- Adult supervision is required.
- Never use near steps.
- Choose areas for riding that are free of obstacles.
- Learn to stop safely.
- Use with caution as this product requires skill to operate safely to avoid falls, collisions, and injuries to yourself (the rider) and others.
- Periodically inspect this product for wear or damage. Check all nuts and bolts, and tighten as needed. Replace worn or broken parts immediately.
- To clean, use a mild soap and water solution and a clean cloth. Rinse clean with water to remove soap residue.

Assembly

- 1 • Please wipe each part with a clean, dry cloth before assembly.
 - Fit the front fork assembly up into the bottom of the frame neck.
- 2 • Position the handlebar so the Fisher-Price® logo faces you. Insert the handlebar down through the opening in the neck of the frame and into the front fork assembly. Push to **"snap"** in place.
 - Pull up on the handlebar to be sure it is secure.

CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

PRINTED IN MEXICO

©2011 Mattel. All Rights Reserved.

71159pr-0921