



Please save this instruction sheet for future reference, as it contains important information.

Wheel and size adjustments should be done by an adult.

For ages 2 years and up, shoe sizes 6-12.

My First Skates are designed to be worn on either foot.

Protective equipment shown in this photo is not included with this toy.

Safety Information


⚠️ WARNING

Protective equipment should be worn. Use helmet, wrist guards, knee pads and elbow pads (all not included). Not for children with a body weight of more than 44 lbs. (20 kg).

IMPORTANT! Please take a moment to review the following safety tips with your skater.

- Your skater should wear shoes or sneakers, not open-toe shoes.
- Your skater should wear a helmet, knee pads, wrist guards and elbow pads to guard against bumps and bruises (all not included).
- Keep loose pant legs away from the wheels.
- Supervise beginner skaters. Hold the beginner's hand and guide the new skater along a smooth, level surface.
- Make sure your skater learns how to brake and stop safely in these skates.
- Choose areas for skating which are free of obstacles.
- Never skate in areas with water, wet spots, snow, ice, sand, oil, gravel etc.
- Make sure your skater never skates on streets, roadways and driveways which enter vehicle traffic routes.
- Towing skaters with bicycles or cars is unsafe.
- Do not skate at night.
- Make sure your skater does not skate down hill. Braking is gradual with these skates. Your skater should keep this in mind to allow enough stopping distance.
- Please use with caution, as this product requires skill to operate safely. Avoid falls, collisions, and injuries to yourself and others.
- Before skating, check to be sure all wheels, the brake, straps and other plastic parts are not loose, cracked, broken or worn out. Tighten all parts as necessary. If any parts are cracked, broken or worn out, discard the skates.

Wheel Control Adjustment

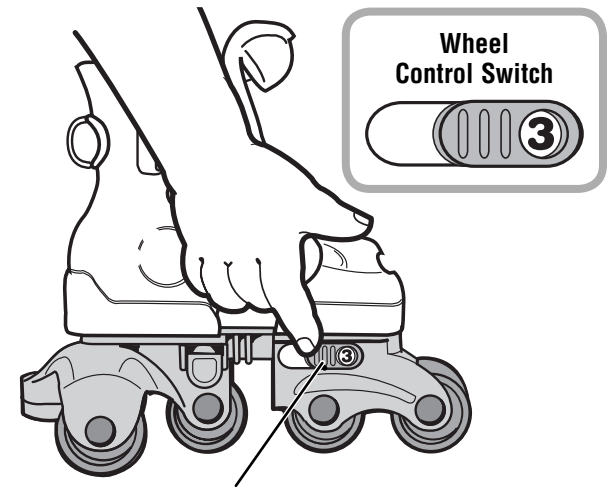

Wheel Control Switch

- Locate the wheel control switch on the side of the skate.
- Press and slide the wheel control switch to:



FULL STOP (WALK)

The second wheel completely locks. Your skater can walk on the skates to get used to them.



FORWARD ONLY

Your skater can roll forward. The second wheel locks to prevent the wheel from rolling backward. It is normal to hear a clicking sound in this mode.



FREE WHEELING

Your skater can roll forward and backward unrestricted.

- Make sure both skates are set to the same wheel control position.
- The wheel control function works only when your child is wearing and putting weight on the skate.

IMPORTANT! Your child must first learn how to stop using the heel brake in Forward Only and Free Wheeling modes. While leaning forward, bend at the knees and tilt a skate, toe up. Apply pressure to the heel brake. The heel brake stops your skater gradually. **Please be sure your skater keeps this in mind and always allows enough stopping distance.**

Consumer Information



CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.


New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.


Care

- Periodically lubricate the rear axle on each skate with a little petroleum jelly.
- Check plastic parts on a regular basis and discard if broken or cracked.


Fitting the Skates

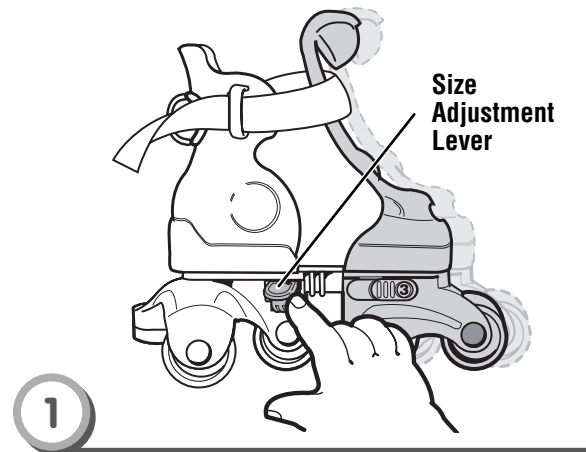

- Lift the size adjustment lever.
- Pull the front of the skate to the fully extended position.
- Repeat this procedure to open the other skate to the fully extended position.

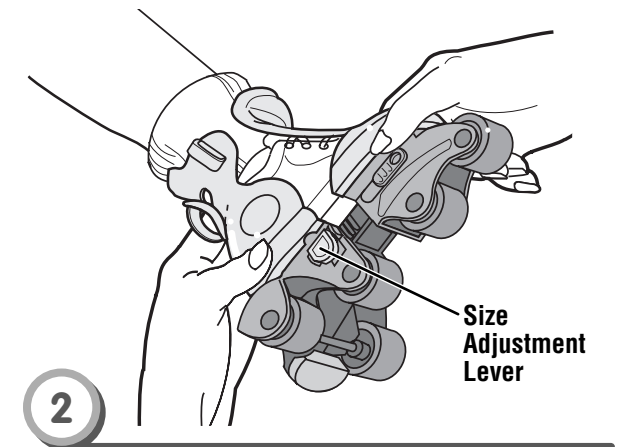

- Make sure your child is seated.
- Place your child's foot in the skate.
- Push the front of the skate to shorten it to the appropriate size for your child.
- Press the size adjustment lever down until it “snaps” into place.
- Adjust the size of the other skate to your child's other foot.

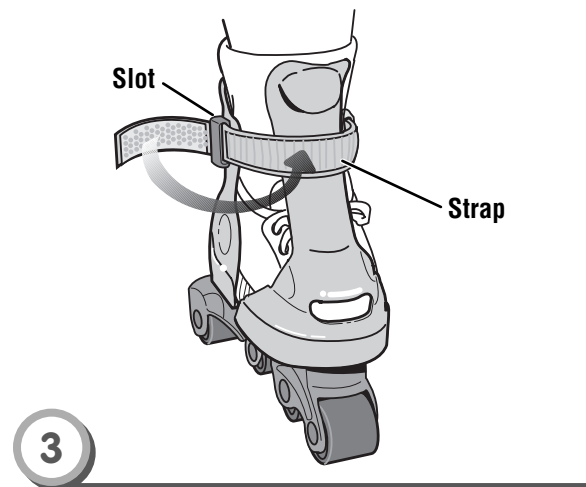

- Insert the strap into the slot on the side of each skate.
- Pull the strap tight and fold it back to fasten for a secure fit. Repeat this procedure to fasten the strap on the other skate.