

GAMESTER

PS2

Arcade Stick


Instruction Manual



PROGRAMMING YOUR ARCADE STICK:

1. Press Program (Px) button until the green light is ON.
2. Press the combo button (S1 or S2) you wish to program. The green light flashes once and is ON.
3. Press the Action buttons in the sequence that you wish to program. If a delay is required between actions, the SELECT button is used. If holding a button down is part of the combo, press the action button multiple times in a row. Each press represents 1/20 of a second. The green light flashes once to confirm each button press.
4. When finished programming your sequence, press the Program (Px) button. The green light goes out to confirm.
5. During gameplay, simply press the programmed combo button (S1 or S2) to execute your personal combo.

EXAMPLE:

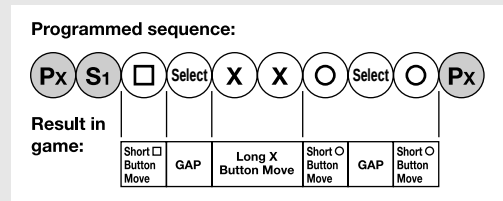

SELECTING CONTROLLER MODE:

Analog Dpad Mode (AD-Mode):

1. Press the mode button once to go into Analog Dpad Mode. The red light is ON. The joystick would be mapped to the Dpad.
2. Press the mode button again to return to Digital Mode.

Analog L.Stick Mode (AS-Mode):

1. Press the mode button and hold (2-3 sec) till the red light flashes to go into Analog L.Stick Mode. The joystick would be mapped to the Left Analog Stick.
2. Press the mode button again to return to Digital Mode.

CHANGING YOUR JOYSTICK:

1. Remove the hex key from the right back of the base.
2. Insert the hex key into the hole with a white circle around it on the bottom of the arcade stick beneath the joystick position.
3. Select your desired joystick and place into position.
4. Hold the hex key in position and spin the joystick clockwise into the base until it is secure. Note: When hex key is removed joystick will still be able to spin freely.
5. Return hex key to its storage slot on the right back of the base.



TROUBLESHOOTING:

The Arcade Stick is not working:

1. Power off your PS2 console.
2. Make sure the connector plug is firmly attached to the PS2 console.
3. Power on your PS2 console.

The programmable buttons are not working:

1. Pause game.
2. Reprogram S1 or S2 buttons using the steps outlined above.
3. Resume Game.


Note: Arcade Stick will only be fully functional with Arcade Stick compatible games.



PROGRAMMER VOTRE STICK DE JEU :

1. Appuyez sur le bouton 'Program' (Px) jusqu'à ce que la lumière verte s'allume.
2. Appuyez sur le bouton de combo (S1 ou S2) que vous souhaitez programmer. La lumière clignote une fois et elle s'allume.
3. Appuyez sur les boutons d'action dans l'ordre dans lequel vous souhaitez les programmer. Si un délai est nécessaire entre les actions, il faut se servir du bouton SELECT. Si le combo nécessite qu'un bouton soit maintenu enfoncé, appuyez sur le bouton d'action plusieurs fois de suite. Chaque pression représentant 1/20 de seconde. La lumière verte clignote une fois pour confirmer chaque pression de bouton.
4. Une fois que vous avez terminé de programmer votre séquence, appuyez sur le bouton 'Program' (Px). La lumière verte s'éteint pour le confirmer.
5. Pendant le jeu, il suffit d'appuyer sur le bouton de combo programmé (S1 ou S2) pour exécuter votre combo personnalisé.

EXEMPLE :

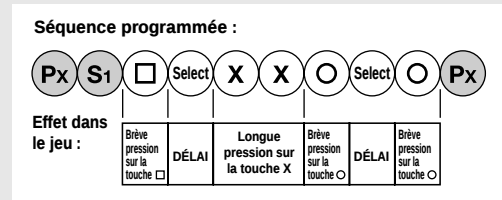

SÉLECTION DU MODE DE LA MANETTE :

Mode analogique - touches directionnelles (mode AD) :


1. Appuyez une fois sur la touche de mode afin de passer en mode analogique - touches directionnelles. Le témoin lumineux rouge sera allumé. Le joystick sera associé aux touches directionnelles.
2. Appuyez de nouveau sur la touche de mode pour revenir en mode numérique.

Mode joystick analogique gauche (mode AS) :

1. Pour passer en mode Joystick analogique gauche, appuyez sur le bouton de mode et maintenez-le enfoncé pendant 2 à 3 secondes jusqu'à ce que le témoin lumineux rouge clignote. Le joystick sera associé au joystick analogique gauche.
2. Appuyez de nouveau sur la touche de mode pour revenir en mode numérique.

CHANGEMENT DE JOYSTICK :

1. Extrayez la clé six pans de la partie droite du socle.
2. Insérez la clé six pans dans le trou entouré d'un cercle blanc situé à l'arrière du Stick Arcade, sous l'emplacement du joystick.
3. Sélectionnez le joystick de votre choix et mettez-le en place.
4. Maintenez la clé six pans en position, insérez le joystick dans le socle et faites-le tourner dans le sens des aiguilles d'une montre jusqu'à ce qu'il soit fixé. Note : vous pourrez orienter librement le joystick après avoir retiré la clé six pans.
5. Remplacez la clé six pans dans son logement situé dans la partie droite du socle.

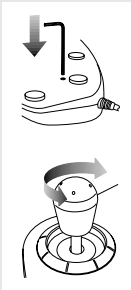

DÉPANNAGE :

Le Stick Arcade ne fonctionne pas :

1. Éteignez la console PS2.
2. Vérifiez que le connecteur est fermement inséré dans la console PS2.
3. Rallumez la console PS2.

Les touches programmables ne fonctionnent pas :

1. Mettez le jeu en pause.
2. Reprogrammez la touche S1 ou S2 en suivant les étapes détaillées plus haut.
3. Reprenez la partie.


Note: Le Stick Arcade ne sera intégralement fonctionnel que dans le cadre des jeux compatibles Stick Arcade.



DIE PROGRAMMIERUNG IHRES ARCADE-STICKS:

1. Drücken Sie die Programmier Taste (Px), bis das grüne Licht leuchtet.
2. Drücken Sie die Kombo-Taste (S1 oder S2), die Sie programmieren möchten. Das grüne Licht blinkt einmal und ist AN.
3. Drücken Sie die Aktionstasten in der Reihenfolge, die Sie programmieren möchten. Falls eine Pause zwischen Aktionen erforderlich ist, wird dazu die SELECT-Taste benutzt. Falls eine Taste als Teil der Kombo gedrückt gehalten wird, drücken Sie die betreffende Aktionstaste mehrmals hintereinander. Jeder Tastendruck steht für 1/20 einer Sekunde. Das grüne Licht blinkt jeweils einmal, um jeden Tastendruck zu bestätigen.
4. Wenn Sie die gewünschte Sequenz programmiert haben, drücken Sie die Programmier Taste (Px). Zur Bestätigung erlischt das grüne Licht.
5. Beim Spielen können Sie nun einfach die programmierte Kombo-Taste (S1 oder S2) drücken, um Ihre persönliche Kombo auszuführen.

BEISPIEL:

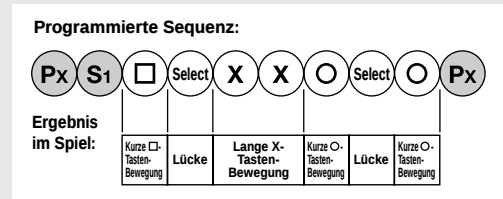

AUSWAHL DES STEUERUNGSMODUS:

Analoger Steuerkreuz-Modus (AD-Modus):


1. Drücken Sie die Modus-Taste einmal, um in den analogen Steuerkreuz-Modus zu wechseln. Das rote Licht ist AN. Das Steuerkreuz ist aktiviert.
2. Drücken Sie die Modus-Taste erneut, um in den digitalen Modus zurückzukehren.

Analoger L.Stick-Modus (AS-Modus):

1. Drücken Sie die Modus-Taste und halten diese für 2-3 Sek. gedrückt, bis das rote Licht aufleuchtet, um in den analogen L.Stick-Modus zu wechseln. Der linke analoge Stick ist aktiviert.
2. Drücken Sie die Modus-Taste erneut, um in den digitalen Modus zurückzukehren.

AUSWECHSELN DES JOYSTICKS:

1. Nehmen Sie den Sechskantstiftschlüssel rechts hinten vom Gehäuse ab.
2. Stecken Sie den Sechskantstiftschlüssel in das von einem weißen Kreis umgebene Loch an der Unterseite des Arcade Sticks unterhalb der Joystick-Position.
3. Wählen Sie den gewünschten Joystick und bringen Sie ihn in die richtige Position.
4. Halten Sie den Sechskantstiftschlüssel fest und drehen Sie den Joystick im Uhrzeigersinn in das Gehäuse, bis er richtig sitzt. Hinweis: Wenn der Sechskantstiftschlüssel entfernt wird, ist der Joystick weiterhin frei beweglich.
5. Stecken Sie den Sechskantstiftschlüssel wieder in den Halterungsschlitz rechts hinten am Gehäuse.

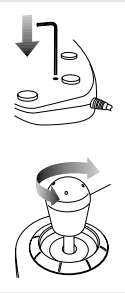

PROBLEMBEHANDLUNG:

Der Arcade Stick funktioniert nicht:

1. Schalten Sie Ihre PS2-Konsole aus.
2. Stellen Sie sicher, dass der Gerätestecker richtig an die PS2-Konsole angeschlossen ist.
3. Schalten Sie Ihre PS2-Konsole wieder ein.

Die programmierbaren Tasten funktionieren nicht:

1. Pausieren Sie das Spiel.
2. Programmieren Sie die S1 und S2 Tasten neu, indem Sie die oben aufgeführten Schritte durchführen.
3. Fahren Sie mit dem Spiel fort.

Bemerkung: Der Arcade Stick ist nur mit Arcade Stick kompatiblen Spielen voll funktionstüchtig.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

90-DAY LIMITED WARRANTY

(This product warranty is valid in the United States and Canada only)

Radica Games Limited warrants this product for a period of 90 days from the original purchase date under normal use against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship. Radica Games Limited will not be liable for any costs incurred due to loss of use of this product or other incidental or consequential costs, expenses or damages incurred by the purchaser. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights, which vary from state to state.

During this 90-day warranty period, the game will either be repaired or replaced (at our option) without charge to the purchaser when returned prepaid with proof of date of purchase to: Radica USA, Ltd., 13628-A Beta Road, Dallas, Texas 75244, USA. Please remove the batteries and wrap the unit carefully before shipping. Please include a brief description of the problem along with your return address and mail it postage prepaid.

PRODUCT WARRANTY

(This product warranty is valid in the United Kingdom only)

All products in the RADICA® range are fully guaranteed for a period of 3 months from the original purchase date under normal use, against defective workmanship and materials (batteries excluded). This warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

In the unlikely event that you do experience a problem within the first 3 months, please telephone the UK Technical Support team: Tel. 0906 213 0001 (call cost 25p a minute).

YOUR STATUTORY RIGHTS ARE NOT EFFECTED.

RADICA:®
GAMESTER®
©2003 RADICA GAMES LTD.
PRODUCT SHAPE™
ALL RIGHTS RESERVED

P/N 82378300 Rev.B

Distributed in the U.K. by:
RADICA U.K. Ltd.
The Old Stables, Munns Farm,
Cole Green, Hertfordshire,
SG14 2NL, England

Distributed in the U.S. by:
RADICA USA, Ltd.
13628 - A Beta Road, Dallas,
Texas 75244 - 4510, U.S.A

All other product and company names mentioned are the trademarks of their respective owners.
Not suitable for children under 8 years of age.
Nicht für Kinder unter 8 Jahren geeignet.
Ne convient pas aux enfants de moins de 8 ans.

Playstation is a registered trademark of Sony Computer Entertainment Inc (SCEI).

This product is not designed, manufactured, sponsored or endorsed by SCEI.

Please retain this for future reference



US Player Helpline
1.800.803.9611
UK Player Helpline
+44 (0)906 213 0001

Calls from the UK are charged at £0.25 per minute and will show up on your standard telephone bill. Helpline hours are 8am-11pm, 7 days a week.



www.theunfairadvantage.com