
Fisher-Price®

FPM43

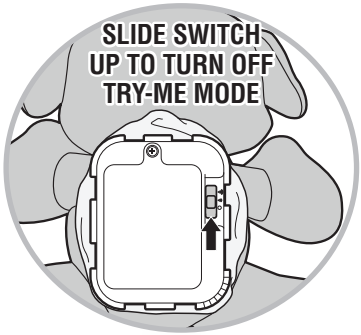


Press and hold Puppy's Smart Stages™ foot to change modes!

Keep these instructions for future reference, as they contain important information.
Requires three AA batteries (included).
Batteries included are for demonstration purposes only.
Battery replacement is required. Only adults should replace batteries.
Required tool: Phillips screwdriver (not included).
This toy is surface washable only. Do not immerse.

fisher-price.com

Battery Replacement

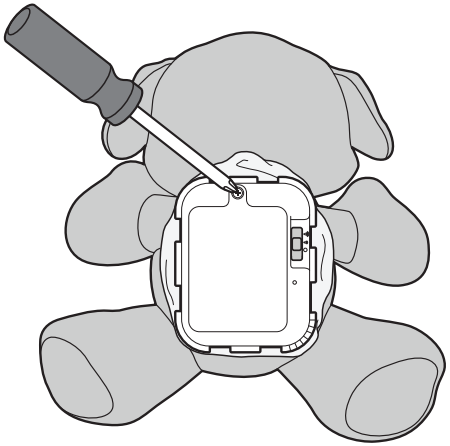

- For longer life, use **alkaline** batteries.
- Open the fasteners on the back of the toy to access the battery compartment.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door. Remove the batteries and properly dispose.
- Insert three, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- Close the fasteners on the toy.
- If the toy begins to operate erratically you may need to reset the electronics. Slide the power/volume switch off and back on.
- When lights and sounds become faint or stop, it's time for an adult to change the batteries.



Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

Battery Safety Information




In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable.
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Learning content changes as baby grows!

Press any of Puppy's touchpoints for sing-along songs, tunes and phrases!

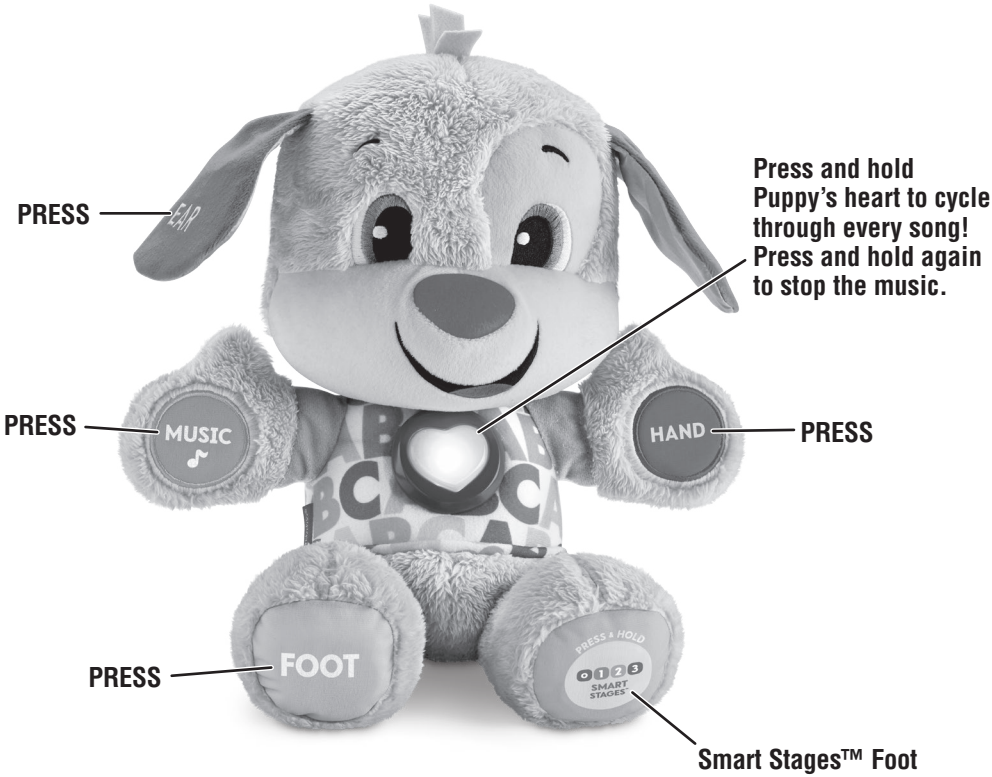

- Open the fasteners on the back of the toy. Slide the power/volume to ON with low volume 🔉, ON with high volume 🔊 or OFF O.

- Press and hold Puppy's Smart Stages™ foot to change modes!
  1. **Explore** - Teaches baby first words, letters, colours, parts of the body and more!
  2. **Encourage** - Teaches counting and colours with sing-along songs.
  3. **Pretend** - Baby enjoys role play fun with songs, phrases and music.
  - **Sleep** - No sound or lights.

service.fisher-price.com

Great Britain: Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk.

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.

Malaysia: Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.

©2017 Mattel. All Rights Reserved.
PRINTED IN CHINA

FPM43-ZZ70
1101468031-UU1