Fisher-Price®

Instructions

Lasting Play Musical Mobile™


- **Requires two size "C" alkaline batteries.**
- **Adult assembly is required**
- **Please save these instructions for future reference.**

Message to Parents

Thank you for purchasing the Fisher-Price Lasting Play Musical Mobile™. We hope it will bring you and your child many years of enjoyment.


The Fisher-Price Lasting Play Musical Mobile™ has been designed to be used as your child grows. It can be used as a musical crib mobile with your child from birth to 5 months old. For children 6 to 36 months old, the Lasting Play Musical Mobile™ can be altered to be used as a music box for the crib or it can be carried around and played with by toddlers and young preschool children.

IMPORTANT NOTE: Always use the straps provided to attach this product to a crib.

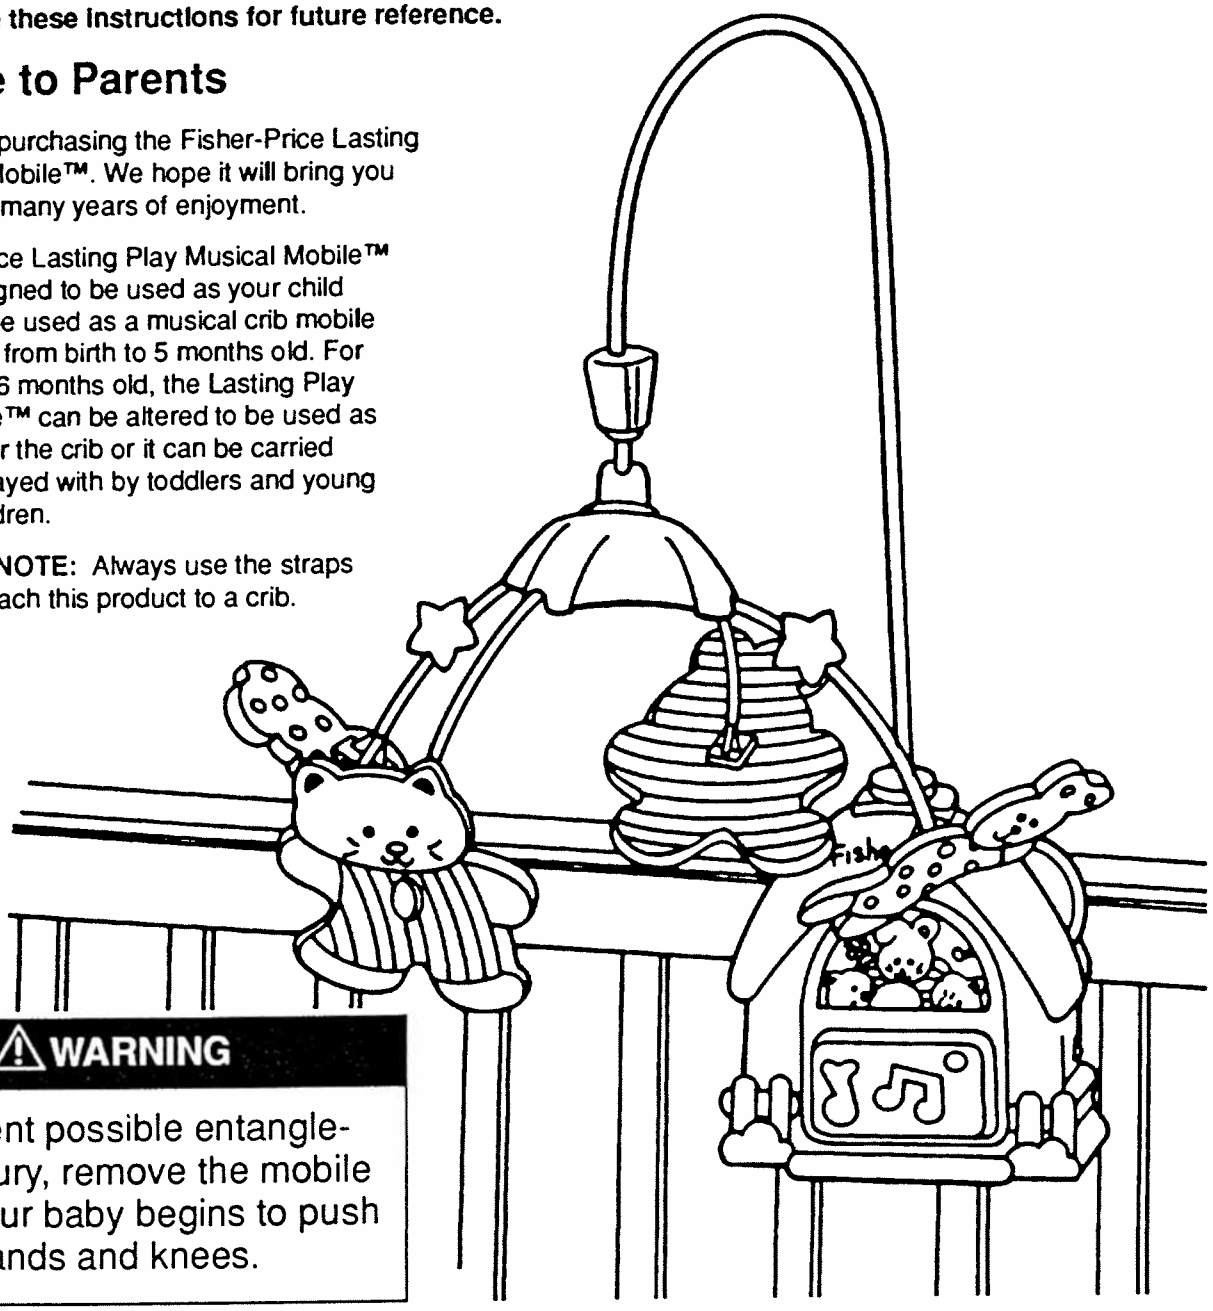

⚠ WARNING

To prevent possible entanglement injury, remove the mobile when your baby begins to push up on hands and knees.

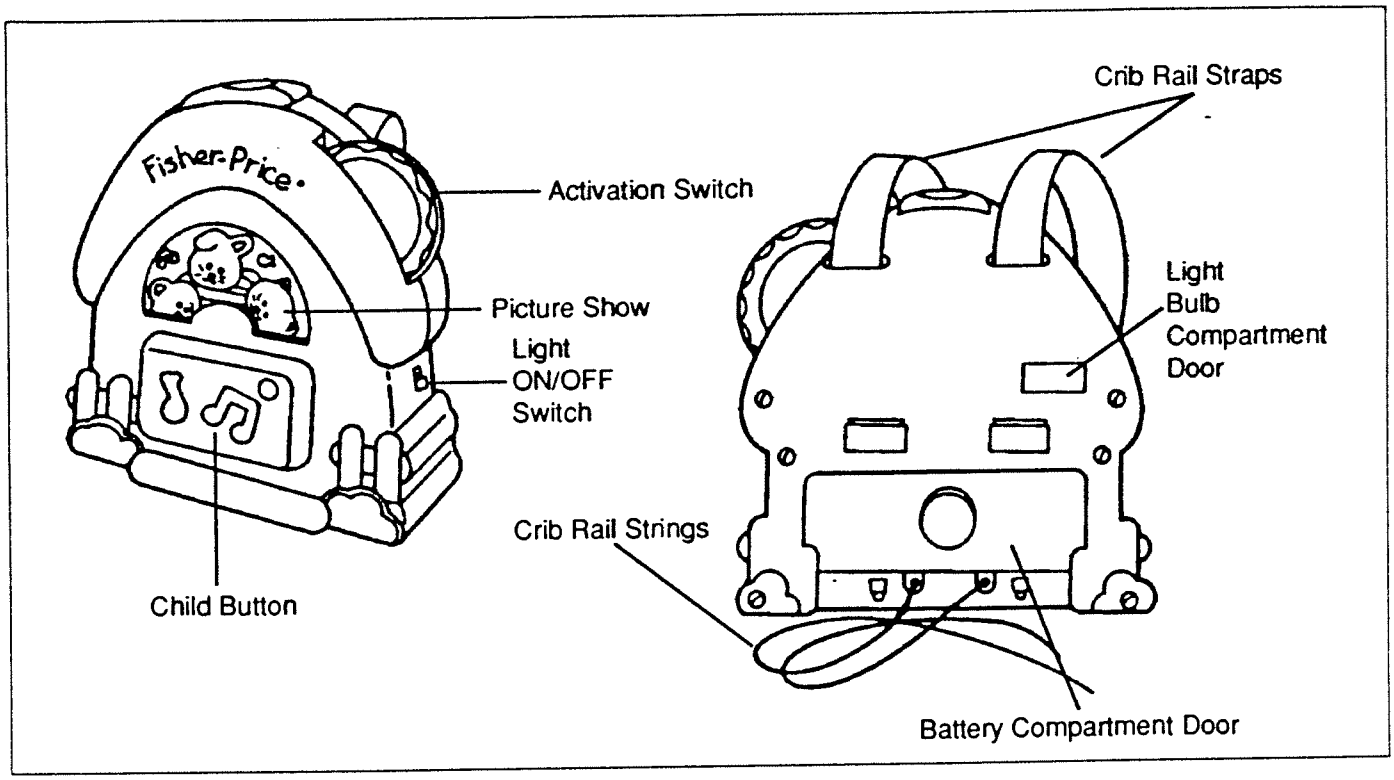

Features

Light ON/OFF Switch

Lights up the picture show disk.

Parent Mode

Slide the activation switch to the setting. Music will play and the picture show will turn for about 30 minutes.

Child Mode

Slide the activation switch to the setting. Your child can then press the child button for music, lights and a picture show. The music plays as the picture show turns for about 15 seconds (the light for about seven seconds) at a time, to encourage your child to keep playing and playing.

Battery Installation


1. Unfasten the screw in the battery compartment door with a Phillips screwdriver. The screw will remain in the door.
2. Open the battery compartment door.
3. Insert two size "C" alkaline batteries, as indicated inside the battery compartment.
4. Close the battery compartment door.
5. Tighten the screw with a Phillips screwdriver. Do not over-tighten.

PLEASE NOTE:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel cadmium) batteries.
- Remove the batteries during long periods of non-use. Never leave worn-out batteries in the unit. Battery leakage and corrosion can damage the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Remove rechargeable batteries from the unit before recharging.
- Charging of rechargeable batteries should only be done under adult supervision.
- Avoid short-circuiting the terminals of the battery.
- Remove exhausted batteries from the unit.
- To conserve battery power, slide the activation switch to the **OFF** setting when the Lasting Play Musical Mobile™ is not being used.

Assembly For Use As A Musical Crib Mobile

(For Infants - Birth to 5 Months)

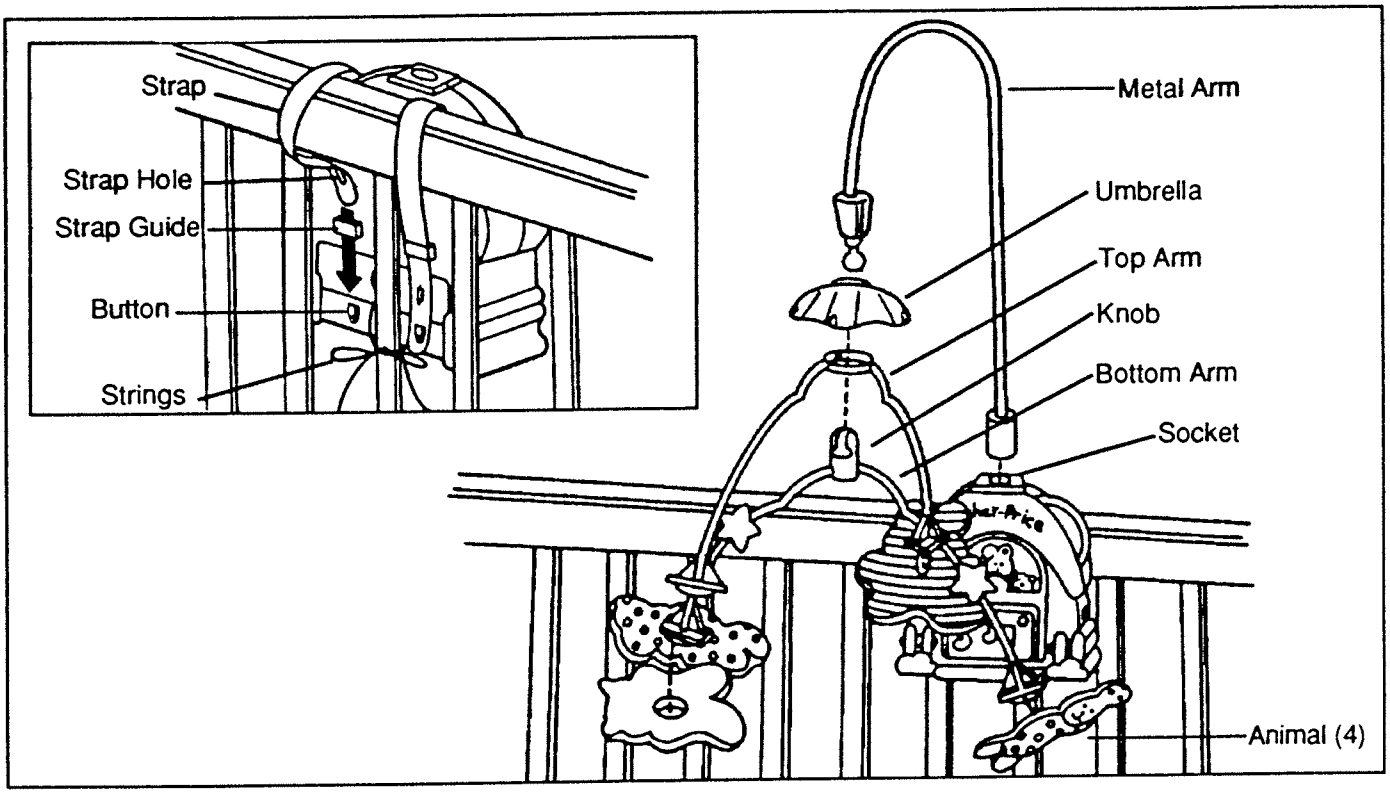

Music Box Crib Attachment

PLEASE NOTE: Attach the music box to the crib before installing the mobile.

1. Position the music box inside the crib.
2. Place one strap over the crib rail, and through the strap guide.

Suggestion: Bend the end of the strap back. This will make it easier to insert it into the strap guide.

3. Fasten the strap hole onto the button on the music box.
4. Repeat this procedure to attach and fasten the other strap.
5. Tie the strings tightly to a crib spindle.

PLEASE NOTE: The music box should be snug against the crib rail. Use the strap hole that provides the tightest fit.

Mobile Assembly

1. Place the top arm ring onto the bottom arm (with stars) knob. Make sure the notches in the top arm ring are aligned with the bottom arm.
2. Place the umbrella onto the arms, making sure all four corners have been snapped into place.
3. Attach the four animals to the end of the arms. You should hear a snap.


Suggestion: Position the solid side of the animals towards a very young baby. After 2-3 months, reposition some or all of the animals so that the character sides face the baby.

Mobile Music Box Assembly

1. Insert the end of the metal arm into the socket in the music box.
2. Rotate the metal arm until it drops into place.
3. Rotate the metal arm so that the mobile hangs over the crib.
4. Attach the mobile assembly to the metal arm.

Use As A Musical Crib Mobile

(For Infants - Birth to 5 Months)

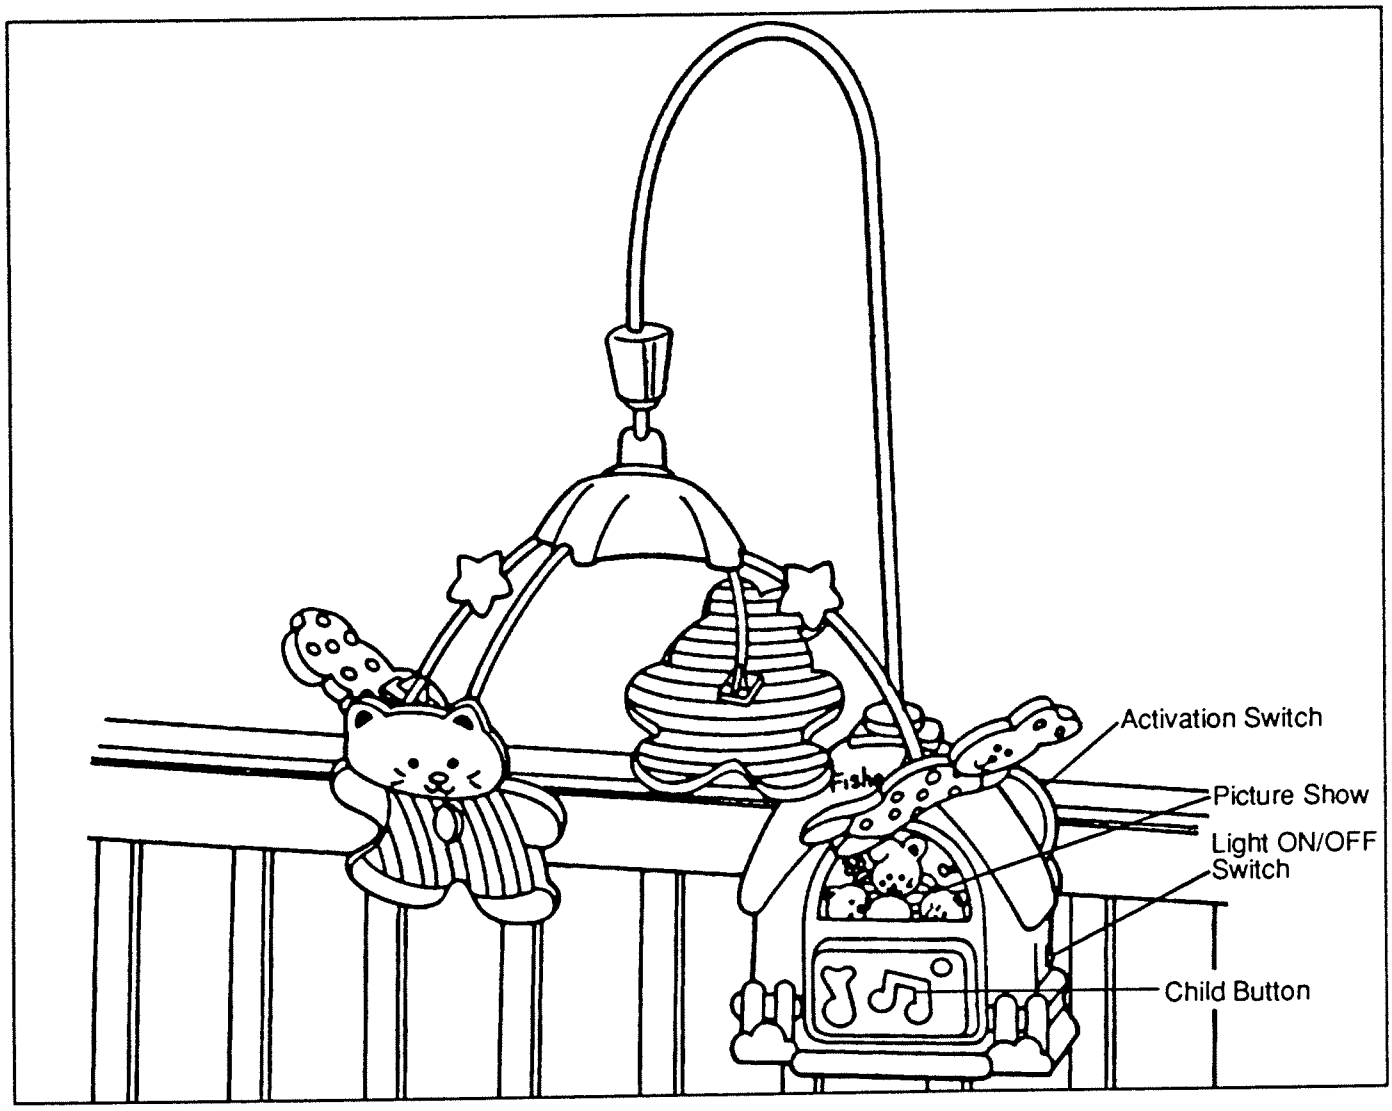

Parent Mode


- Slide the activation switch on the music box up, to the setting. The music will play and the picture show will turn for about 30 minutes.
- To turn on the light, slide the light ON/OFF switch up to the "ON" position. The light will remain on for four minutes.
- To turn off the music, slide the activation switch to the **OFF** setting.

Child Mode

- Slide the activation switch on the music box down, to the setting.
- Slide the light ON/OFF switch up to the "ON" position.
- When your baby presses the child button, the music will play for 15 seconds and the light will remain on for seven seconds.
- To turn off the music, slide the activation switch to the **OFF** setting.

Use As A Music Box

(For Children 6 to 36 Months)

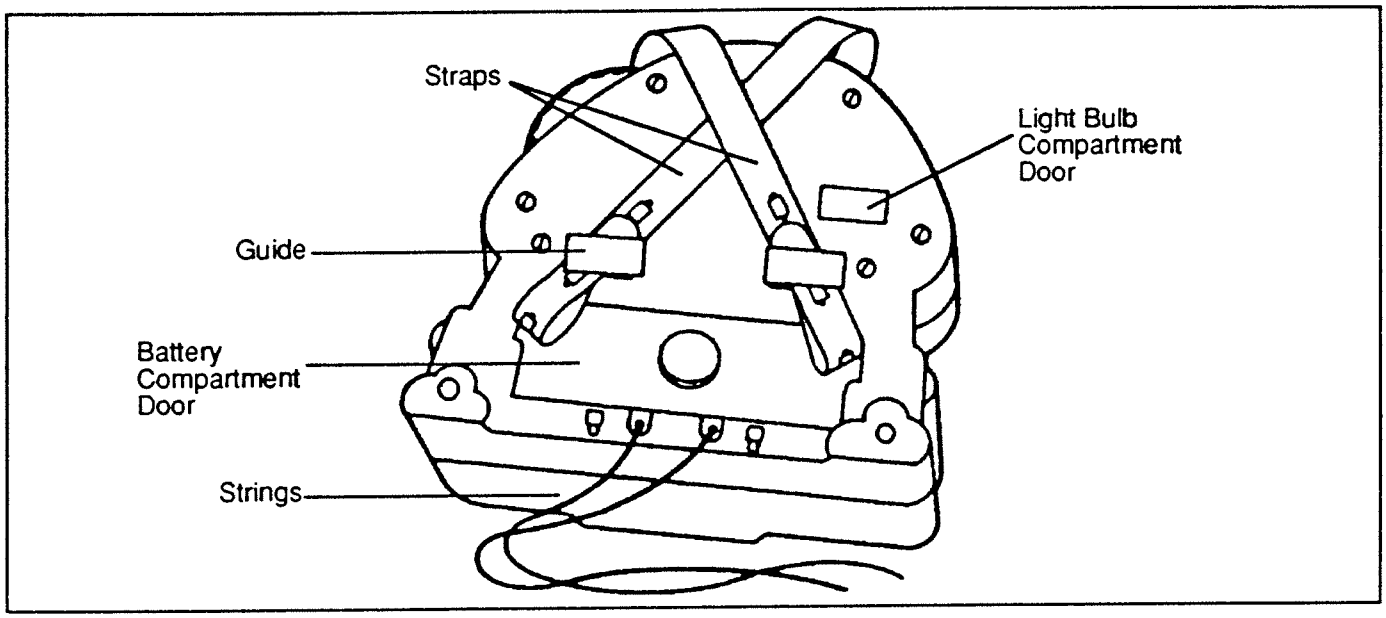

Crib Use

To remove the mobile section:

1. Remove the metal arm with mobile from the music box.
2. Store the mobile in a safe place for future use.
3. Push down on the top of the music box to be sure that the straps are secure and the music box is attached high and snugly against the crib rail.

Portable Use

To remove the music box from the crib rail:

1. Untie the strings.
2. Unhook the straps from the buttons on the music box.
3. To store the straps:
   - Cross the straps on the back of the music box.
   - Insert the straps into the guides and pull them tight.
   - Loop the ends of the straps and insert them back into the guides, as shown.
4. To store the strings:
   - Unfasten the screw in the battery compartment door with a Phillips screwdriver. The screw will remain in the door.
   - Open the battery compartment door.
   - Insert the strings into the battery compartment .
   - Close the battery compartment door.
   - Tighten the screw with a Phillips screwdriver. Do not over-tighten.

Light Bulb Replacement

1. Unfasten the screw in the light bulb compartment door with a Phillips screwdriver. The screw will remain in the door.
2. Remove the light bulb compartment door.
3. Unfasten the screw in the clear light bulb cover.
4. Remove the clear light bulb cover.
5. Replace the old light bulb with a new PR 4 light bulb.
6. Replace the clear light bulb cover. Replace the screw and tighten with a Phillips screwdriver. Do not over-tighten.
7. Replace the light bulb compartment door. Tighten the screw with a Phillips screwdriver. Do not over-tighten.

Problems and Solutions

If you have any problems with your Fisher-Price Lasting Play Musical Mobile,™ carefully review this chart.

Problem	Probable Cause	Solution
Does not play continuously	Activation switch in wrong position	Make sure the activation switch is on the setting.
	Weak batteries	Replace both batteries with new size "C" alkaline batteries, as indicated inside the battery compartment.
	Battery placement incorrect	Remove the batteries and replace in correct orientation, as indicated inside the battery compartment.
Does not play when child button is pressed	Activation switch in wrong position	Make sure the activation switch is on the setting.
Distorted sound (sound was good but now is distorted)	Weak batteries	Replace both batteries with new size "C" alkaline batteries, as indicated inside the battery compartment.
No sound but motor runs	Weak batteries	Replace both batteries with new size "C" alkaline batteries, as indicated inside the battery compartment.
	Battery placement incorrect	Remove the batteries and replace in correct orientation, as indicated inside the battery compartment

For other problems, do not attempt repairs; please call Fisher-Price Consumer Affairs, toll-free at **1-800-432-KIDS** (1-800-432-5437) between 8 AM and 6 PM Eastern time, Monday through Friday, or write to: Fisher-Price, Inc., Attn: Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052. **Hearing-impaired consumers** using TTY/TDD equipment, please call 1-800-382-7470.

One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052, warrants that Lasting Play Musical Mobile™ is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase, except for the light bulb which is warranted for six (6) months only.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to the Fisher-Price Product Service Department at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

©1992 Fisher-Price, Inc., East Aurora, New York 14052

1250 2 866672