imaginext

FMX85
Jurassic Rex

EZ
ASSEMBLY
VIDEO

Scan the code. Watch it online!

fisher-price.com/assembly/jurassic-rex

Jurassic World is a trademark and copyright of Universal Studios
and Amblin Entertainment, Inc. Licensed by Universal Studios. All Rights Reserved.

©2018 Mattel. ® and ™ designate U.S. trademarks of Mattel, except as noted.
PRINTED IN MEXICO

FMX85-0970
1101935196-DOM

BEFORE YOU BEGIN:

Keep these instructions for future reference as they contain important information.

Adult assembly is required.
No tools needed.

Clean with a damp cloth.
Do not immerse.

1,5V AA (LR6) x 3

Three AA (LR6) **alkaline** batteries are required (not included).

For longer life, use **alkaline** batteries.

You'll need a Phillips screwdriver (not included) to install batteries.

INSTALL BATTERIES:

Locate the battery door on the underside of the toy.

Loosen the screw in the battery door and remove the door.

Insert three AA (LR6) **alkaline** batteries.

Replace the battery door and tighten the screw. Do not over-tighten.

If this toy begins to operate erratically, the electronics may need to be reset. Slide the power-volume switch off and back on.

When sound or light become faint or stop, it's time for an adult to change the batteries.

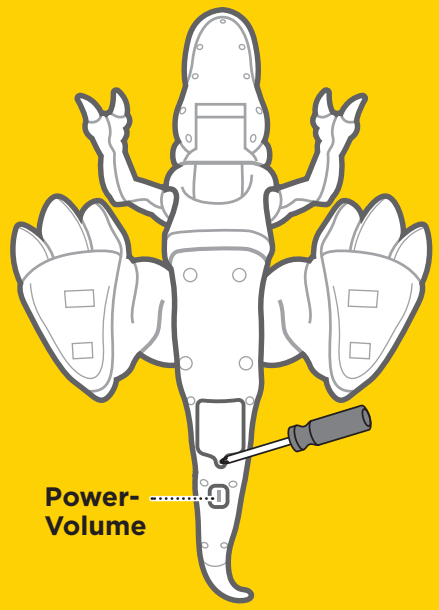

imaginext®

Jurassic Rex

FMX85

PARTS:

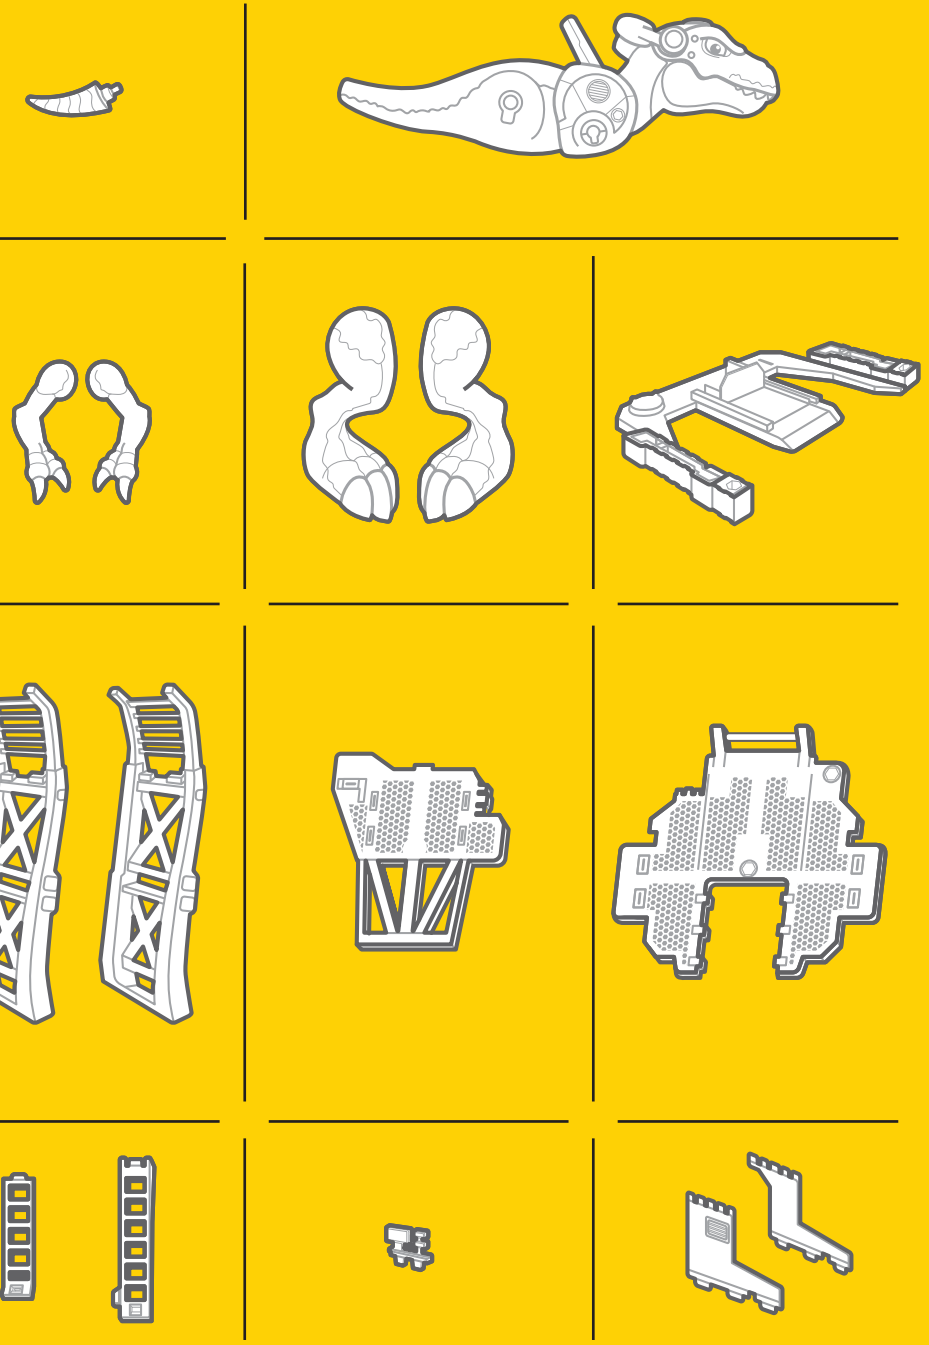

ASSEMBLY:

1.

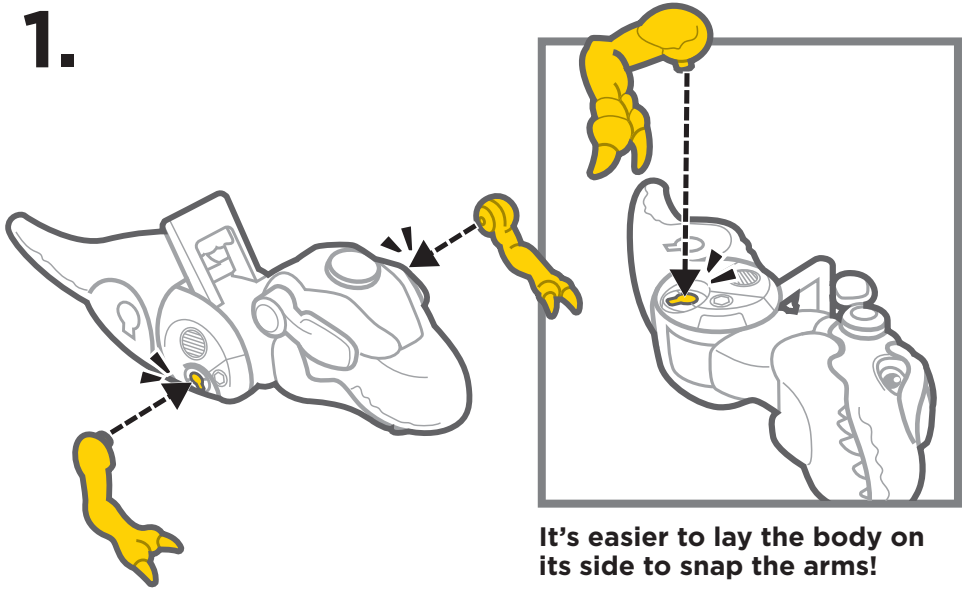

It's easier to lay the body on its side to snap the arms!

2.

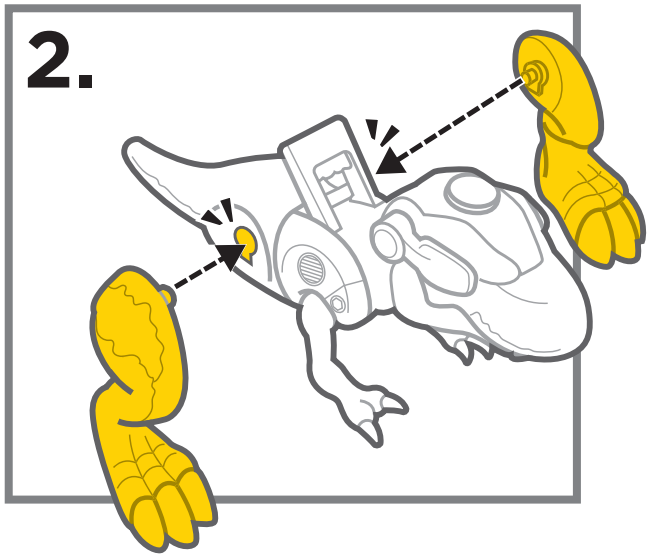

3.

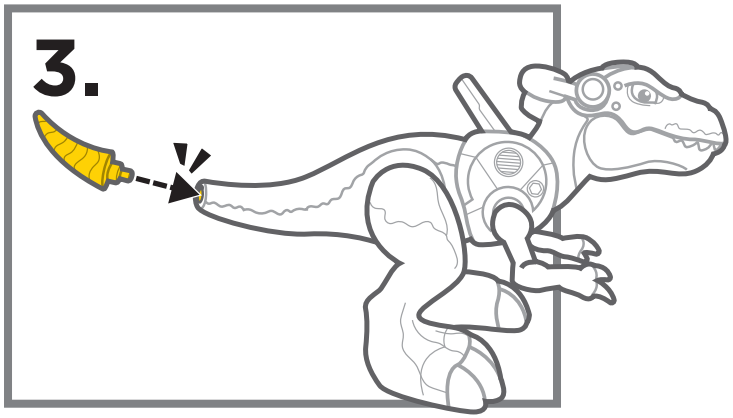

4.

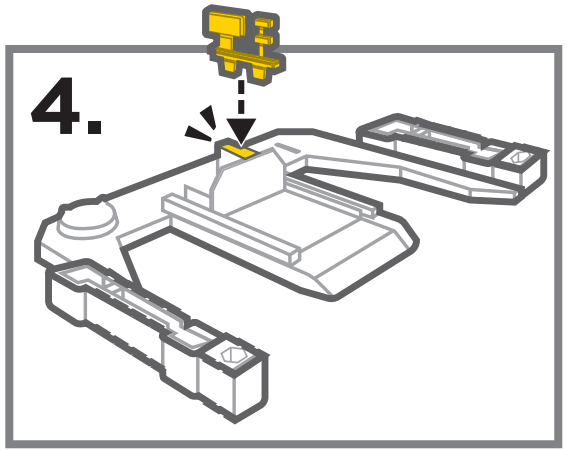

5.

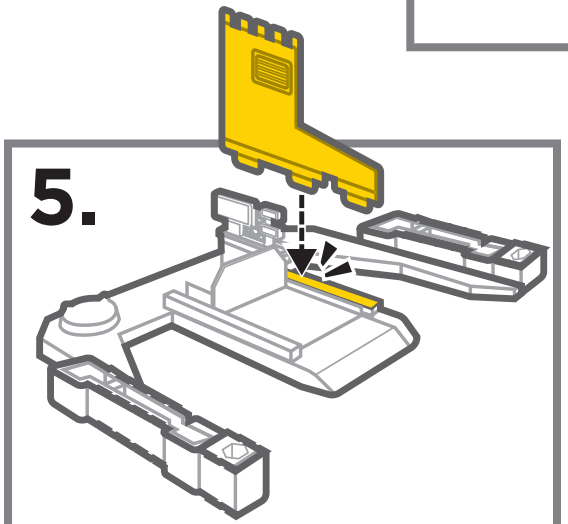

6.

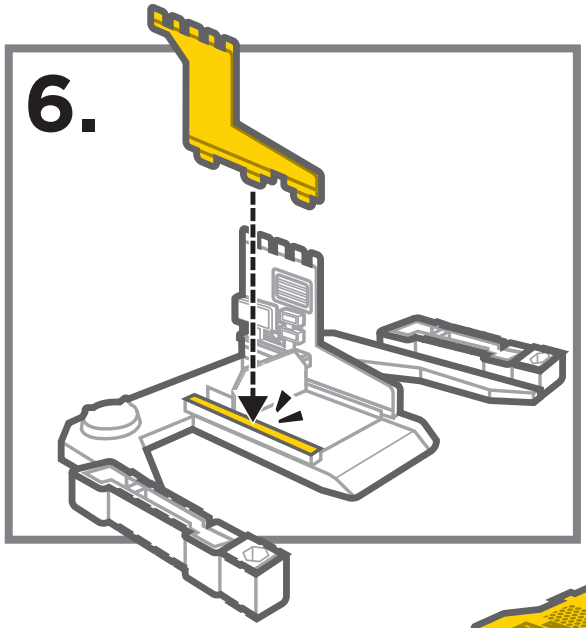

7.

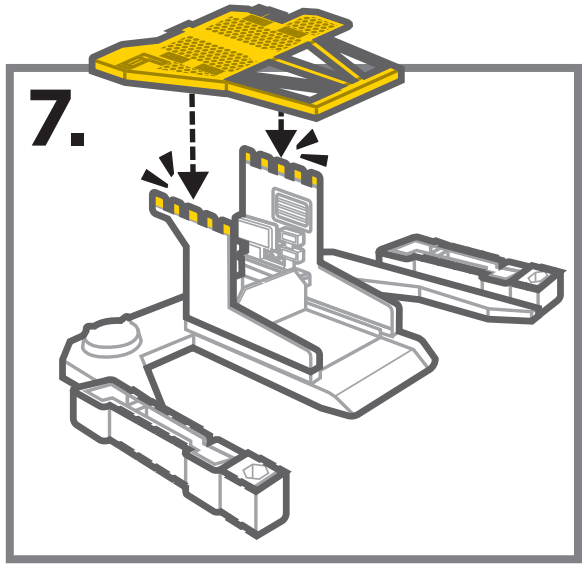

8.

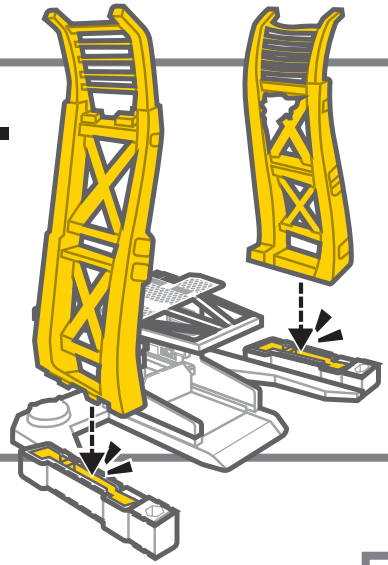

9.

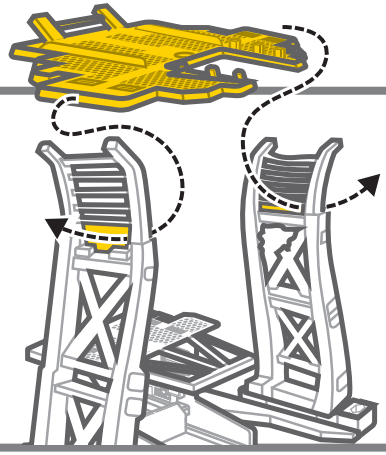

10.

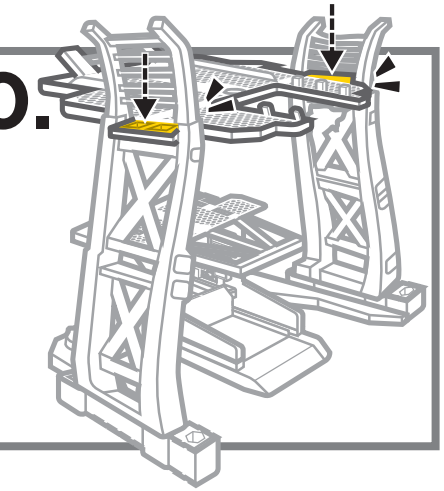

11.

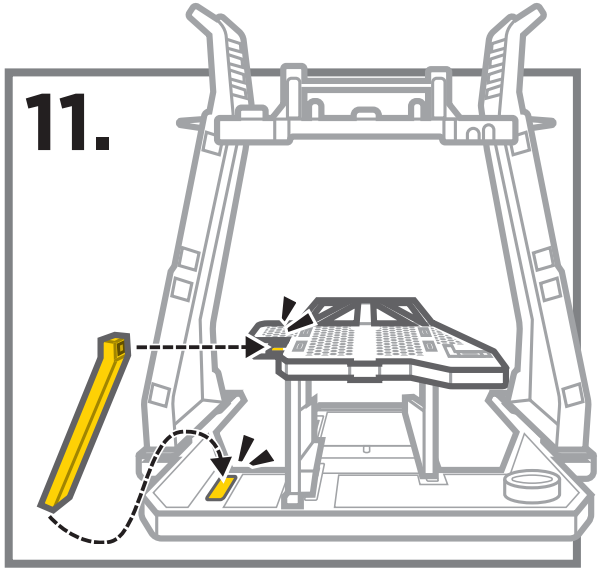

12.

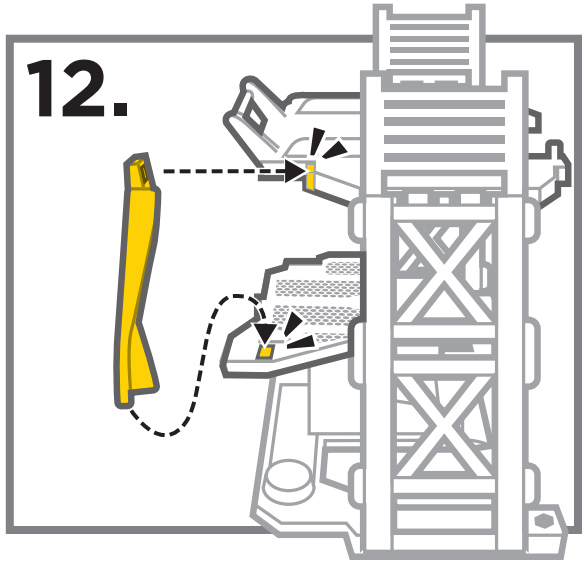

Questions? Scan this code!
fisher-price.com/assembly/jurassic-rex

EZ ASSEMBLY VIDEO

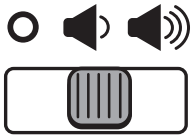

POWER-VOLUME SWITCH

Slide to turn power ON with low volume, ON with high volume or OFF when finished playing.

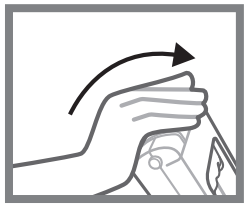

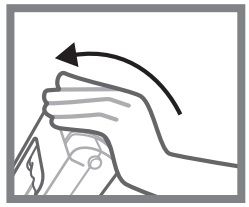

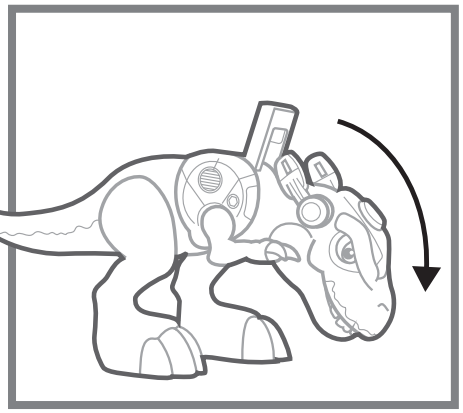

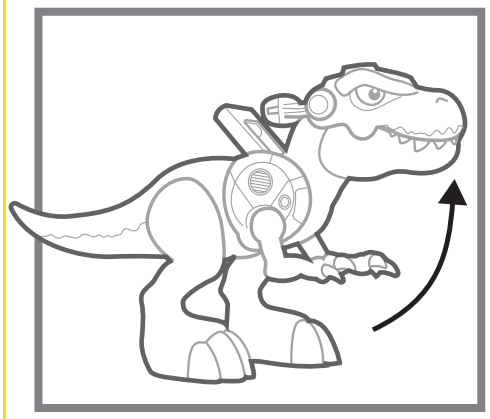

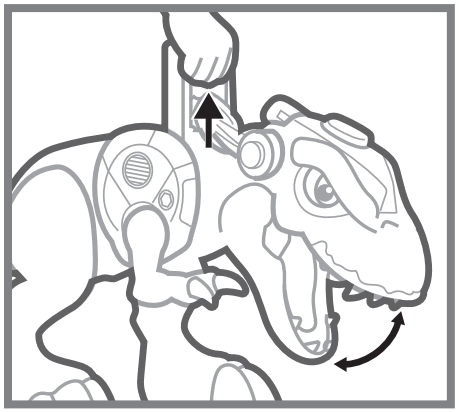

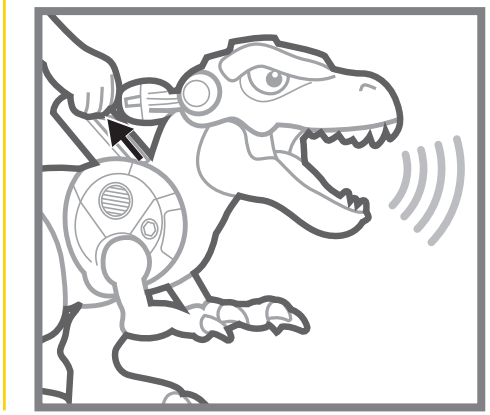

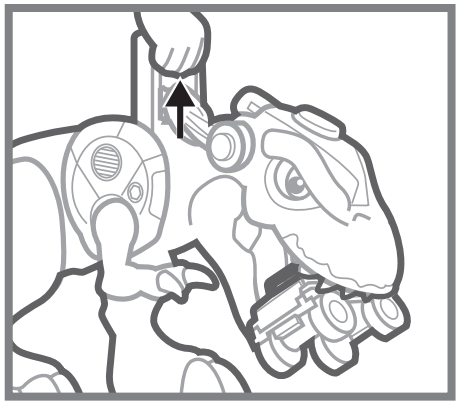

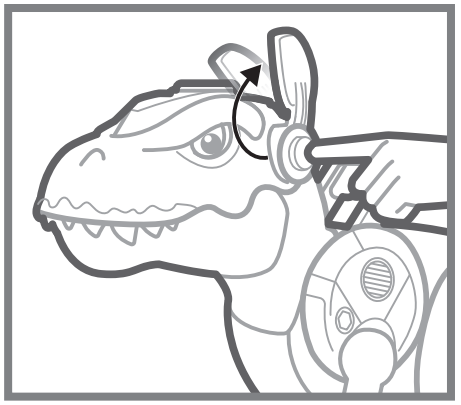

⚠ WARNING
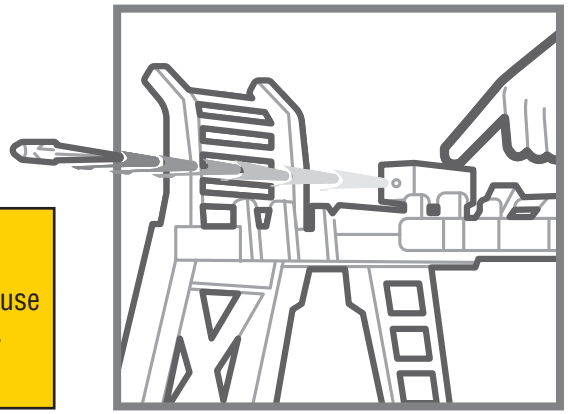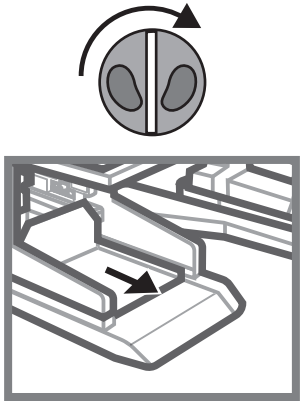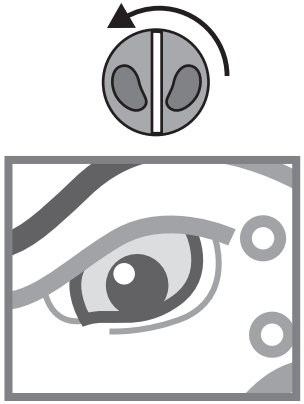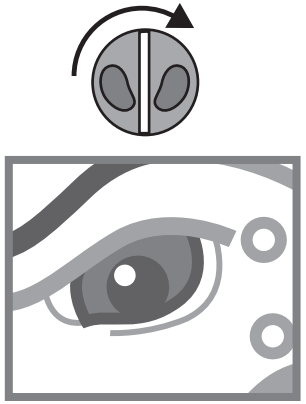
Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.