Consumer Information

Great Britain Helpline: 01628 500302. Mattel UK Ltd., Vanwall Business Park, Maidenhead SL6 4UB.

Learn every day - through fun, familiar play!

Make learning more fun with the whole collection of **Laugh & Learn™** toys.

With rich music, lyrics and lots of activities, they combine early academics and everyday experiences, for the way kids really learn.

Each sold separately and subject to availability.



H0675



G2809



G2811



G2808



H2219



G2810



G2807

©2004 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.
Fisher-Price, Inc., a subsidiary of Mattel, Inc. East Aurora, New York 14052, U.S.A.

PRINTED IN CHINA
H0681pr-0726

Fisher-Price®

H0681
Instructions

Learning Pots & Pans™



Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" batteries (included).

Adult assembly is required for battery replacement.

Tool required for battery replacement: Phillips screwdriver (not included).

Laugh & Learn™

www.fisher-price.com


Before Use

⚠ CAUTION

Please keep small parts such as the plastic tab out of children's reach. Throw the plastic tab away.

Note: A plastic tab was attached to the toy for in-store demonstration purposes. While the tab may have already been removed, check the back of the toy to be sure. If the plastic tab is still attached, pull and remove the tab. Throw the plastic tab away.

Battery Replacement

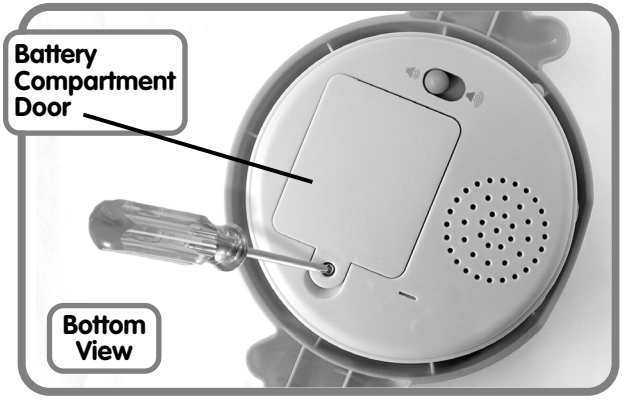


For best performance, we recommend replacing the batteries that came with this toy with three, new LR6 ("AA") alkaline batteries.

- Locate the battery compartment on the bottom of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three LR6 ("AA") **alkaline** batteries.

***Hint:** We recommend using **alkaline** batteries for longer life.*

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries!

Battery Safety Information



Shown Actual Size

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Care

- Surface wash only. Wipe with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the toy.

2 Fun Ways to Play!

- Locate the mode switch on the front of the toy.
- Slide the switch to either learning mode **ABC**; music mode ♫ or off O.
- When your child is finished playing with this toy, slide the mode switch to the off O position.
- Locate the volume switch on the bottom of the toy.
- Adjust volume to high 🔊 or low 🔉, for your child's comfort.
- Low battery power may affect toy function, including irregular sound/lights and the toy may not turn off.
- Replace all batteries with **alkaline** batteries only.

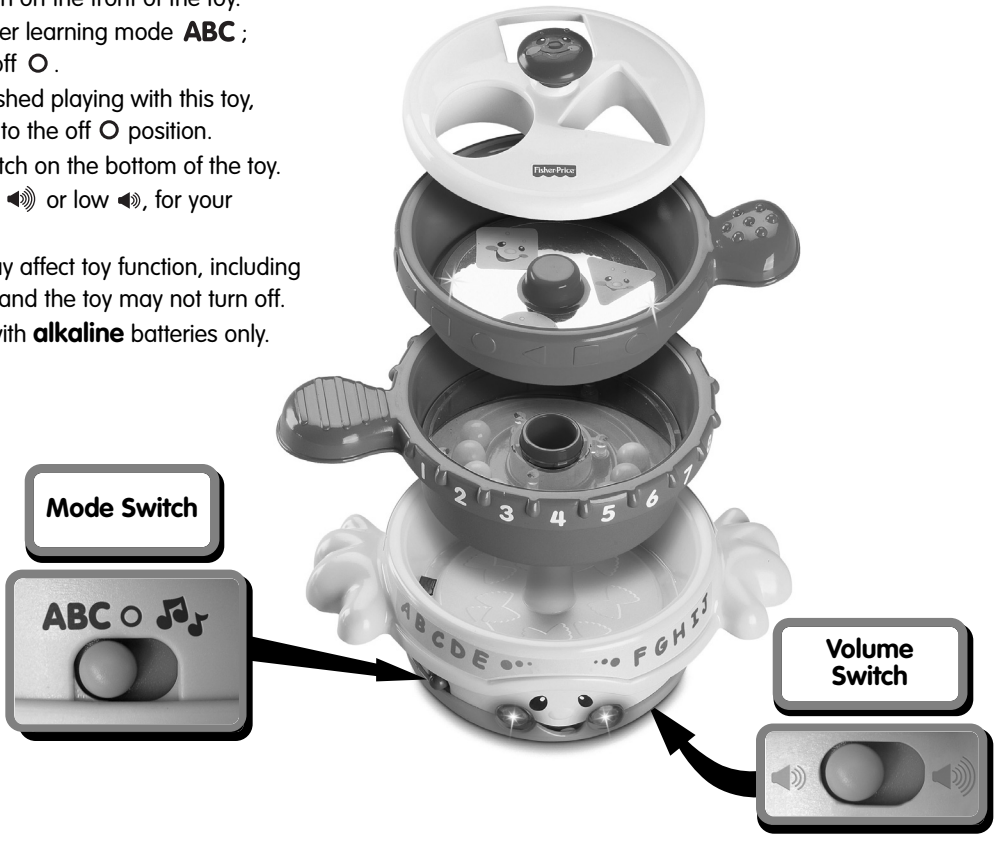

ABC Learning Mode

- Rock the yellow pan to hear a fun phrase or the A-B-C song.
- Add the blue pan to hear the colour identified. Rock the pans to hear a fun counting song.
- Add the red pan to hear the colour identified. Rock the pans to hear a fun song about colours.
- Add the lid for shape sorting fun.

♫ Music Mode

- Rock the yellow pan to hear fun songs or sound effects.
- Add the blue pan and hear a sound effect. Rock the pans to hear a fun tune.
- Add the red pan and hear a sound effect. Rock the pans to hear another tune.
- Add the lid for shape sorting fun.