MATCHBOX ACTION DRIVERS™


3+

FSC MIX Paper FSC® C113104

INSTRUCTIONS

CONTENTS

Please keep these instructions for future reference as they contain important information.

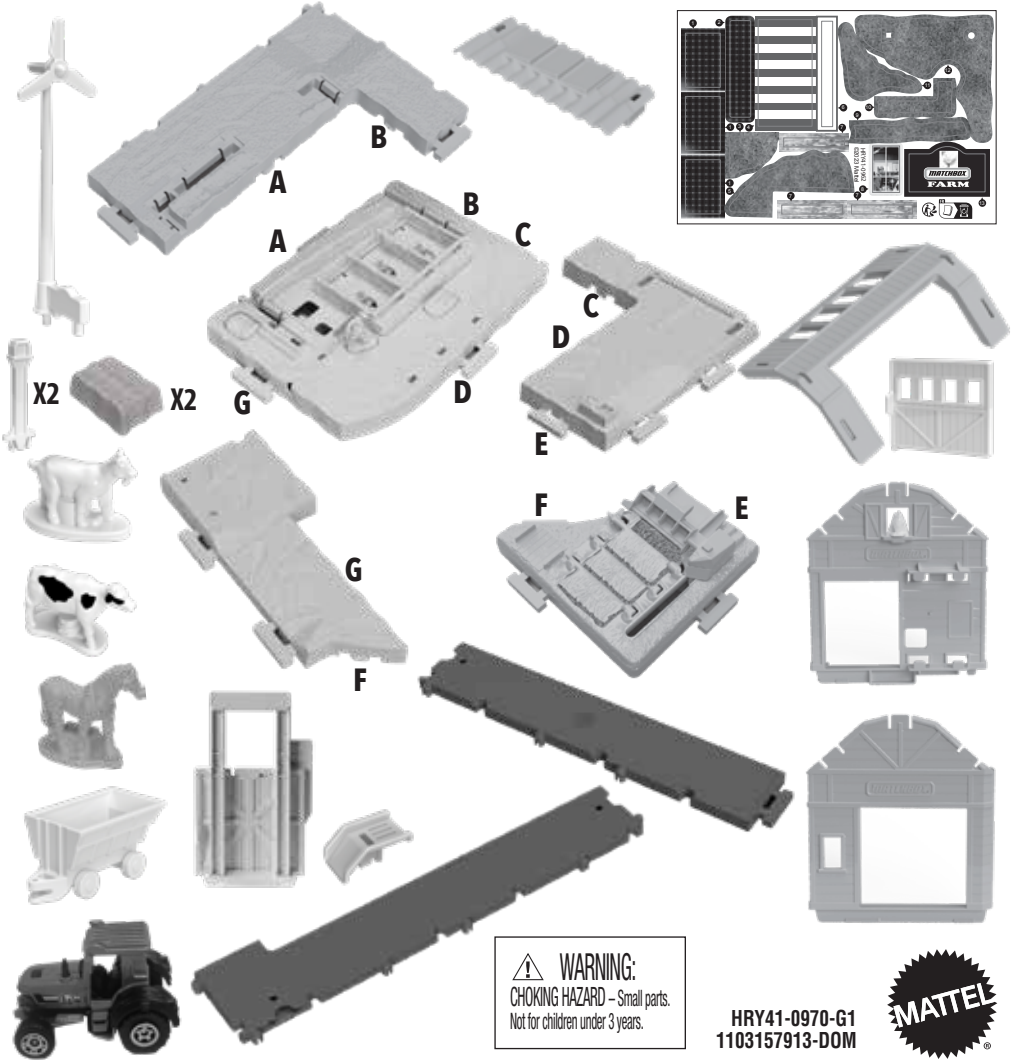


⚠ WARNING:
CHOKING HAZARD – Small parts.
Not for children under 3 years.

HRY41-0970-G1
1103157913-DOM

MATTEL

1 APPLY LABELS

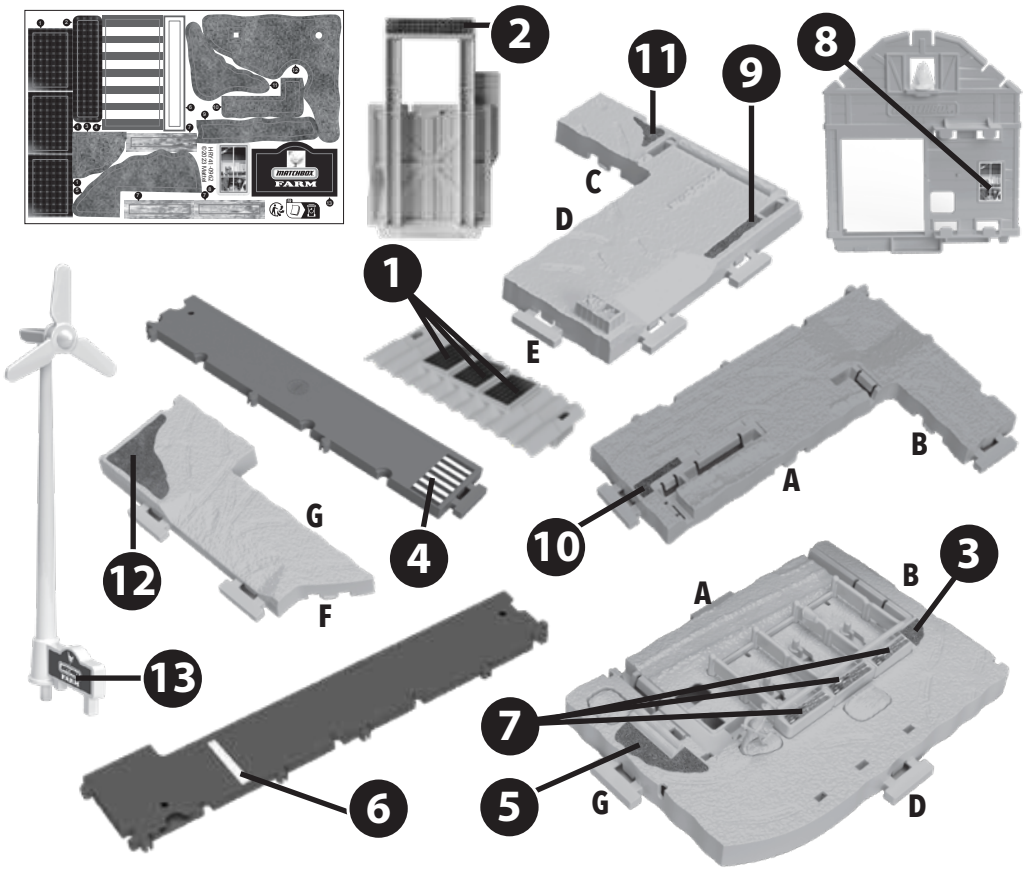


2 BATTERY REPLACEMENT


- Batteries included are for demonstration purposes only.
- Replace the batteries if sounds distort.
- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Remove batteries and dispose of them safely.
- Install 3 new AG13/LR44 1.5V button cell batteries in the battery box.
- Replace battery cover and tighten screw.
- For best performance, use only alkaline batteries.
- When exposed to an electrostatic source, the product may malfunction. To resume normal operation, remove and reinstall the batteries.





3 ASSEMBLY


Refer to molded letters for correct assembly.

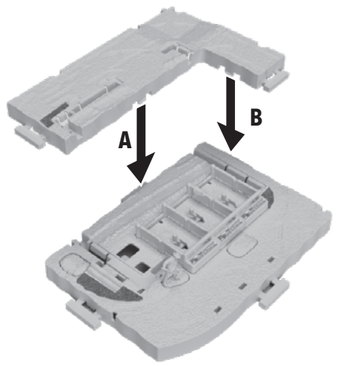
① 

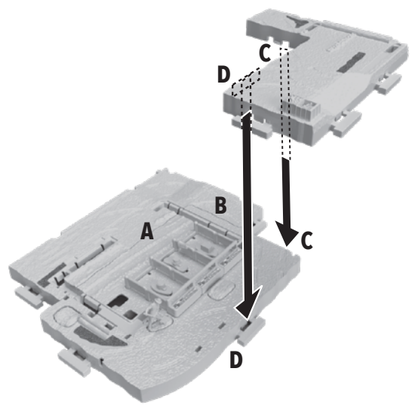
② 

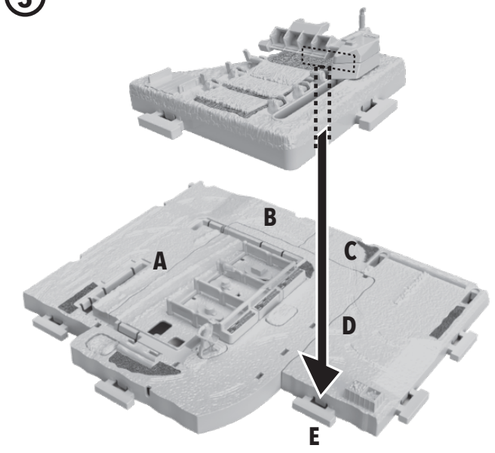
③ 

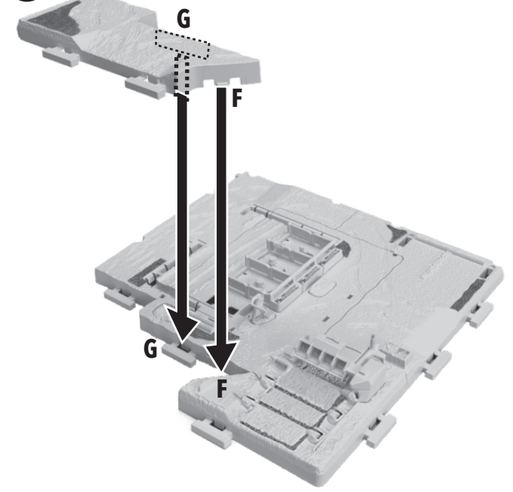
④ 

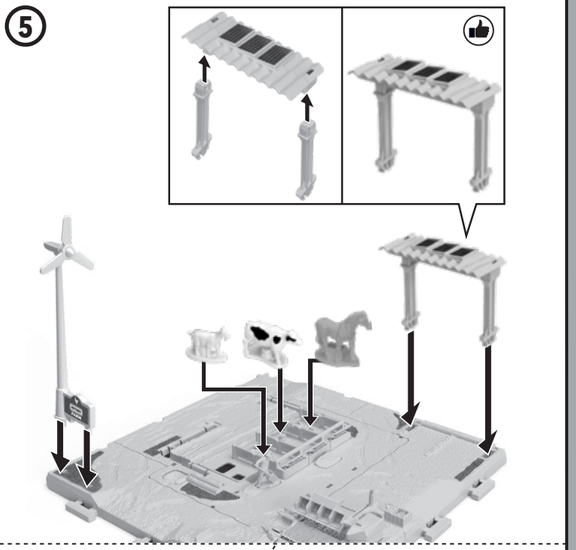
⑤ 

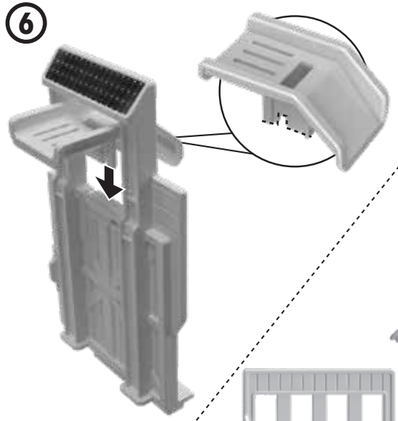
⑥ 

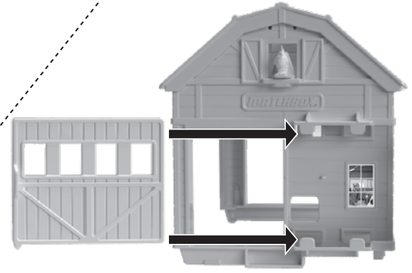⑦ 

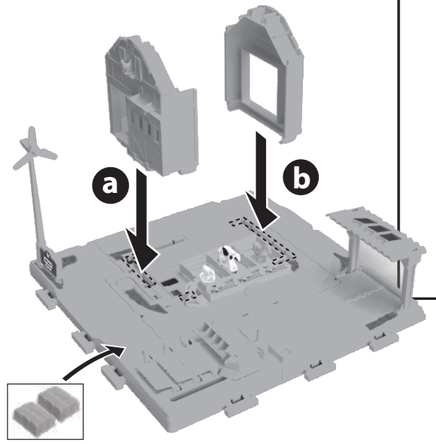⑧ 

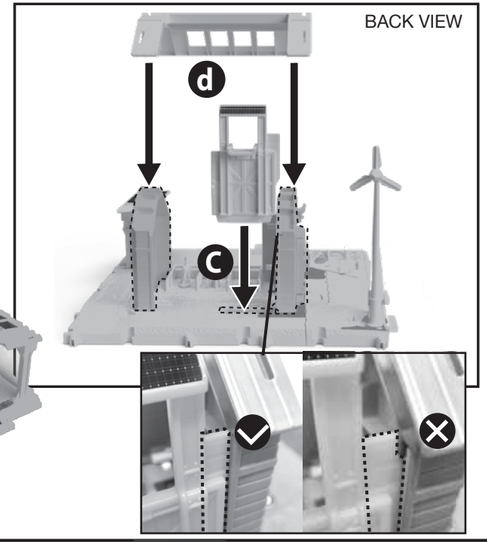

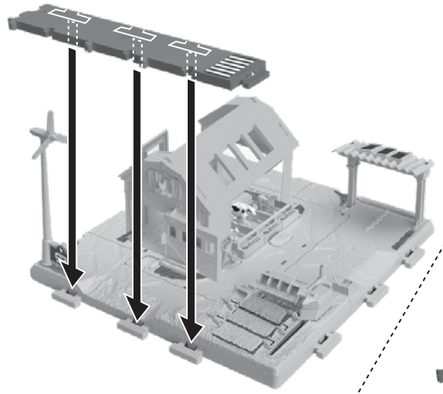
⑨ 

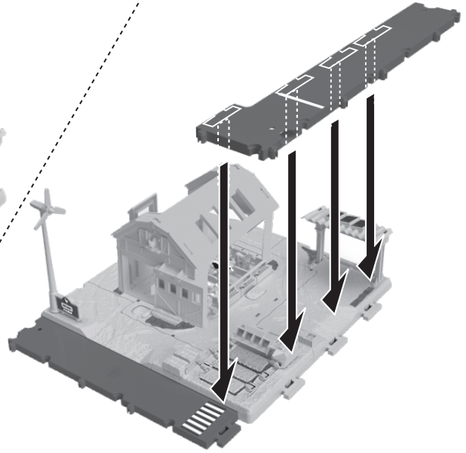⑩ 


4 TO PLAY

One vehicle included. Additional vehicles sold separately. Not for use with some Matchbox® vehicles.

Push down to activate rooster crowing!

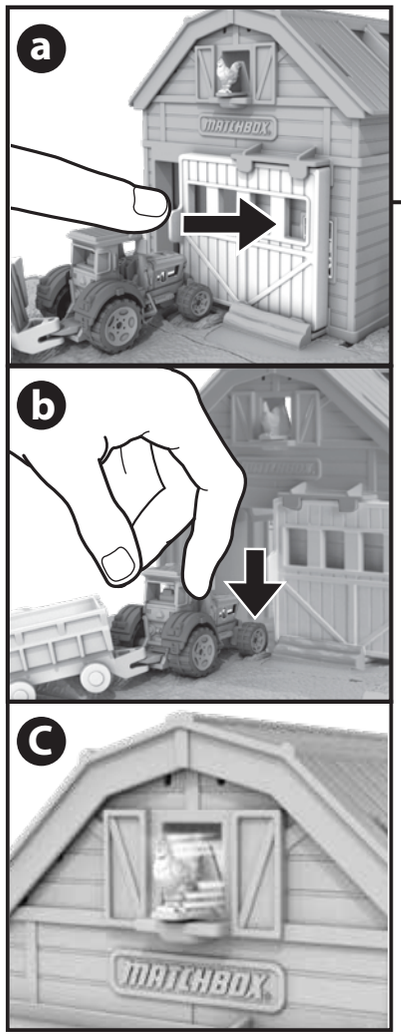



SIDE VIEW

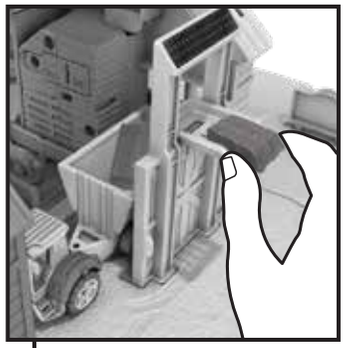



Load haystack into the trailer.

Push down to hear animal sounds!

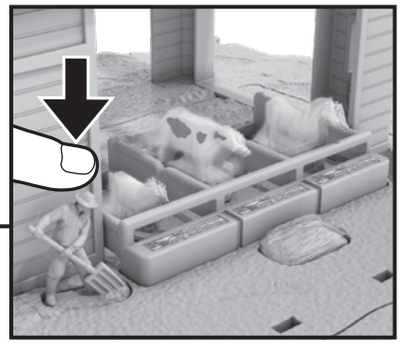


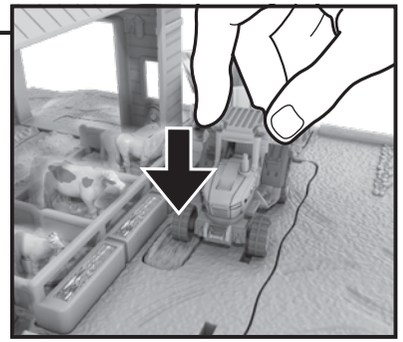

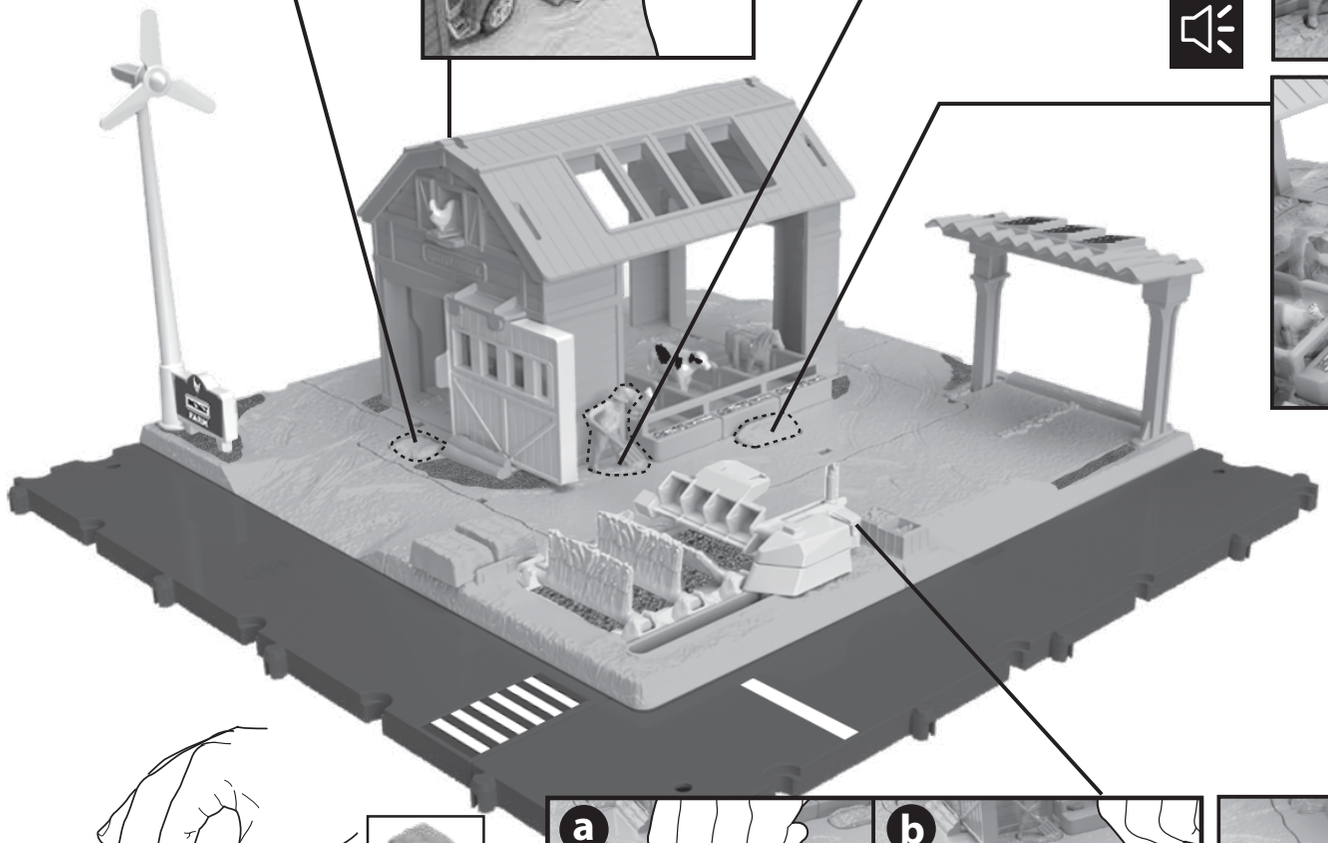


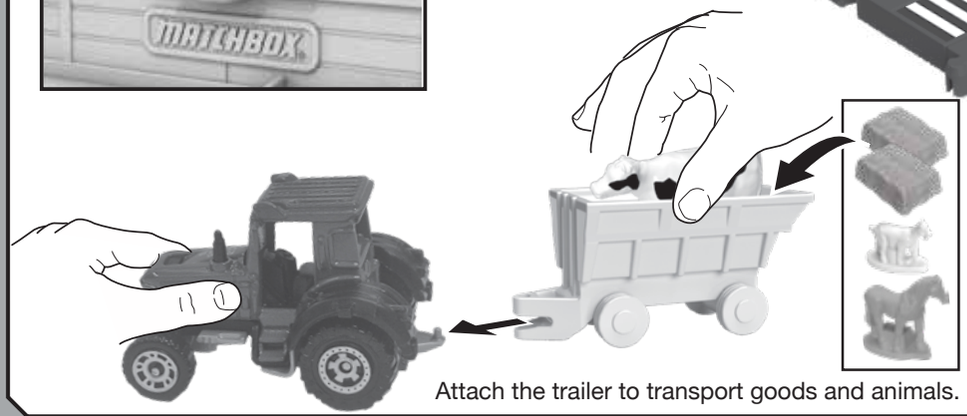

Attach the trailer to transport goods and animals.

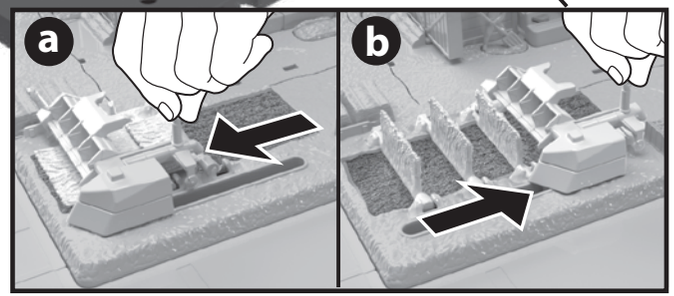


Reset before play.

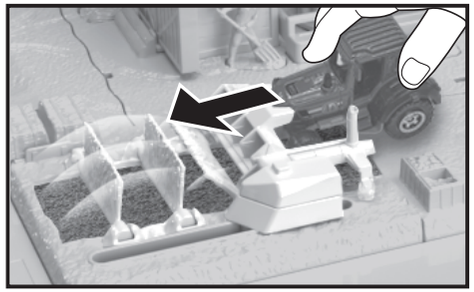



Push the tractor forward to mow the field!

5 MORE WAYS TO PLAY

ADVERTISEMENT **Connect to other Matchbox® or Hot Wheels® sets to expand your city!**

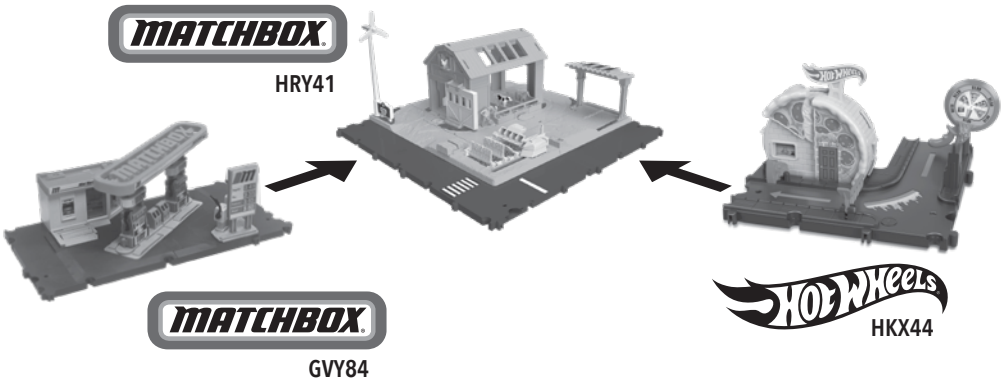

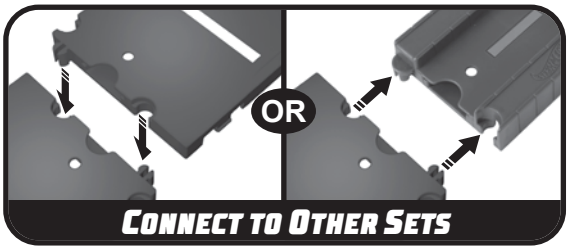


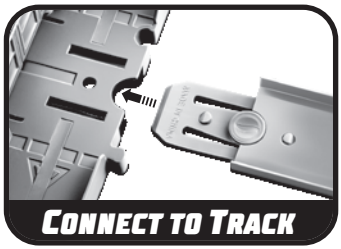


Additional tracks or sets sold separately, subject to availability.

6 DISASSEMBLE & RECYCLE

Do this ONLY BEFORE RECYCLING the product. Follow the steps below to remove the electronic components.

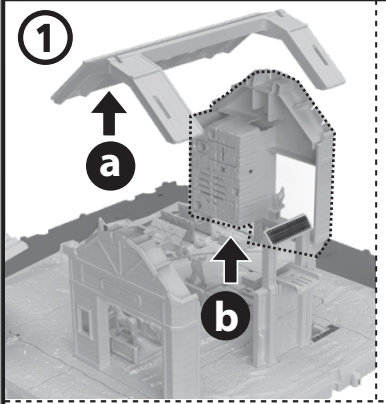

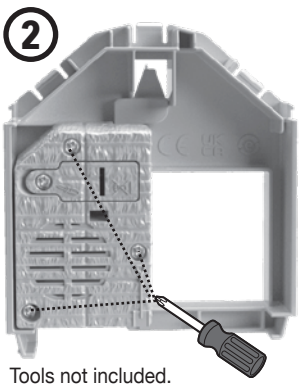

Tools not included.



Dispose of electronic waste and plastic separately according to local recycling guidelines.

©2023 Mattel. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK. Mattel Australia Pty. Ltd., 658 Church St., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196. Hong Kong: Kids Kingdom Limited, Room 1908-9, Gala Place, 56 Dundas Street, Mongkok, Kowloon, Hong Kong. Customer Care line: (852)2782-0766. Taiwan: Chickabiddy Company Limited, 5/F, No. 186, Section 4, Nanjing East Road, Taipei 10595, Taiwan. Customer Care line: (02)2578-1188. Mainland China: Mattel Barbie (Shanghai) Trading Co., Ltd. Units 4701-4711, 47F, 2 Grand Gateway, 3 Hong Qiao Road, Shanghai, 200030, P.R.C. Customer Care line: 400-819-8658. Diimport & Diedarkan Oleh: Mattel Continental Asia Sdn Bhd. Level 19, Tower 3, Avenue 7, No. 8 Jalan Kerinchi, Bangsar South, 59200 Kuala Lumpur, Malaysia.

service.mattel.com