On-the-Go Set









Kid Tough™ DVD player sold separately.

Fisher-Price®

Kid Tough™ DVD player

Consumer Information

⚠ DANGER

When the using the car adapter with the Kid Tough™ DVD Player (DVD player sold separately), to prevent electric shock, do not immerse in water; wipe clean with a damp cloth. Do not expose the product to rain or moisture. To reduce the risk of fire or electric shock, carefully follow these instructions.

⚠ WARNING

CHOKING HAZARD - Small Parts not suitable for children under 3 years.

Consumer Information

- Please read the booklet before first-time use. Keep these instructions for future reference, as they contain important information.
- Use only the car adapter included with this kit or the power adapter (sold separately) to charge the battery pack installed in the Kid Tough™ DVD Player (sold separately). Do not use any other power adapter.
- When using the Kid Tough™ DVD Player (sold separately) with the car adapter plugged into a DC power socket, be sure it is used where there is adequate ventilation. To prevent overheating, keep away from heat sources such as heat vents, direct sunlight, fire, excessive heat or other appliances that produce heat.

IMPORTANT! NEVER use the Kid Tough™ DVD Player (sold separately) without the battery pack connected. The product will be **PERMANENTLY DAMAGED** if the car adapter included in this kit or the power adapter (sold separately) is used without the battery pack connected.

- The car adapter is not a toy.
- The car adapter includes a replaceable 2 amp automotive fuse.
- Use the car adapter only in vehicles that use a 12 volt battery. **Do not use with a vehicle that has a 24 volt battery.**
- Only use the car adapter with negatively grounded vehicles.
- Unplug the car adapter from the DC power socket in your vehicle when not in use. The Kid Tough™ DVD Player (sold separately) is not disconnected from the power source as long as it is connected into the DC power socket.
- Do not disassemble or convert the unit(s).
- Car adapter specifications: Input 12VDC; Output 9V, 1500mA.
- **Adults Note:** Adult supervision is required. Regularly examine this product for damage to the cord, plug, housing or other parts that may result in the risk of fire, electric shock or injury. If the product is damaged, do not use it.

On-the-Go Set





Headphone Splitter

Headphones



Car Adapter
(Includes a 2 amp automotive replaceable fuse)



AV Cable

Troubleshooting

Problem	Solution
No sound	Headphone pin is inserted into the headphone jack. Use the headphones or remove the headphone pin from the headphone jack.
	AV cable plug is inserted into TV connect jack. Watch DVD on TV or remove the AV cable plug from the TV connect jack.
	Headphone splitter is inserted into the headphone jack. Insert the headphone pin into the splitter or remove the splitter from the headphone jack.
Battery compartment door on the Kid Tough™ DVD Player (sold separately) feels warm	It is normal for the battery to get warm during charging (using the car adapter) and is not reason for concern.
AV cable connected to DVD player, but there is no image on TV	Make sure the input on your TV is set to INPUT or VIDEO IN.
	Make sure the audio-video pins are properly connected to the TV (yellow for “Video In” and white for “Left Audio In” and red for “Right Audio In”).
Car adapter does not work	You may need to replace the 2 amp automotive fuse. See “Changing the Car Adapter Fuse” section.
	The DC input jack in some vehicles does not work when the vehicle is off. Make sure your vehicle is running.

CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)
M–F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price®

www.fisher-price.com

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2008 Mattel, Inc. All Rights Reserved.
® and ™ designate U.S. trademarks of Mattel, Inc. unless otherwise indicated.

PRINTED IN CHINA **N2151b-0920**

Connect to TV

AV Cable




IMPORTANT! Your TV must have audio and video input jacks.

- Plug the AV cable into the TV output jack on the Kid Tough™ DVD Player (sold separately).
- Plug the audio-video pins on the AV cable into the matching colored input jacks on your TV (yellow for “Video In” and white for “Left Audio In” and red for “Right Audio In”).
- Turn your TV power ON. Slide the power switch on the Kid Tough™ DVD Player (sold separately) ON ●.
- To find the picture on your TV screen, set your TV’s mode selector to INPUT or VIDEO IN.

Vehicle Use

Car Adapter

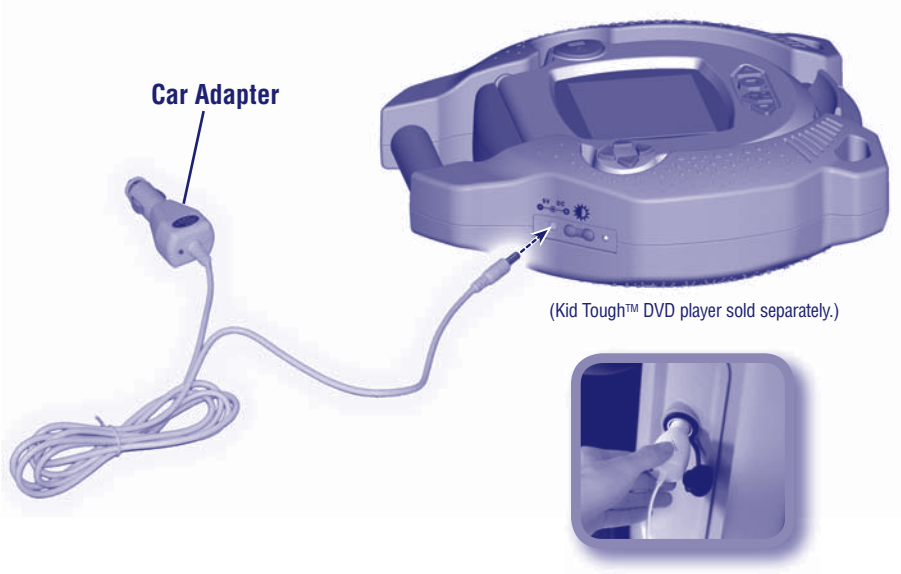

- Insert the pin on the car adapter into the DC input jack 9V DC on the Kid Tough™ DVD Player (sold separately). Then plug the other end of the car adapter into the DC power socket in your vehicle.

Notes:

- Make sure your vehicle is running when using the car adapter with the Kid Tough™ DVD Player (sold separately). Using the unit with the vehicle turned off can drain your vehicle's battery.
- Be sure to position the car adapter cord away from the driver.


Headphone Use

Headphones and Headphone Splitter



- Insert the headphone pin into the headphone jack on the Kid Tough™ DVD Player (sold separately).
- Use the headphone splitter to use two headphone sets (additional headphones with a 3.5 mm pin sold separately). Insert the splitter into the headphone jack on the Kid Tough™ DVD Player (sold separately). Then insert the headphone pins into the headphone splitter jacks.

Changing the Car Adapter Fuse

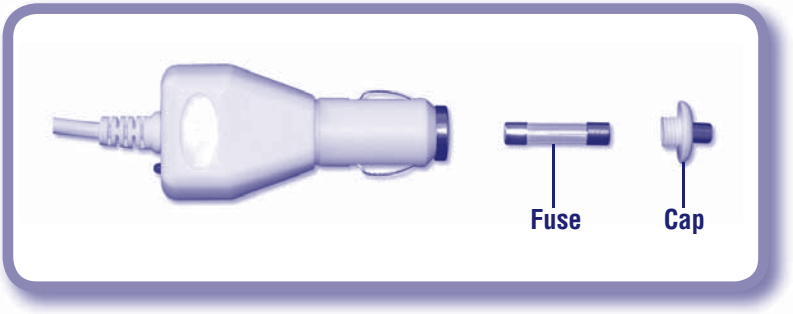

- Twist to remove the cap on the car adapter.
- Carefully remove the fuse and throw it away.
- Fit a new, 2 amp automotive fuse into the slot inside the adapter.
- Replace the cap and twist to secure.