Track Layout

RECYCLED
Paper made from recycled material
FSC™ C113104

FXT66
FXT66-0970
1102092372-DOM

Fisher-Price®

HIT entertainment

? CONSUMER ASSISTANCE
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)
service.fisher-price.com
Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd. Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk
Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.
SOUTH AFRICA: Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

THOMAS & FRIENDS™ Wood
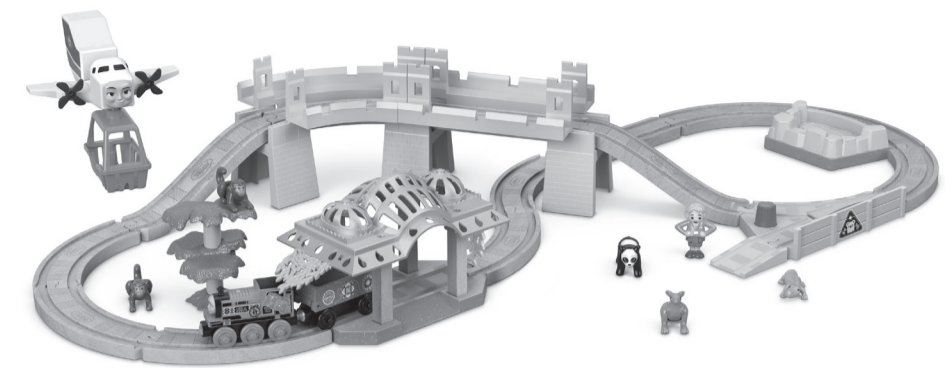
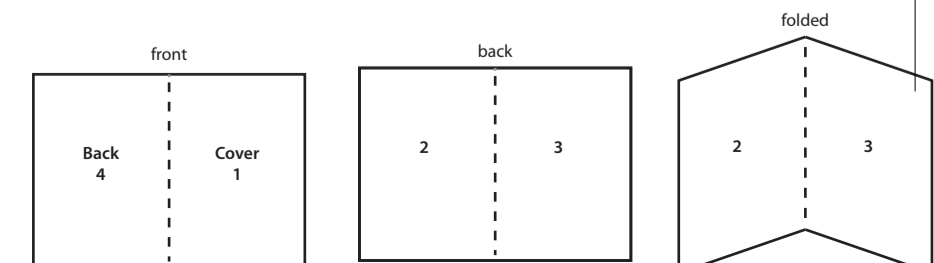# BIG WORLD ADVENTURES™ SET
INSTRUCTIONS

Keep these instructions for future reference as they contain important information.

What's Included
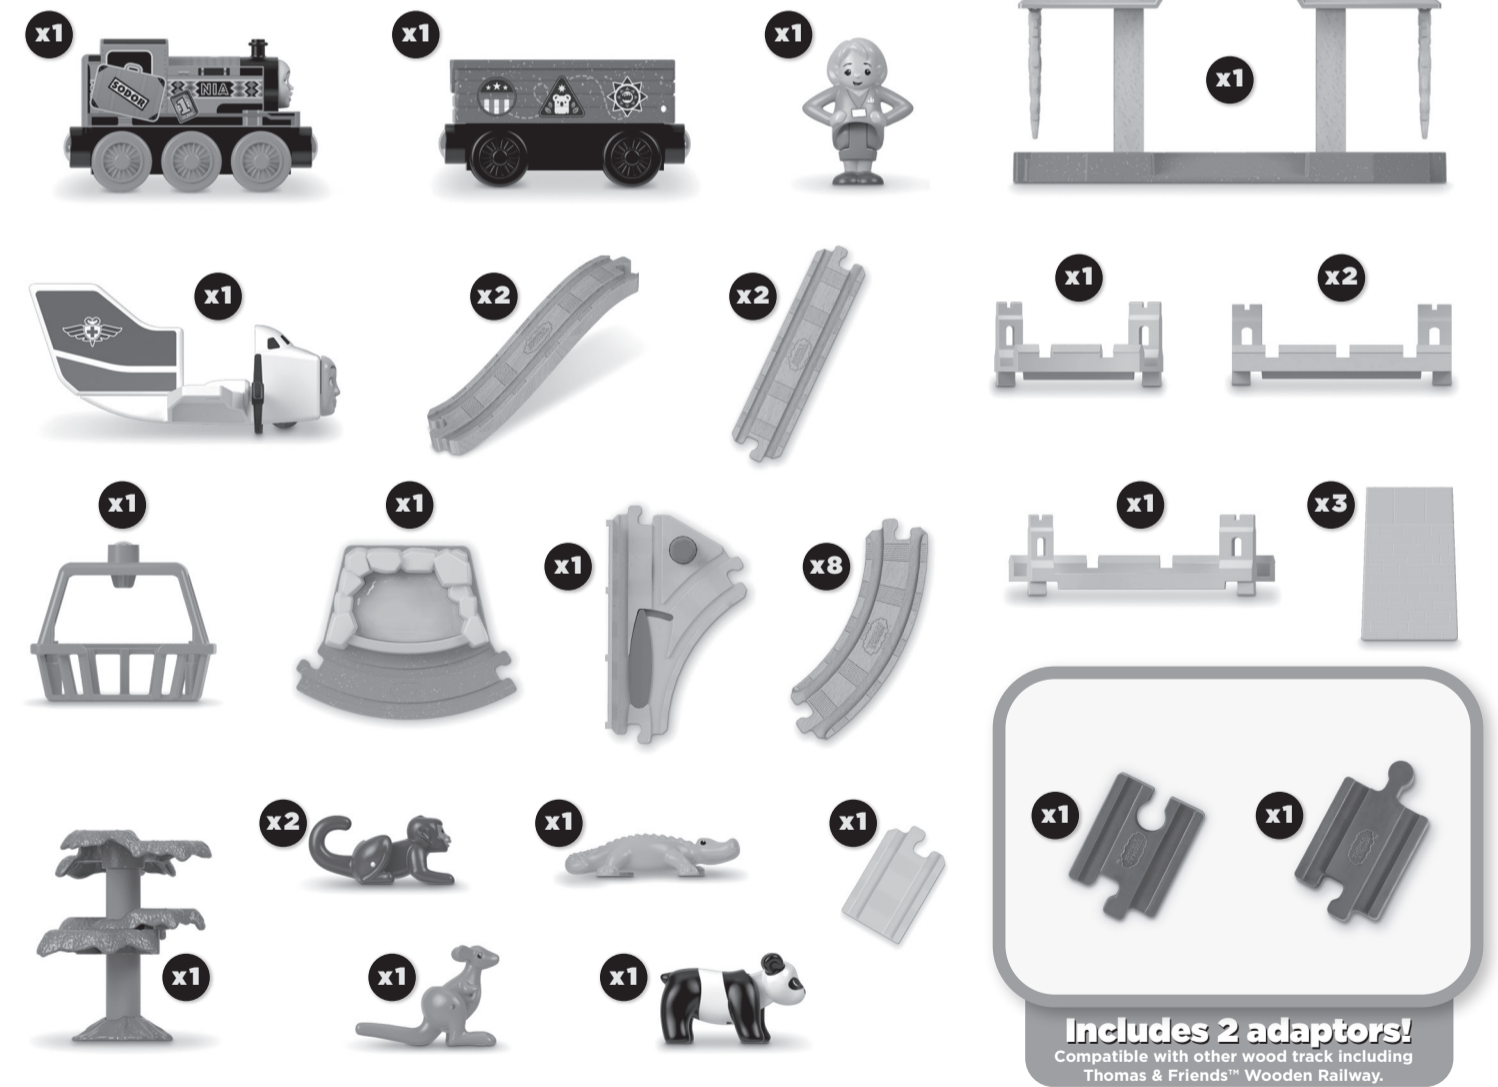
Includes 2 adaptors!
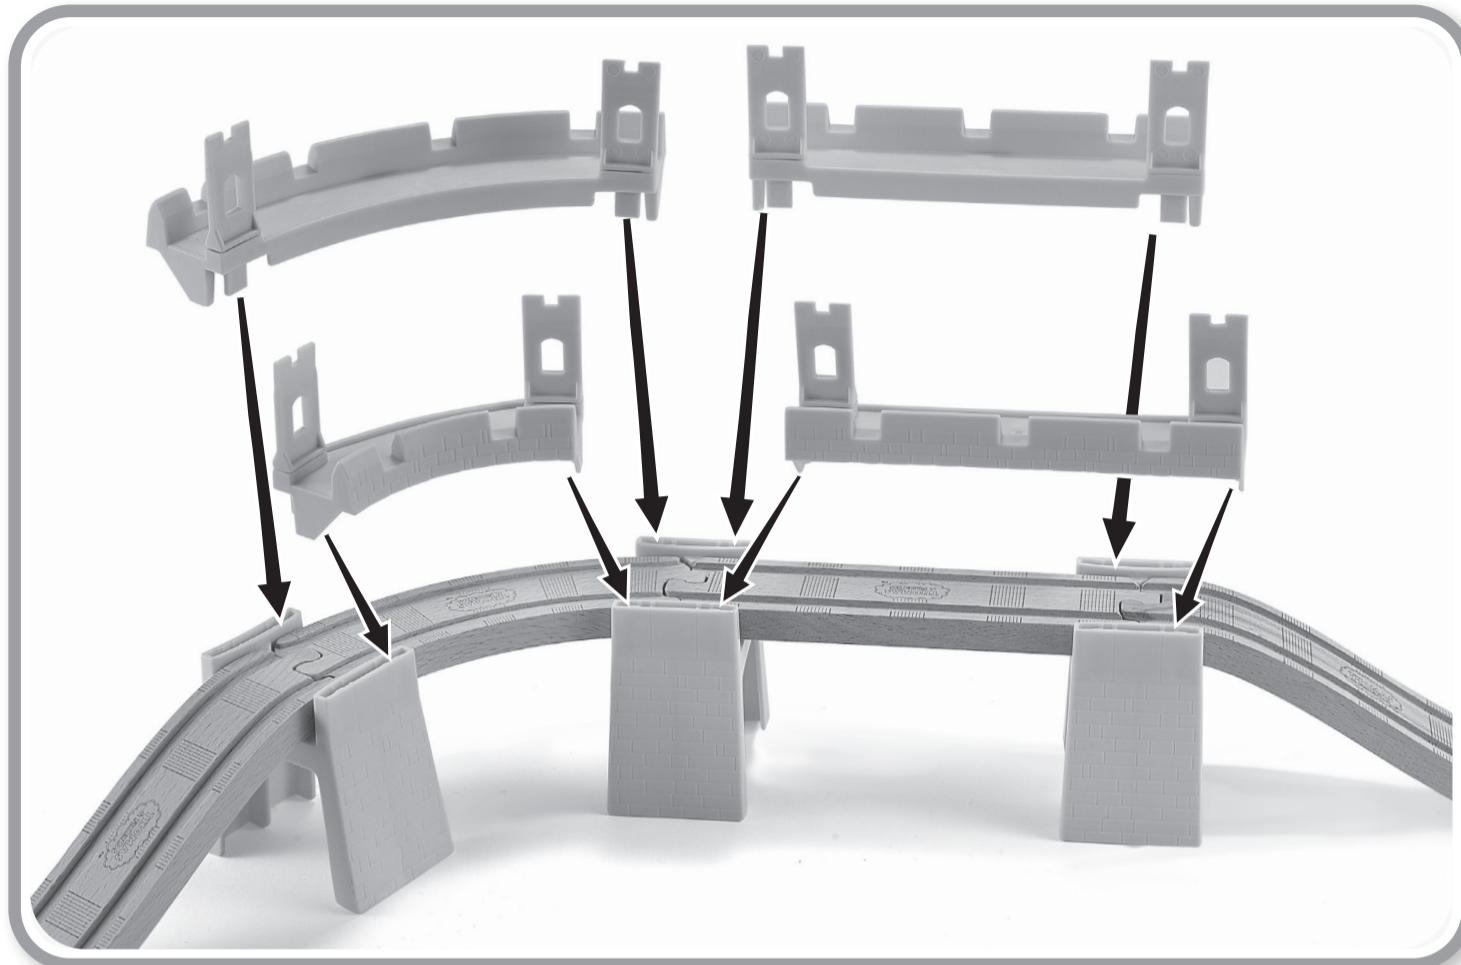Compatible with other wood track including Thomas & Friends™ Wooden Railway.

Item No	: FXT66-0970-1102092372-DOM
Version	: DOM
Size	: 16.6" W x 11.7" H (A3)
Paper	: 100% Recycled Paper, 70 gsm
Color	: Black
Date	: 2/19/2019 (Edith Ng)

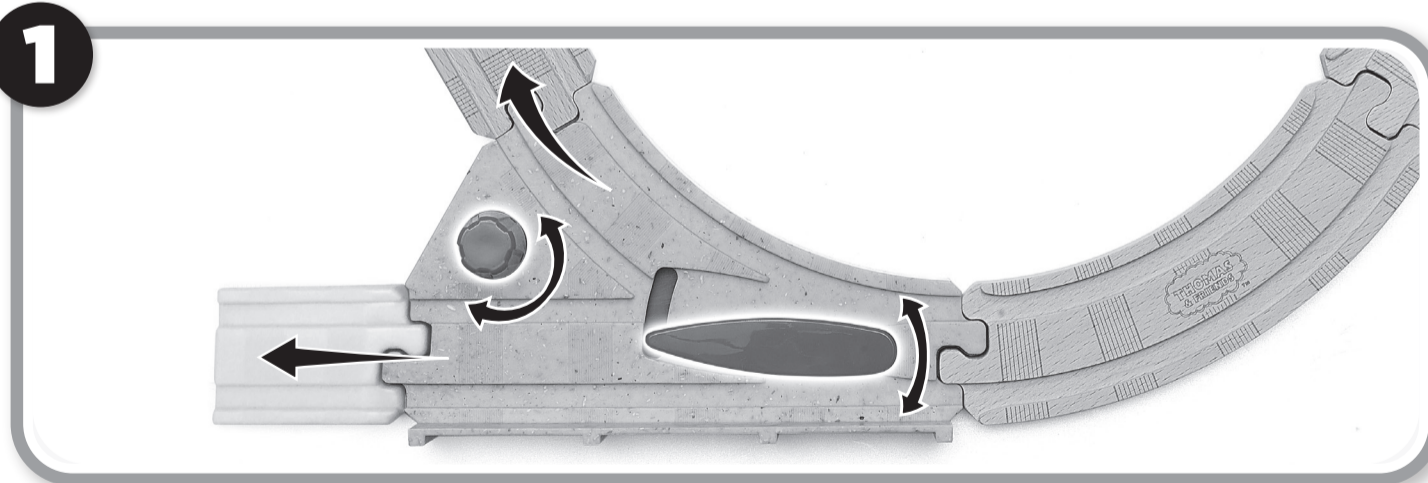**Instruction Sheet Size - Format 2**
Sheet Size Open: 16.6" W x 11.7" H (A3)
Sheet Size Folded: 8.3" W x 11.7" H (folds to A4)

Front

front
Back 4 | Cover 1
back
2 | 3
folded
2 | 3

Helpful Hint

For easier assembly, you may finish the layout first and then snap the walls into the risers, as shown.
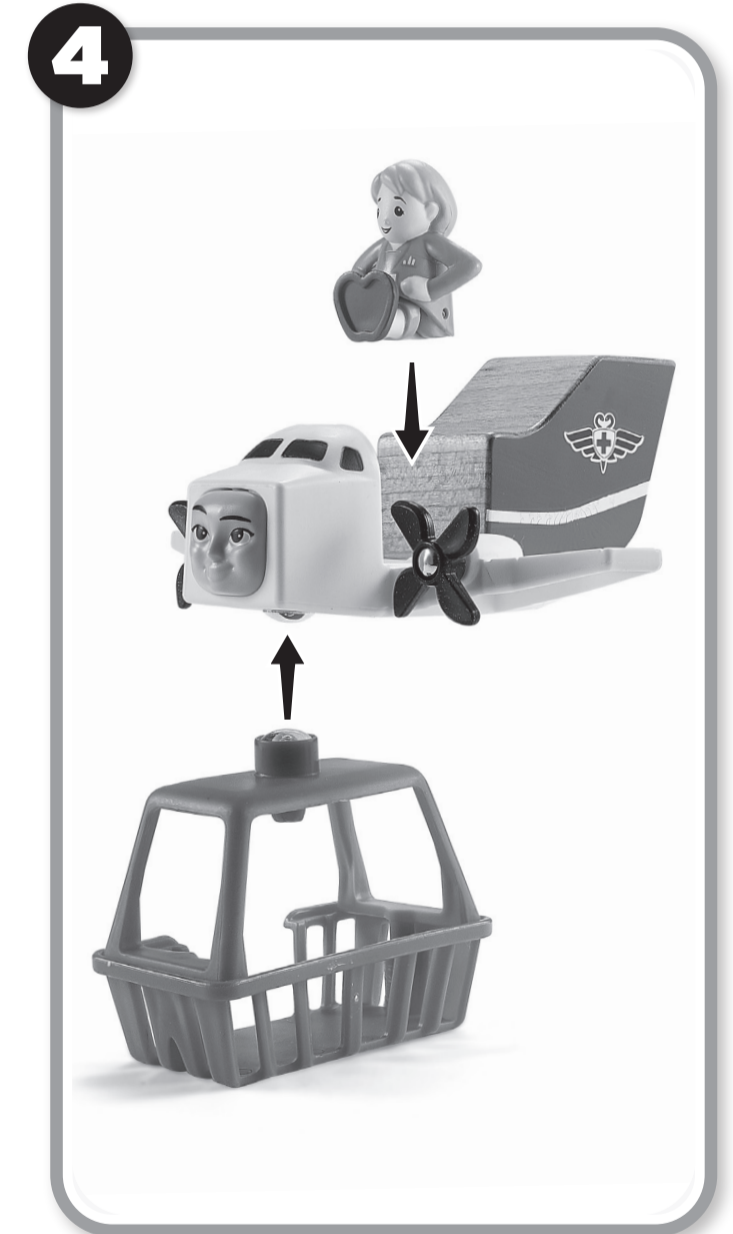
How to Play

1

Rotate the knob to choose the direction for your engine.

2

Lower the animal's head to travel through the palace

3

Loop the monkey's tail through the palace roof to attach, or sit the monkey on top of the tree.

4

Sit the figure in the plane and hang the basket beneath the plane.

Back

front
back
folded

Back 4
Cover 1

2
3

2
3