How To Play

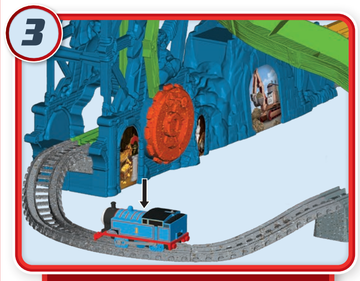

Place engine here.
Flip the switch on the engine to turn it on.

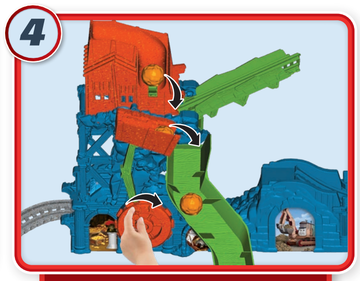

The engine enters the elevator. Rotating the handle lifts up the engine and releases the boulders. When the engine gets to the top of the elevator, it travels down the collapsing track. When the engine exits the collapsing track, take your hand off the handle.

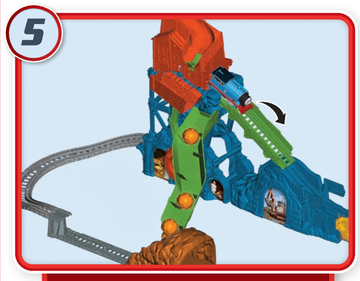

The engine rolls onto the collapsing track.

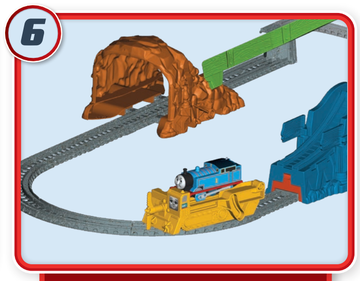

The engine breaks through the barricade and rolls onto Darcy the digger.

How To Play

With the engine on it, Darcy the digger rides around the track and the spinning drill knocks the boulders out of the way.

As Darcy the digger reaches the docking track, the engine is released and continues its journey.

⚠ WARNING:
CHOKING HAZARD – Toy contains small balls and small parts. Not for children under 3 years.

⚠ CAUTION:
To prevent entanglement, keep hair away from wheels.

Protect the environment by not disposing of this product or any batteries with household waste. This symbol indicates that this product shall not be treated as household waste. Check your local authority for recycling advice and facilities.

CONSUMER ASSISTANCE
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)
service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd. Vanwall Business Park, Maidenhead SL6 4UB, Helpline: 01628 500303, www.service.mattel.com/uk
Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.
South Africa: Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.

Thomas the Tank Engine & Friends™
CREATED BY BRITT ALLCROFT

Based on the Railway Series by The Reverend W Awdry.
©2019 Gullane (Thomas) Limited. Thomas the Tank Engine & Friends and Thomas & Friends are trademarks of Gullane (Thomas) Limited.
©2019 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

©2019 Mattel, ® and ™ designate U.S. trademarks of Mattel, except as noted.
PRINTED IN CHINA. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.
Tel.: (852) 3185-6500.

GDV43

GDV43-0970-1102061039-DOM

THOMAS & FRIENDS™ TRACKMASTER™

CAVE COLLAPSE SET
INSTRUCTIONS

Keep these instructions for future reference as they contain important information.

What's Included

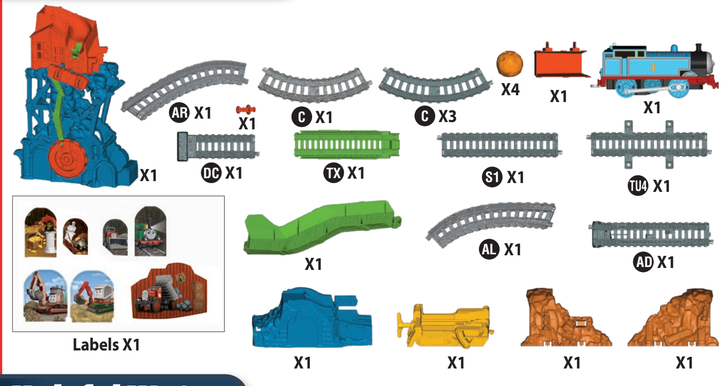

Labels X1

Helpful Hints

Track marking codes are found on the bottom of tracks.

Note: Some engines may not work on this track set.

Metal engines will not activate motorized features of TrackMaster™ playsets.

ONE-TIME SNAPS: Assembly steps that are marked with a star are "one-time snaps". Once these parts are put together, they cannot be taken apart.

Adult assembly required. No tools needed.

front: 5 | Back 6 | Cover 1
back: 2 | 3 | 4

folded roll

Sheet Size Folder: A4

Item No : GDV43-0970
1102061039-DOM
Size : 630 x 297mm
Paper : Woodfree paper 70 gsm
Color : 4C
Date : 2/28/2019 (Emma Wei)

Label Placement

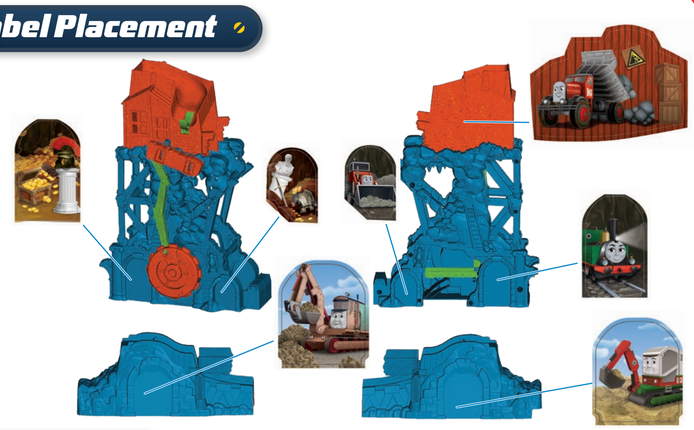

Assembly

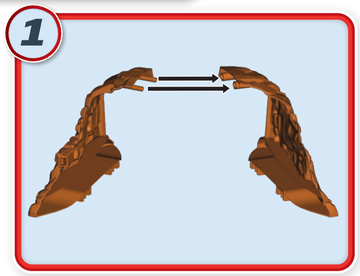

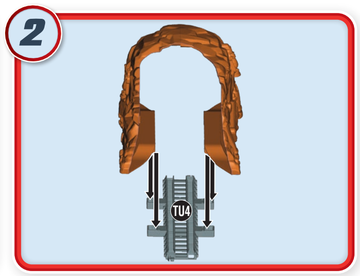

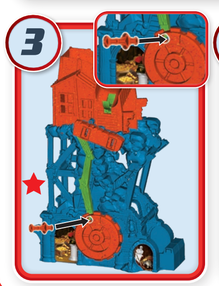

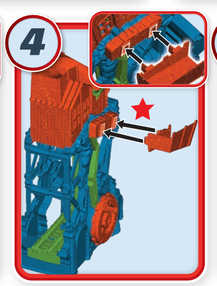

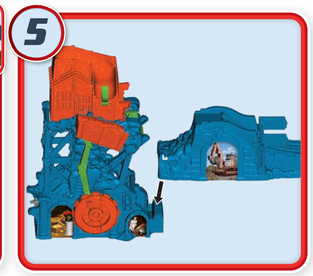

Assembly

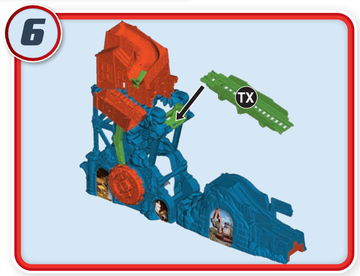

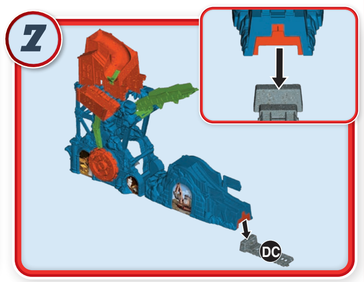

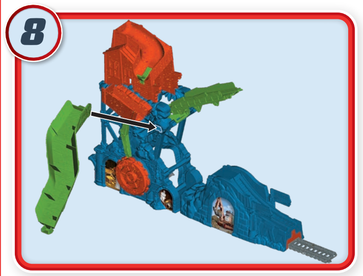

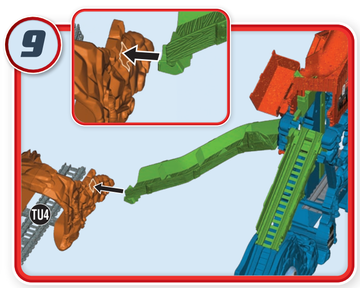

Battery Information

BATTERY INSTALLATION
Access the battery compartment by unscrewing and separating the top half of the engine from the bottom half of the engine. Install the batteries as indicated inside the battery compartment. Re-assemble the two halves of the engine, re-insert the screw and tighten. If the product begins to malfunction, check the battery installation. You may need to reset the electronics by removing the batteries and reinstalling them. If the product continues to malfunction or no longer operates, remove the batteries from the toy and replace them with fresh batteries. Requires 2 "AAA" (LR03) batteries, (not included). For longer life use only alkaline batteries.

Required tool: Phillips screwdriver (not included)

1.5V x 2 'AAA' (LR03)

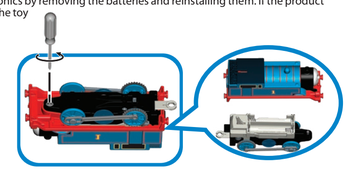

BATTERY SAFETY INFORMATION
In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity (+ and -).
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited. • Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

Track Layout

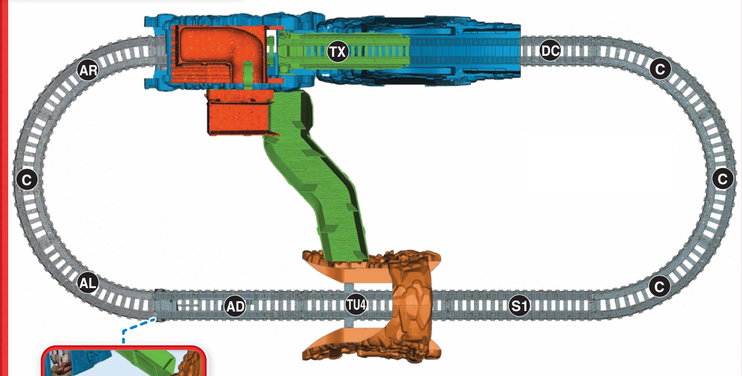

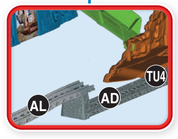

How To Play

The engine should move forward in the direction shown.

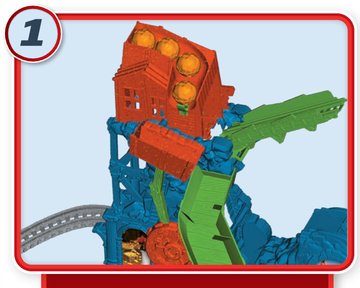

Load the boulders on the top of the set as shown.

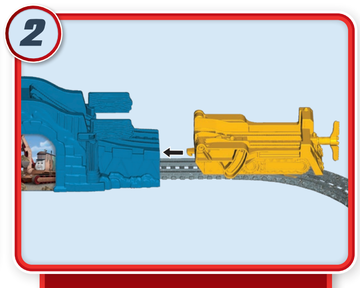

Place Darcy the digger on the track.
Make sure the wheels fit into the slots on the tracks.
Connect Darcy to the ramp.