
IMPORTANT!

For proper function, insert the plug **before** snapping

the post into the base.

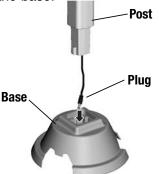

PRINTED IN CHINA

K9873pr-0921