


**BACK**

**COLOR : 1C**


**SIZE: W16 X H31 IN**

**SEE OTHER SIDE FOR STEPS 1-5**

**6 HANG TRACK ON WALL** Once brackets are mounted and TEMPLATE IS REMOVED FROM WALL, attach track pieces as shown.

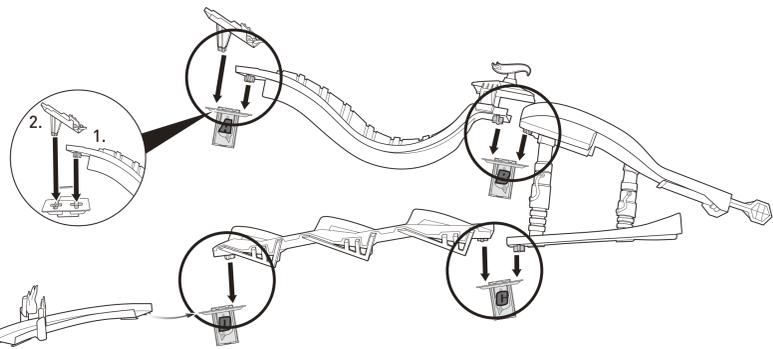

**7 READY TO PLAY?**

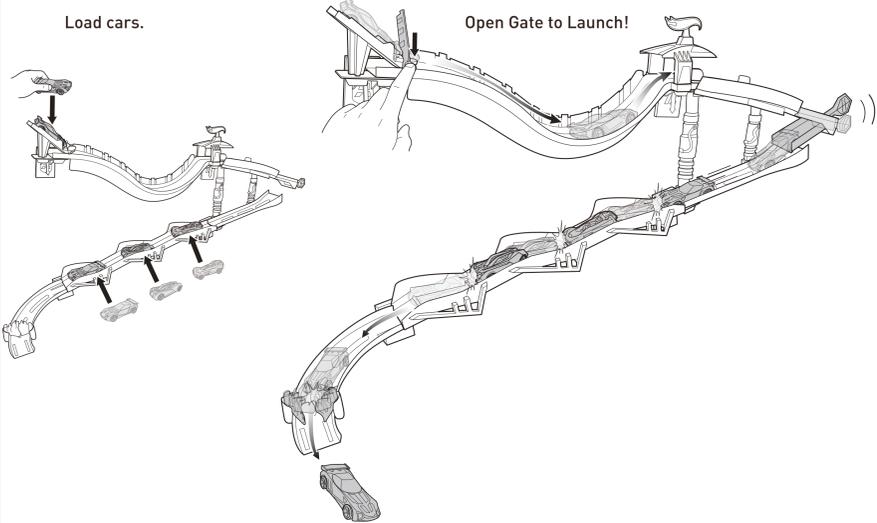


**8 REATTACHING & REMOVAL**

Mounting brackets are designed to break away from the set without causing surface damage. If mounting plate separates from bracket, snap bracket back into place.

To remove brackets from the wall entirely:  
1. NEVER pull strip towards you.  
2. Hold bracket gently to prevent it from snapping fingers. DO NOT press against wall.  
3. Grab tab on Command™ Strip and SLOWLY STRETCH STRAIGHT DOWN ALONG WALL AT LEAST 12 INCHES until bracket and strip release.  
Purchase medium Command™ Refill Strips to reapply to your wall.

**CONNECT**

Create your own set-ups with other Wall Tracks™ sets.

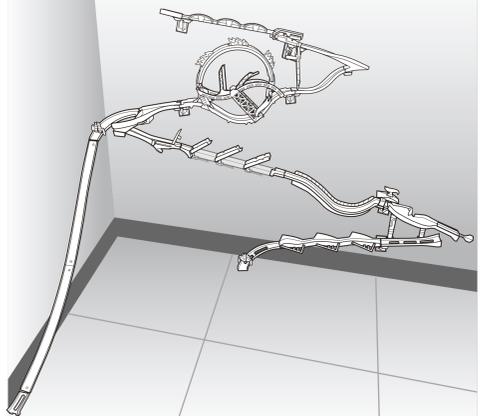

Command™ Strips are a product of 3M. For further information visit [command.com](http://command.com).  
NOTE: Apply strips to surfaces above 50°F (10°C). Adhesive could lose adhesion above 105°F (40°C).  
CAUTION:  
DO NOT use with wallpaper. May not adhere well to vinyl surfaces.  
DO NOT hang items over beds.  
3M and Command are trademarks of 3M.  
© 3M 2010  
All Rights Reserved.

**FRONT**

**V1050 EL IS**

**COLOR : 4C**

**LINE BOTTOM UP ALONG FLOOR**




**DRIFT RALLY SPINOUT™ HANGING TEMPLATE**



Keep these instructions for future reference as they contain important information.

**YOU WILL NEED:**  
Low-adhesive tape such as painter's tape or masking tape  
Approximately 3 feet of open wall space  
20 minutes

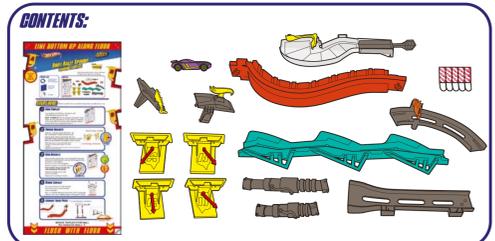

**START HERE:**

Please read all instructions before beginning assembly and set-up.

**1 HANG TEMPLATE**

Line template up with floor and tape to wall. It should lay flat against the wall.


**NOTE TO PARENTS:** Before applying Command™ Strips make sure the wall surface is clean and dry. If cleaning is necessary 3M recommends using isopropyl rubbing alcohol. Do not use household cleaners.



**2 PREPARE BRACKETS**

There are 4 yellow brackets [Marked A - D] and 5 Command™ Strips (one extra strip). Separate strips. Remove red-printed liner from Command™ Strips and apply to back of brackets as shown. Make sure the strip tab is accessible for future removal.

Black Printing = On Wall

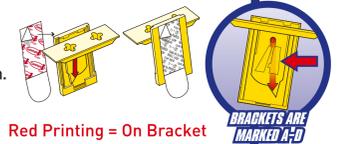

**NOTE:** Apply strips to surfaces above 50°F (10°C). Adhesive could lose adhesion above 105°F (40°C).  
**CAUTION:** DO NOT use with wallpaper. May not adhere well to vinyl surfaces. DO NOT hang items over beds.

Red Printing = On Bracket

BRACKETS ARE MARKED A-D

**3 HANG BRACKETS**

Remove black-printed liner from Command™ Strip and place the bracket marked A onto the wall using the notch A outline on the template. Brackets are not interchangeable. Bracket should not overlap the template. **Press bracket firmly onto wall and hold, pressing for 30 seconds.**



Red arrow should line up with arrow on bracket. Repeat with remaining brackets.

**4 REMOVE TEMPLATE**


Once all brackets are firmly attached with red arrows correctly oriented, remove template.

**Note:** For optimal adhesion performance 3M recommends waiting 1 hour before adding weight to Command™ Strips.



**5 ASSEMBLE TRACK PIECES**

Pre-assemble pieces as shown.

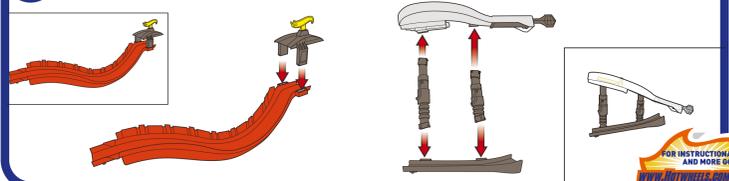

**REMOVE TEMPLATE FROM WALL**  
See reverse for steps 6 - 8

**FLUSH WITH FLOOR**



Mattel  
© 2010 Mattel, Inc. All Rights Reserved.  
Mattel, Inc., 4901 Great America Drive, El Segundo, CA 90245, U.S.A. Customer Relations 1-800-524-6077.  
Mattel U.K. Ltd., Village Way, Basingstoke, Hampshire RG24 0PR, England, U.K.  
Mattel Australia Pty. Ltd., Boroona, Victoria 3121, Consumer Advisory Services 1-800-333-2372.  
Mattel East Asia Ltd., Room 1106, South Tower, World Finance Center, Harbour City, Yennan Street, HK, China.  
Singapore & Other Asian Countries: Mattel SCA Pte Ltd 177322-71 Lot 12-0, 12th Floor, Marina Link New, Persiaran Troopiana Golf Country Resort, 07110 P.J. Tel: 03-78803817, Fax: 03-78803862.  
Service.mattel.com

SEE BACK


**BACK**

**COLOR : 1C**


**SIZE: W16 X H31 IN**

**SEE OTHER SIDE FOR STEPS 1-5**

**6 HANG TRACK ON WALL** Once brackets are mounted and TEMPLATE IS REMOVED FROM WALL, attach track pieces as shown.

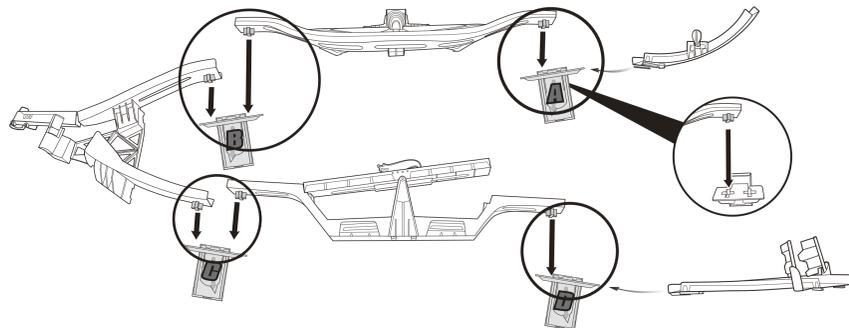

**7 READY TO PLAY?**

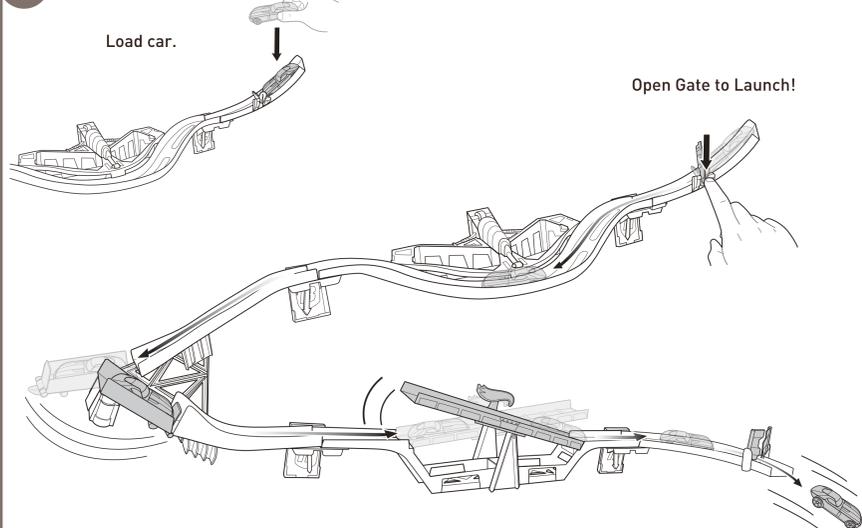


**8 REATTACHING & REMOVAL**

Mounting brackets are designed to break away from the set without causing surface damage. If mounting plate separates from bracket, snap bracket back into place.

To remove brackets from the wall entirely:  
1. NEVER pull strip towards you.  
2. Hold bracket gently to prevent it from snapping fingers. DO NOT press against wall.  
3. Grab tab on Command™ Strip and SLOWLY STRETCH STRAIGHT DOWN ALONG WALL AT LEAST 12 INCHES until bracket and strip release.  
Purchase medium Command™ Refill Strips to reapply to your wall.

**CONNECT**

Create your own set-ups with other Wall Tracks™ sets.

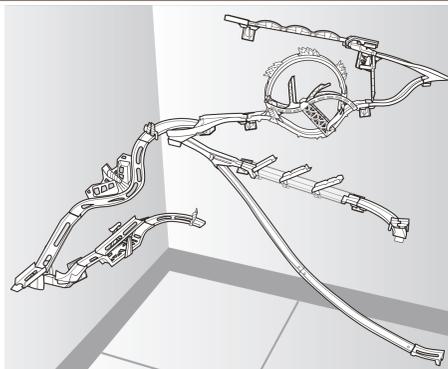

Command™ Strips are a product of 3M. For further information visit [command.com](http://command.com)  
NOTE: Apply strips to surfaces above 50°F (10°C). Adhesive could lose adhesion above 105°F (40°C).  
CAUTION: DO NOT use with wallpaper. May not adhere well to vinyl surfaces. DO NOT hang items over beds.  
3M and Command are trademarks of 3M.  
© 3M 2015. All Rights Reserved.

**FRONT**

**V1051 EL IS**

**COLOR : 4C**

**LINE BOTTOM UP ALONG FLOOR**



**DAREDEVIL CURVE™**




Keep these instructions for future reference as they contain important information.

**YOU WILL NEED:**

- Low-adhesive tape such as painter's tape or masking tape
- Approximately 3 feet of open wall space
- 20 minutes

**CONTENTS:**

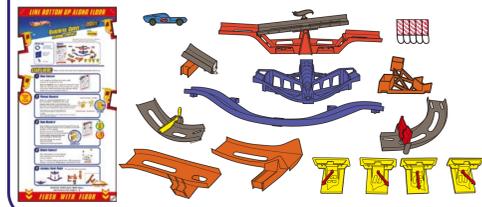

**START HERE:**

Please read all instructions before beginning assembly and set-up.

**1 HANG TEMPLATE**

Line template up with floor and tape to wall. It should lay flat against the wall.

**NOTE TO PARENTS:** Before applying Command™ Strips make sure the wall surface is clean and dry. If cleaning is necessary 3M recommends using isopropyl rubbing alcohol. Do not use household cleaners.


**2 PREPARE BRACKETS**

There are 4 yellow brackets [Marked A - D] and 5 Command™ Strips (one extra strip).

Separate strips. Remove red-printed liner from Command™ Strips and apply to back of brackets as shown. Make sure the strip tab is accessible for future removal.

**NOTE:** Apply strips to surfaces above 50°F (10°C). Adhesive could lose adhesion above 105°F (40°C).  
**CAUTION:** DO NOT use with wallpaper. May not adhere well to vinyl surfaces. DO NOT hang items over beds.

Black Printing = On Wall



Red Printing = On Bracket

BRACKETS ARE MARKED A-D

**3 HANG BRACKETS**

Remove black-printed liner from Command™ Strip and place the bracket marked A onto the wall using the notch A outline on the template.

Brackets are not interchangeable. Bracket should not overlap the template.

**Press bracket firmly onto wall and hold, pressing for 30 seconds.**

Red arrow should line up with arrow on bracket.

Repeat with remaining brackets.



PRESS FIRMLY FOR 30 SECONDS



**4 REMOVE TEMPLATE**


Once all brackets are firmly attached with red arrows correctly oriented, remove template.

**Note:** For optimal adhesion performance 3M recommends waiting 1 hour before adding weight to Command™ Strips.



**5 ASSEMBLE TRACK PIECES**

Pre-assemble pieces as shown.

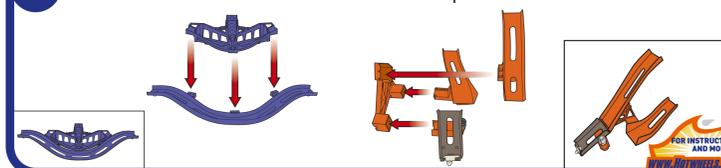

**REMOVE TEMPLATE FROM WALL**  
See reverse for steps 6 - 8

**FLUSH WITH FLOOR**

SEE BACK


MATTEL

© 2010 Mattel, Inc. All Rights Reserved.  
Mattel, Inc., 200 Grove Avenue, San Antonio, TX 78222, U.S.A. Consumer Relations 1-800-524-8687.  
Mattel UK Ltd., Vermont Business Park, Mansfield SLE 6LJ, England D128 50D30.  
Mattel Australia Pty. Ltd., Business Village, 3121 Consumer Gateway, Sydney NSW 2030, 155 312.  
Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.  
Distributors & Dealers in other countries: Mattel SCA, P.O. Box 133, 12th Floor, Menara Lien Hoe, Persiaran Tropisiana Golf Country Resort, 47410 PJ, Tel: 03-78803817, Fax: 03-78803867.  
[www.mattel.com](http://www.mattel.com)




**SEE OTHER SIDE FOR STEPS 1-5**


**6 HANG TRACK ON WALL** Once brackets are mounted and TEMPLATE IS REMOVED FROM WALL, attach track pieces as shown.

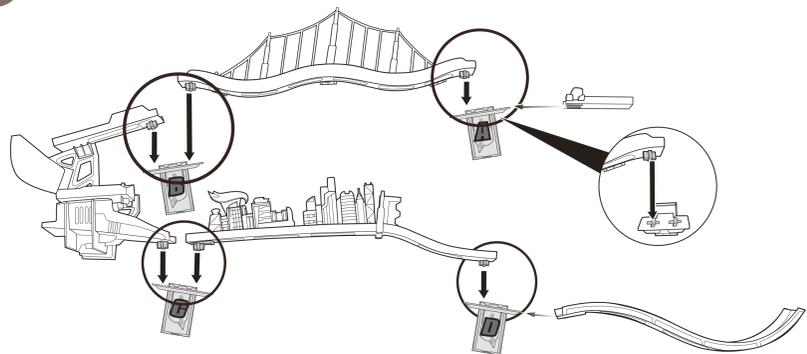


**7 READY TO PLAY?**

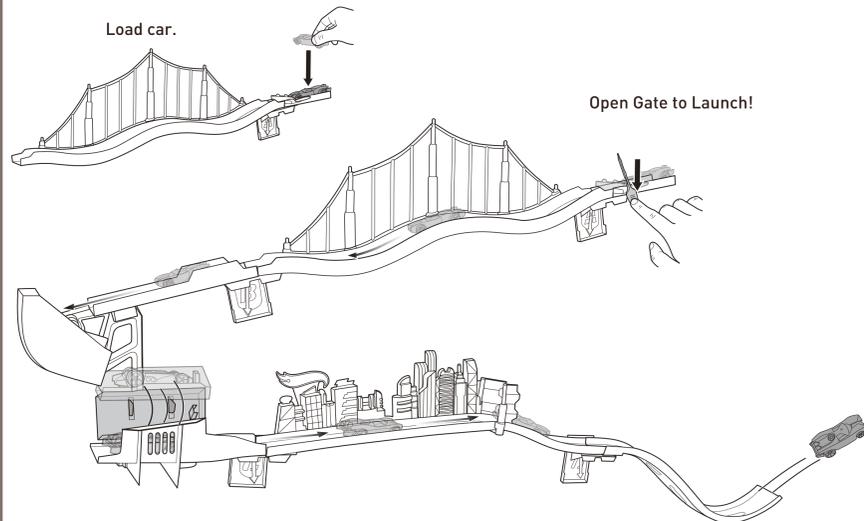

**8 REATTACHING & REMOVAL**




Mounting brackets are designed to break away from the set without causing surface damage. If mounting plate separates from bracket, snap bracket back into place.



To remove brackets from the wall entirely:  
 1. NEVER pull strip towards you.  
 2. Hold bracket gently to prevent it from snapping fingers. DO NOT press against wall.  
 3. Grab tab on Command™ Strip and SLOWLY STRETCH STRAIGHT DOWN ALONG WALL AT LEAST 12 INCHES until bracket and strip release.  
 Purchase medium Command™ Refill Strips to reapply to your wall.

**CONNECT**

Create your own set-ups with other Wall Tracks™ sets.

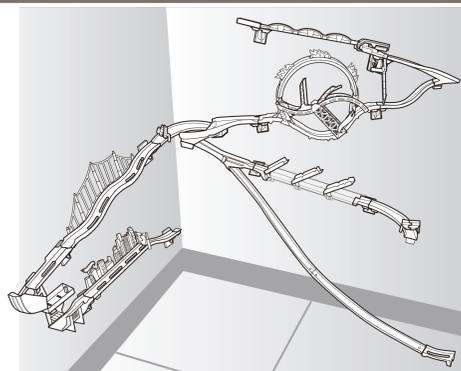


Command™ Strips are a product of 3M. For further information visit [command.com](http://command.com)  
 NOTE: Apply strips to surfaces above 50°F (10°C). Adhesive could lose adhesion above 105°F (40°C).  
 CAUTION:  
 DO NOT use with wallpaper. May not adhere well to vinyl surfaces.  
 DO NOT hang items over beds.  
 3M and command are trademarks of 3M.  
 © 3M 2015.  
 All Rights Reserved.

**LINE BOTTOM UP ALONG FLOOR**



**YOU WILL NEED:**  
 Low-adhesive tape such as painter's tape or masking tape  
 Approximately 3 feet of open wall space  
 20 minutes

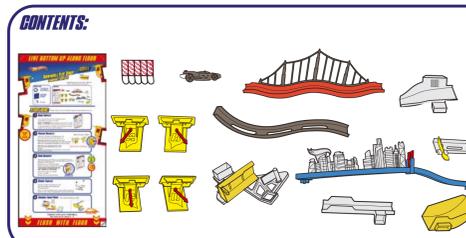

Keep these instructions for future reference as they contain important information.

**START HERE:** Please read all instructions before beginning assembly and set-up.

**1 HANG TEMPLATE**

Line template up with floor and tape to wall. It should lay flat against the wall.

**NOTE TO PARENTS:** Before applying Command™ Strips make sure the wall surface is clean and dry. If cleaning is necessary 3M recommends using isopropyl rubbing alcohol. Do not use household cleaners.




**2 PREPARE BRACKETS**

There are 4 yellow brackets [Marked A - D] and 5 Command™ Strips (one extra strip). Separate strips. Remove red-printed liner from Command™ Strips and apply to back of brackets as shown. Make sure the strip tab is accessible for future removal.

**NOTE:** Apply strips to surfaces above 50°F (10°C). Adhesive could lose adhesion above 105°F (40°C).  
**CAUTION:** DO NOT use with wallpaper. May not adhere well to vinyl surfaces. DO NOT hang items over beds.

Black Printing = On Wall

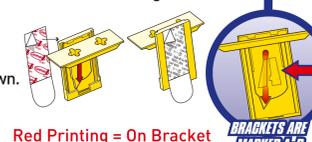

Red Printing = On Bracket

BRACKETS ARE MARKED A-D

**3 HANG BRACKETS**

Remove black-printed liner from Command™ Strip and place the bracket marked A onto the wall using the notch A outline on the template. Brackets are not interchangeable. Bracket should not overlap the template. **Press bracket firmly onto wall and hold, pressing for 30 seconds.**

Red arrow should line up with arrow on bracket. Repeat with remaining brackets.



PRESS FIRMLY FOR 30 SECONDS



INCORRECT

**4 REMOVE TEMPLATE**



Once all brackets are firmly attached with red arrows correctly oriented, remove template.

**Note:** For optimal adhesion performance 3M recommends waiting 1 hour before adding weight to Command™ Strips.



**5 ASSEMBLE TRACK PIECES**

Pre-assemble pieces as shown.

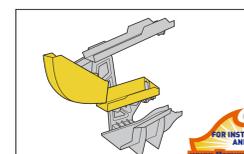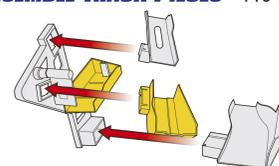

REMOVE TEMPLATE FROM WALL  
 See reverse for steps 6 - 8

**FLUSH WITH FLOOR**

FOR VIDEOS AND MORE INFORMATION ON HANGING MULTIPLE SETS, GO TO [WWW.HOTWHEELS.COM/WALL-TRACKS](http://WWW.HOTWHEELS.COM/WALL-TRACKS)



MATTEL  
 © 2010 Mattel, Inc. All Rights Reserved.  
 Mattel, Inc., 200 Grove Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697.  
 Mattel U.K. Ltd., Vermont Business Park, Manswood SL6 6JG, Reading RG2 9AT, U.K.  
 Mattel Australia Pty. Ltd., Business Village, 3/21 Consumer Gateway Drive, Sydney NSW 1512, Australia  
 Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China  
 Distributor & Manufacturer in India: Mattel SCA, Plot 133/133/22, P.O. Box 13, 3, 13th Floor, Menara Lien Hoe, Persiaran Tropisiana Golf Country Resort, 47410 P.J., Tel: 03-79803817, Fax: 03-79803867, [www.mattel.com](http://www.mattel.com)

FOR INSTRUCTIONAL VIDEOS AND MORE GO TO [WWW.HOTWHEELS.COM/WALL-TRACKS](http://WWW.HOTWHEELS.COM/WALL-TRACKS)

SEE BACK