**CONTENTS:** 

Keep these instructions for future reference as they contain important information.





### YOU WILL NEED:



Low-adhesive tape such as painter's tape or masking tape



Approximately 4 feet by 2 feet of



20 minutes




Please read all instructions before beginning assembly and set-up.

# HANG TEMPLATE

Lie template flat and level against wall and tape as shown. Top of template should align with the height of the child.

**NOTE TO PARENTS:** Before applying Command™ Strips make sure the wall surface is clean and dry. If cleaning is necessary 3M recommends using isopropyl rubbing alcohol. Do not use household cleaners.

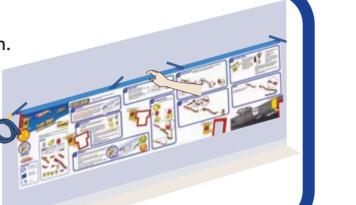

Black Printing = On Wall

## PREPARE BRACKETS

You will find: 4 lettered brackets (marked A- D), 1 flat bracket, and 6 Command™ Strips (one extra strip).

Separate strips. Remove red-printed liner from Command™ Strips and apply to back of brackets as shown. Make sure the strip tab is accessible for future



NOTE: Apply strips to surfaces above 50°F (10°C). Adhesive could lose adhesion above 105°F (40°C).

DO NOT use with wallpaper. May not adhere well to vinyl surfaces.


DO NOT hang items over beds.

### REMOVE TEMPLATE

Once all brackets are firmly attached with red arrows correctly oriented, remove template.


> Note: For optimal adhesion performance 3M recommends waiting 1 hour before adding weight to Command™ Strips.




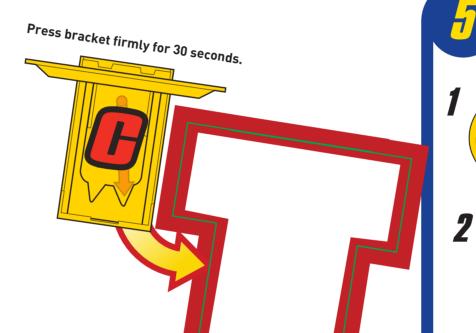





Pre-assemble pieces as shown.

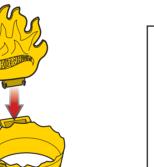

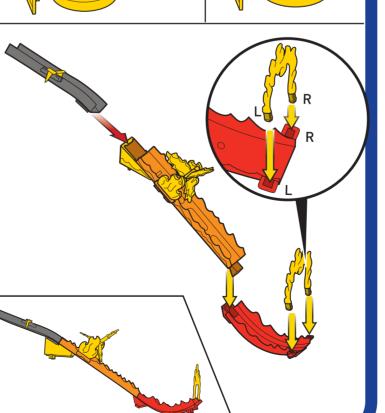



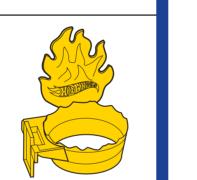

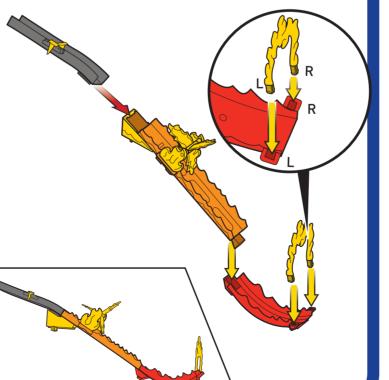


### HANG TRACK ON WALL Once brackets are mounted and TEMPLATE IS REMOVED FROM WALL, attach track pieces as shown.



REATTACHING & REMOVAL

Mounting brackets are designed to break away from the set without causing surface damage. If mounting plate separates from bracket, snap bracket

back into place.

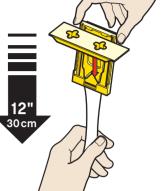

To remove brackets from the wall entirely: 1. NEVER pull strip

2. Hold bracket gently to prevent it from snapping fingers. DO NOT press


towards you.

against wall.

3. Grab tab on Command™ Strip and SLOWLY STRETCH STRAIGHT DOWN ALONG WALL AT LEAST 12 INCHES until bracket and strip

Purchase medium Command™ Refill Strips to reapply to your wall.

Create your own set-ups with other Wall Tracks™ sets.

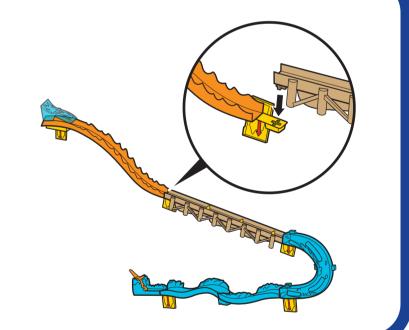



## HANG BRACKETS


Remove black-printed liner from Command™ Strips and attach each bracket into the designated notch of the template as


Bracket should not overlap the template.


Press bracket firmly onto wall and hold, pressing for 30

Red arrow should line up with arrow on bracket.

NOTE: DO NOT PULL BRACKET OFF WALL without reading removal instructions in step 8.

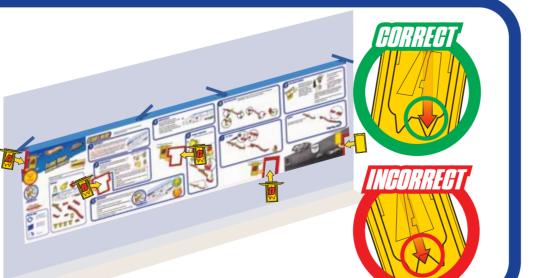

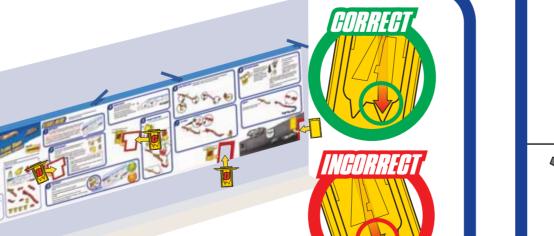

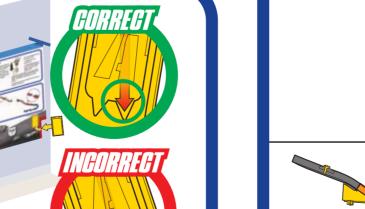

Press bracket firmly for 30 seconds.

