




We've Made a Change to Assembly Step 13!

We now include a #8 x 2 $\frac{1}{4}$ " shoulder bolt with pointed end (attached to this sheet). Use this bolt for assembly step 13. Please refer to the illustration below.

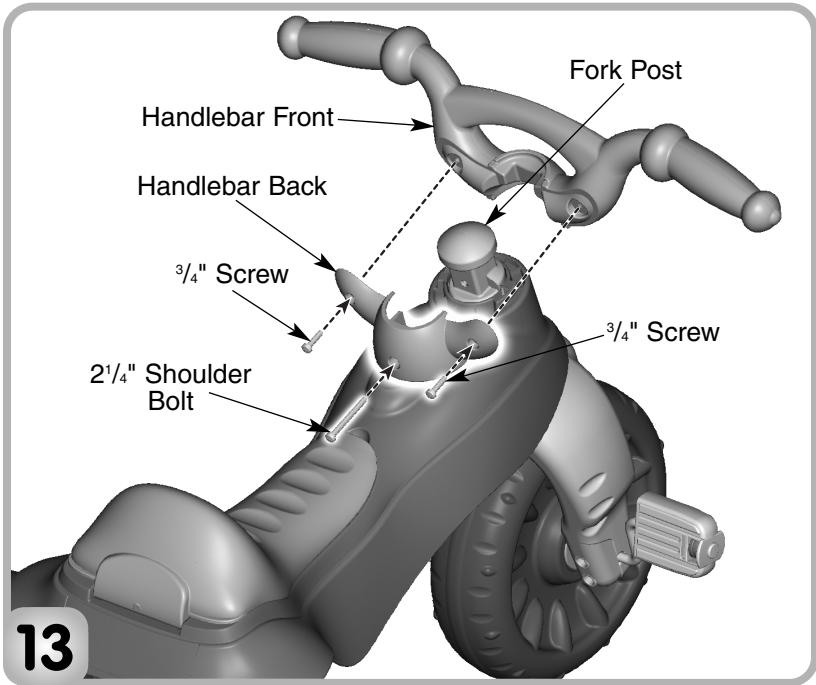

- Fit the handlebar front to the fork post.

Hint: The handlebar front is designed to assemble to the fork post one way.

- Fit the handlebar back to the fork post and handlebar front. Hold them together firmly.
- First, insert the remaining #8 x $\frac{3}{4}$ " screws through the outer holes in the handlebar back and tighten.
- Then, insert the **new, pointed** #8 x 2 $\frac{1}{4}$ " shoulder bolt through the center hole in the handlebar back and tighten.

After assembly is complete, throw away the #8 x 2 $\frac{1}{4}$ " fully-threaded blunt end screw. You will not need this screw.

Fisher-Price, Power Wheels, and Power Wheels by Fisher-Price are U.S. trademarks of Mattel, Inc. ©2004 Mattel, Inc. All Rights Reserved. © and ™ are registered trademarks of Mattel Inc. Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052 U.S.A.