

Fisher-Price®



**Keep this product
clean and dry!**

fisher-price.com






1

Regular Care

During regular use, the pad and the liner may become damp. Periodically remove the pad from the liner to air-out and prevent moisture buildup.

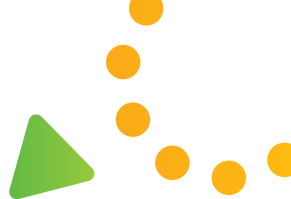

2

Regular Care

We also recommend machine washing the pad once a week (or each time it becomes soiled). Machine wash separately in cold water with a mild detergent on the gentle cycle. Do not use bleach for routine washing. Tumble dry on low heat.



3

Regular Care

While laundering the pad, clean the liner with a mild solution of liquid detergent and water. Do not use abrasive cleaners. Rinse thoroughly with clean water to remove soap residue.



4

Regular Care

Pat dry with a towel and **air dry completely** before replacing the pad on the liner.



5

Advanced Care


Moisture buildup may lead to mildew. Inspect the pad and the liner.



6

Advanced Care


If you see mildew on the pad, machine wash it separately in cold water with a mild detergent and ¼ cup (0,06 liters) bleach. Use the highest water setting on the gentle cycle and tumble dry on low heat. Use of bleach may result in some color loss of the fabric.

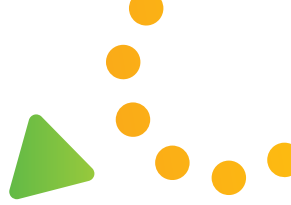

7

Advanced Care

Place the frame on a protected surface in a well-ventilated room.

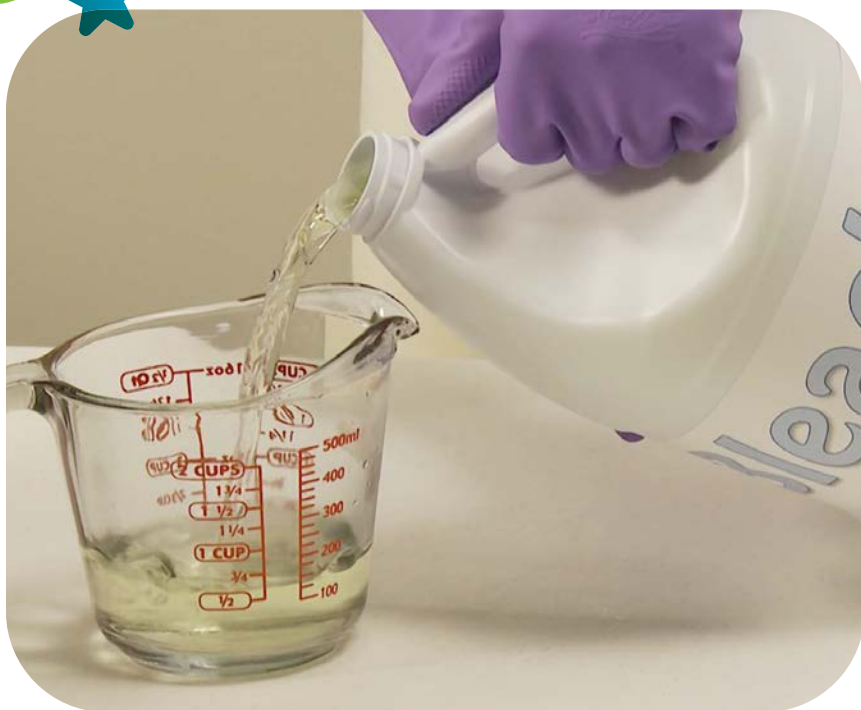

8

Advanced Care

Mix 1 gallon (about 4 liters) of water with $1\frac{1}{2}$ cups (0,35 liters) of chlorine bleach. Apply to the liner with a sponge and wipe to clean. Be sure to wear gloves, and protective eye wear and clothing when cleaning with bleach. Never mix bleach with ammonia or other household cleaners. Use of bleach may result in some color loss of the fabric. Rinse thoroughly with clean water.



9

Advanced Care



After cleaning with bleach and water, wash the liner using a small amount of liquid detergent. Gently scrub with a soft brush. Rinse thoroughly with clean water.



10

Advanced Care

Pat dry with a towel and **air dry completely** before replacing the pad on the liner.

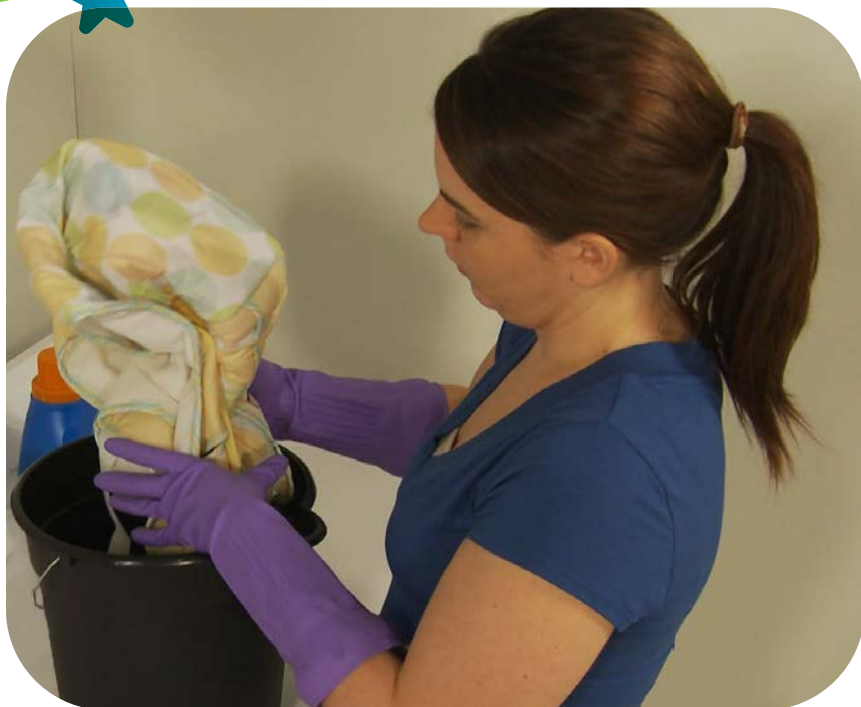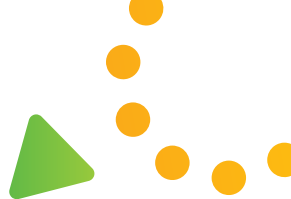

11

Stain Removal


After killing mildew, some staining may remain. To remove staining from mildew, soak the pad overnight in a solution of water and an oxygen-based stain remover. Follow the manufacturer's directions for the proper concentration. After soaking, machine wash separately in cold water with a mild detergent on the gentle cycle. Tumble dry on low.



12

Stain Removal

To remove staining from mildew, first remove the fabric frame from the base. Press the buttons above the hubs and lift the fabric frame off the base.

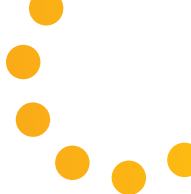

13

Stain Removal

In a well-ventilated room, mix a solution of bleach and water in a tub large enough to soak the fabric frame. Use 1½ cups (0,35 liters) of chlorine bleach per each gallon (3,8 liters) of water. Never mix bleach with ammonia or other household cleaners. Be sure to wear gloves, and protective eye wear and clothing when cleaning with bleach. Use of bleach may result in some color loss of the fabric. Completely submerge the fabric frame in the bleach and water solution for 10-20 minutes.



14

Stain Removal

Thoroughly rinse the fabric frame with clean water.



15

Stain Removal

Wash the fabric frame using a small amount of liquid detergent. Gently scrub with a soft brush. Rinse thoroughly with clean water.




16

Stain Removal

Pat dry with a towel and **air dry completely** before replacing the pad on the liner.

Fisher-Price®

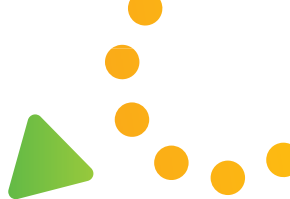

For more cleaning information, please contact
Fisher-Price® Consumer Relations at
service.fisher-price.com or call 1-800-432-5437.

fisher-price.com

