6 READY TO PLAY?

1.

2.

3.
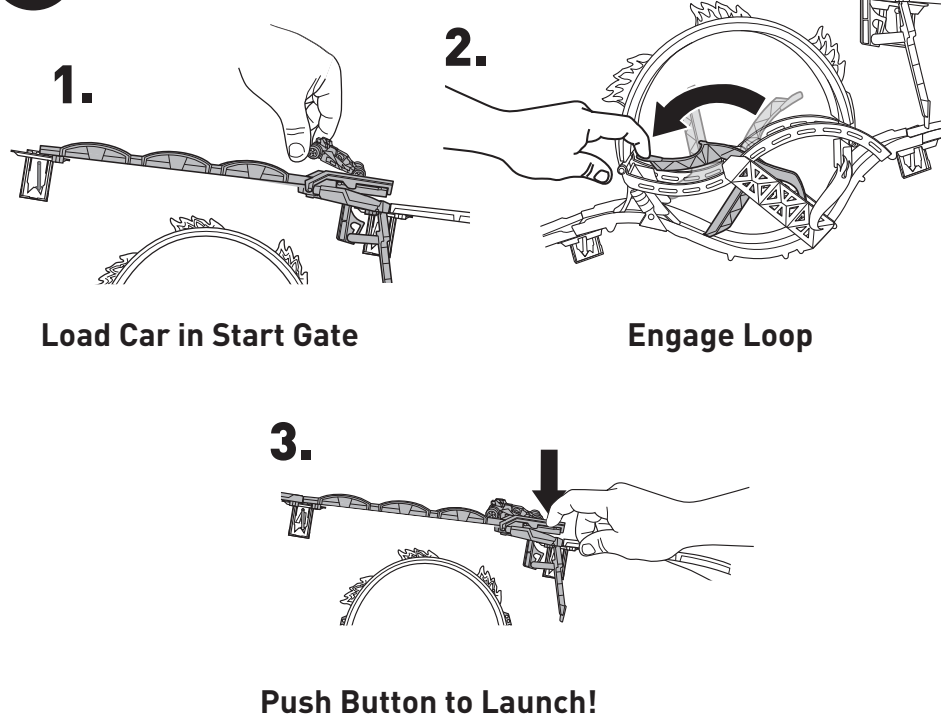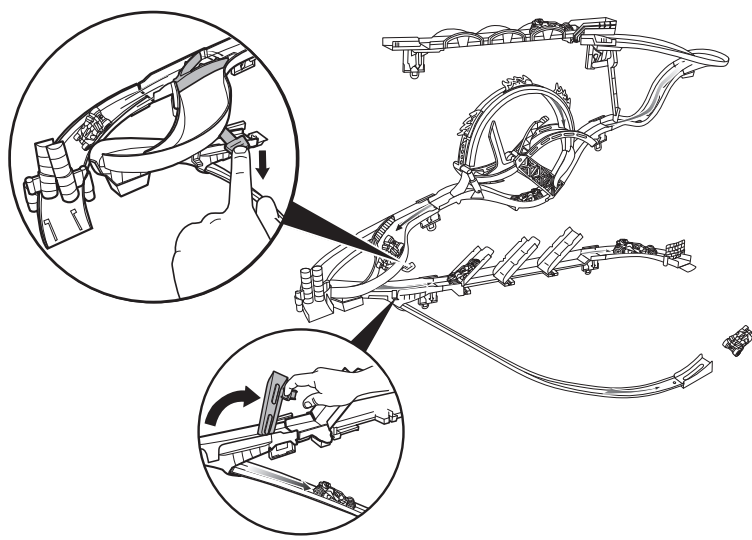
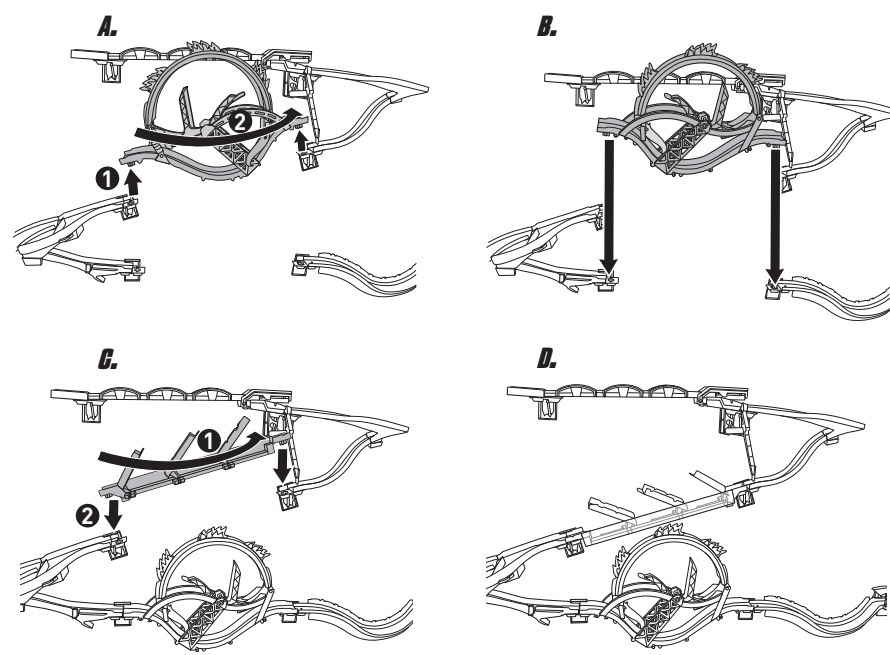**Load Car in Start Gate**

Engage Loop

Push Button to Launch!

7 DIVERTERS & SWITCHES

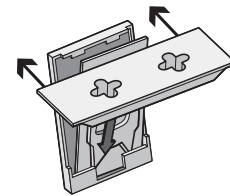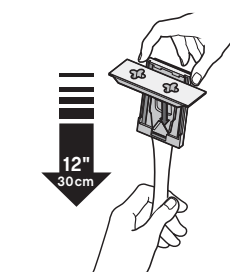**Send your cars in different directions!**

8 FURTHER PLAY

Stunts and accessories can be interchanged!

A.

B.

C.

D.

9 REATTACHING & REMOVAL

Mounting brackets are designed to break away from the set without causing surface damage. If mounting plate separates from bracket, snap bracket back into place.

To remove brackets from the wall entirely:
1. NEVER pull strip towards you.
2. Hold bracket gently to prevent it from snapping fingers. DO NOT press against wall.
3. Grab tab on Command™ Strip and SLOWLY STRETCH STRAIGHT DOWN ALONG WALL AT LEAST 12 INCHES until bracket and strip release.

Purchase medium Command™ Refill Strips to reapply to your wall.

12" / 30cm

HOT WHEELS

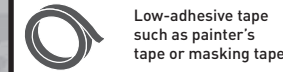Hangs with **Command** BRAND STRIPS

THE DARK KNIGHT RISES™

WALL TRACKS

STARTER SET: BATMAN™ EDITION

INSTRUCTIONS

Keep these instructions for future reference as they contain important information.

3 PANEL Folding Dummy

FRONT: 6 5 3 4 | 5 6 1 cover
1 COVER | 2 | 3 | 4
2 BACK

YOU WILL NEED:

Low-adhesive tape such as painter's tape or masking tape

Approximately 3 feet of open wall space

20 minutes

CONTENTS:

Spare Rubber Band
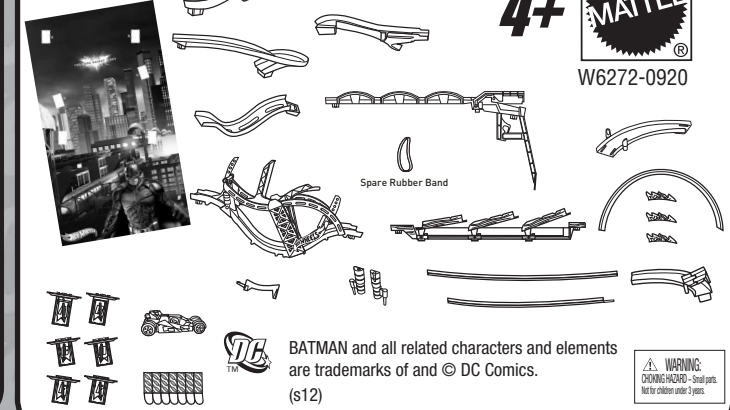
4+

MATTEL
W6272-0920

DC BATMAN and all related characters and elements are trademarks of and © DC Comics. (s12)

⚠ WARNING: CHOKING HAZARD — Small parts. Not for children under 3 years.

With Command BRAND STRIPS **for Damage-Free Hanging** 3M

Command™ Strips are a product of 3M. For further information visit command.com

NOTE: Apply strips to surfaces above 50°F (10°C). Adhesive could lose adhesion above 105°F (40°C).

CAUTION:
DO NOT use with wallpaper. May not adhere well to vinyl surfaces.
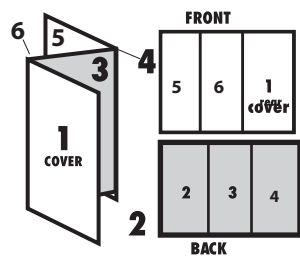DO NOT hang items over beds.

3M and Command are trademarks of 3M.
© 3M 2011. All Rights Reserved.

START HERE:

Please read all instructions before beginning assembly and set-up.

1 HANG POSTER

Line poster up with floor and tape to wall. It should lay flat against the wall.

NOTE TO PARENTS:
Before applying Command™ Strips make sure the wall surface is clean and dry. If cleaning is necessary 3M recommends using isopropyl rubbing alcohol. Do not use household cleaners.
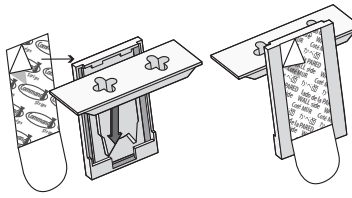
2 PREPARE BRACKETS

There are 6 yellow brackets [Marked A – F] and 7 Command™ Strips (1 extra strip).

Separate strips. Remove red-printed liner from Command™ Strips and apply to back of brackets as shown. Make sure the strip tab is accessible for future removal.

NOTE: DO NOT PULL BRACKET OFF WALL without reading removal instructions in step 9.

Black Printing = On Wall

Red Printing = On Bracket

NOTE: Apply strips to surfaces above 50°F (10°C). Adhesive could lose adhesion above 105°F (40°C).
CAUTION:
DO NOT use with wallpaper. May not adhere well to vinyl surfaces.
DO NOT hang items over beds.

3 HANG BRACKETS

Remove black-printed liner from Command™ Strips and attach each bracket into the designated notch of the poster as shown.

Bracket should not overlap the poster.

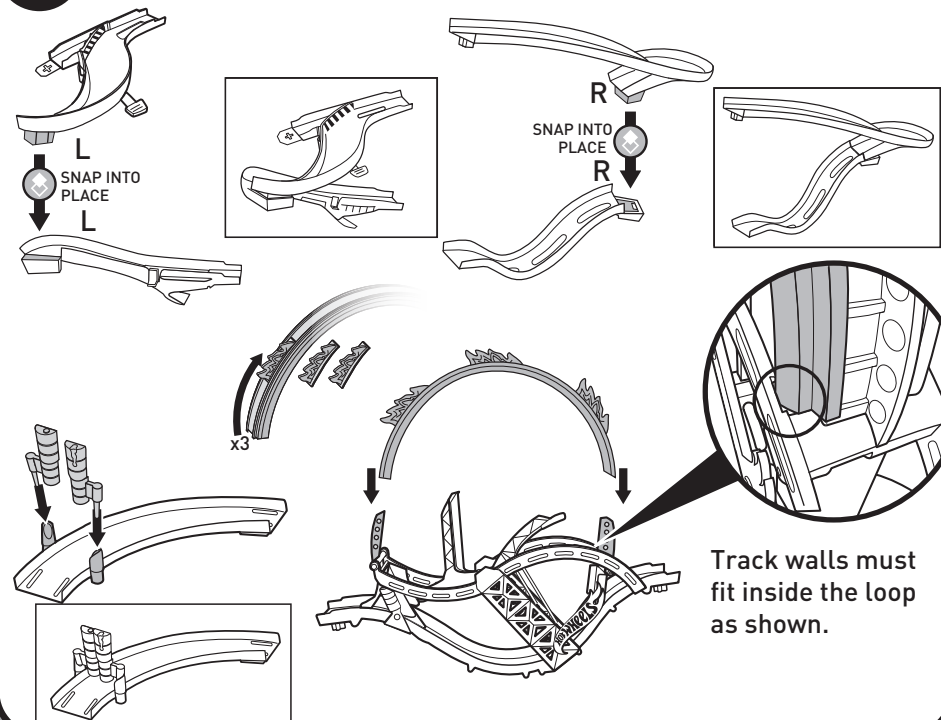**Press bracket firmly onto wall and hold, pressing for 30 seconds.**

Red arrow should line up with arrow on bracket.

NOTE: For optimal adhesion performance 3M recommends waiting 1 hour before adding weight to Command™ Strips.

CORRECT

INCORRECT

PRESS FIRMLY FOR 30 SECONDS
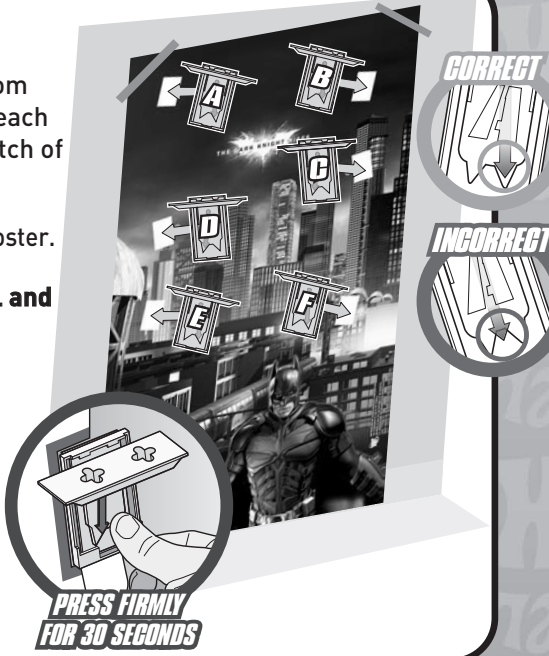
4 ASSEMBLE TRACK PIECES

Pre-assemble pieces as shown.

L SNAP INTO PLACE L

R SNAP INTO PLACE R

x3

Track walls must fit inside the loop as shown.

5 HANG TRACK ON WALL

Once poster and brackets are mounted on wall, attach track pieces as shown.
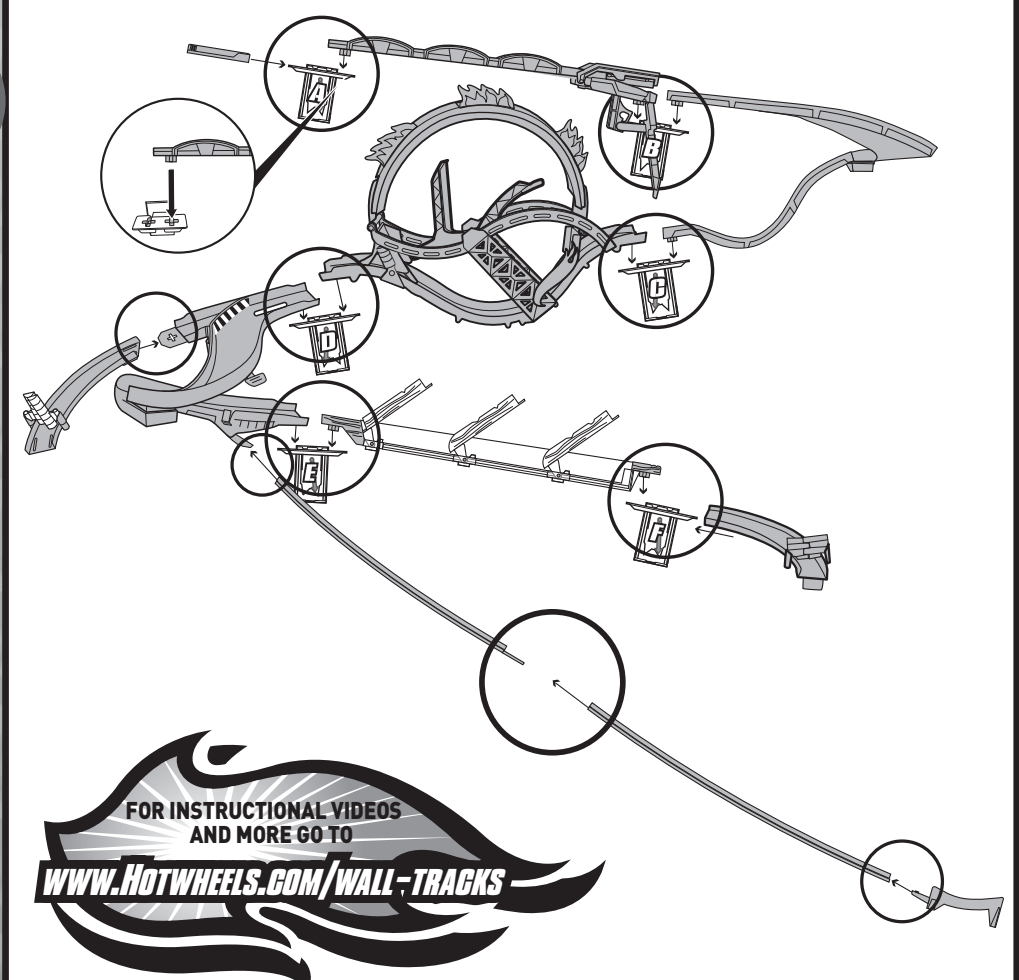
FOR INSTRUCTIONAL VIDEOS AND MORE GO TO
WWW.HOTWHEELS.COM/WALL-TRACKS

TO REPLACE RUBBER BAND:

a.

b.

c.