



**Side-to-side**



**Head-to-toe**

**IMPORTANT!** Please keep these instructions for future reference.

Please read these instructions before assembly and use of this product.

Adult assembly is required. **Assembly instructions on back side of this sheet.**

Tool needed for assembly: Phillips screwdriver (not included).


Requires four D (LR20) **alkaline** batteries for operation (not included) for battery operated use. **Battery installation instructions are on page 8.**

Requires an AC adapter (input 120 - 240 VAC, 50 - 60Hz, with an output of 6 VDC) for operation (included) for battery-free operated use.

Product features and decorations may vary from photographs.

## Storage & Care

**IMPORTANT!** Remove the batteries for long-term storage.

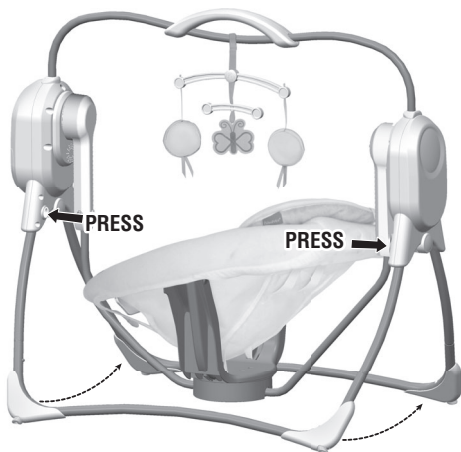

- Press the buttons on each hub and push the bases together for storage.
- Lean the swing frame against a wall for storage.
- To remove the pad, unbuckle the restraint system and the straps under the seat. Pull to remove the pad.
- Machine wash the pad in cold water with a mild detergent. Do not use bleach. Tumble dry on low heat and remove promptly.
- To clean the frame, restraint system and mobile, use a mild cleaning agent and damp cloth. Rinse with clean water to remove residue.
- To replace the pad, follow the assembly instructions.
- Periodically check the swing for loose fasteners or broken parts and tighten as needed.

## Consumer Information



### UNITED STATES

**1-800-432-5437.** Fisher-Price, Inc.,  
636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers:  
1-800-382-7470.

## Consumer Information



### WARNING

#### **Prevent serious injury or death from falls or strangling in the restraint system:**


- Never leave child unattended.
- This product is not intended to replace a crib or bassinet for prolonged periods of sleep.
- Always use the restraint system.
- Discontinue use when an active child attempts to climb out.
- Never use on any elevated surface. Use only on a floor.

**IMPORTANT!** The weight limit for this product is 25 lb (11,3 kg). If your child weighs less than 25 lb (11,3 kg), but is really active and appears to be able to climb out of the swing, immediately discontinue its use.

- Always use the swing where there is adequate ventilation. To prevent overheating, keep the swing away from heat sources such as radiators, heat registers, direct sunlight, stoves, amplifiers, or other appliances which produce heat.
- Never use extension cords with the AC adapter.
- Never use the swing near water (ie.: bathtub, sink, laundry tub or wet basement, etc.).
- Do not connect to more than the recommended number of power supplies.
- The product must only be used with the recommended AC adapter.
- The AC adapter is not a toy.
- Disconnect the AC adapter from the swing before cleaning.
- This product comes with replacement warning labels which you can apply over the factory applied warning label if English is not your primary language. Select the warning label with the appropriate language for you.
- Este producto viene con etiquetas de advertencia en español que puede pegar sobre las etiquetas de fábrica, en caso de que el inglés no sea su idioma primario. Seleccione las etiquetas de advertencia en el idioma de su elección.

**IMPORTANT!** Before each use or assembly, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Fisher-Price® for replacement parts and instructions if needed. Never substitute parts.



# Using the Restraint System

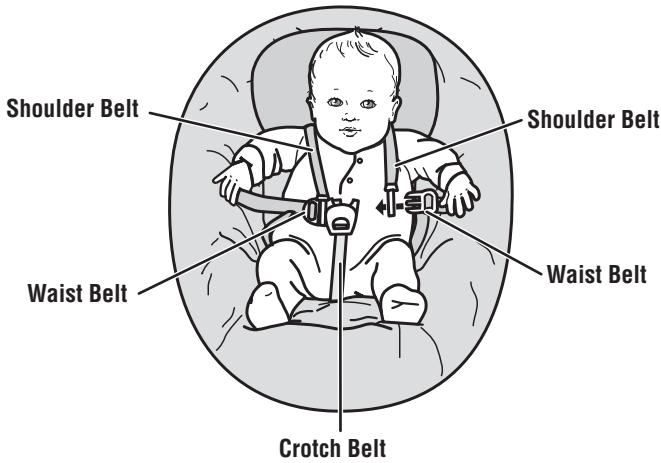

1



- Place your child in the seat. Position the crotch belt between your child's legs.
- Insert the ends of the waist belts through the slots in the shoulder belts.
- Fasten the waist/shoulder belts to the crotch belt. Make sure you hear a "click" on both sides.
- Tighten each waist belt so that the restraint system is snug against your child. Please refer to the next section for instructions to tighten the waist belts.

2

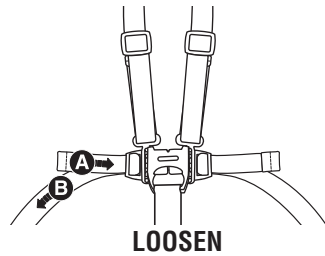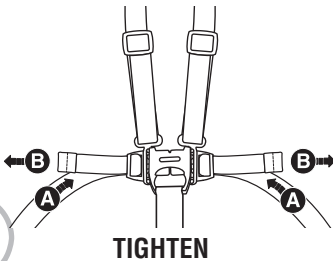

- **To tighten the waist belts:** Feed the anchored end of the belt up through the buckle to form a loop **A**. Pull the free end of the belt **B**. Repeat this procedure to tighten the other belt.
- **To loosen the waist belts:** Feed the free end of the belt up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the belt to shorten the free end of the belt. Repeat this procedure to loosen the other belt **B**.

## Using the Restraint System

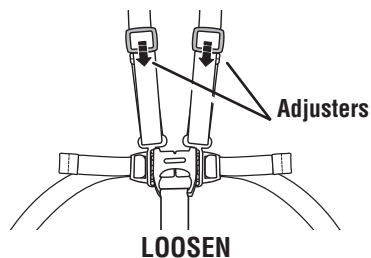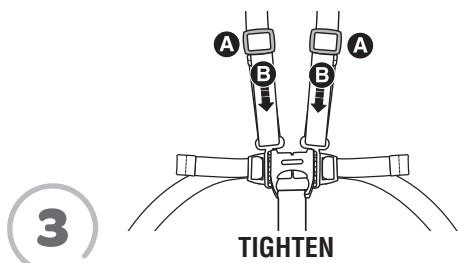

**To tighten the shoulder belts:** Hold the adjuster **A** and pull the front shoulder strap down **B**.

**To loosen the shoulder belts:** Slide the adjuster down.

**Note:** After adjusting the belts to fit your child, make sure you pull on them to be sure they are securely fastened.

## 2 Swinging Motions




- Adjust the seat for **side-to-side** or **head-to-toe** swinging. Rotate the seat to the desired position.

# AC Adapter for Battery-Free Operation




- Place the swing near a standard wall outlet.
  - Plug the AC adapter into the power cord extending from the base. Plug the AC adapter into the wall outlet.
  - Use the AC adapter only in a wall outlet. Do not plug the adapter into a ceiling outlet.
- Hint:** *The power AC adapter cord is designed to easily disconnect if stepped on accidentally. Simply plug the AC adapter cord back into the power cord extending from the base.*
- The swing also operates on battery power. To install batteries, please refer to the Battery Installation section on page 8.


# Use

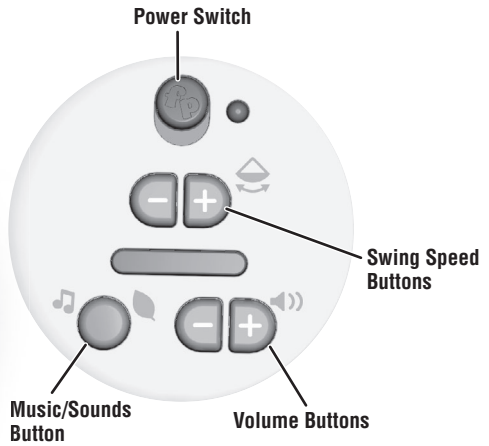

## Swing

- Slide the **power switch** ON.
- Press the **swing speed buttons**  to select any of six speed settings.
- Swinging will turn off after approximately four hours. Press a **swing speed button** to restart.
- Be sure to slide the **power switch** OFF when not in use.

## Music and Sounds


- Press the **music/sounds button**  to turn music/sounds ON. Press the button again to turn music/sounds OFF.

**Hint:** Music/sounds will turn off after approximately 20 minutes. Press the **music/sounds button** to restart.

- Press the **volume buttons**  to adjust the volume level.

# Battery Installation

**Hint:** Install batteries if you need to use this swing away from an outlet. We recommend using **alkaline** batteries for longer battery life.

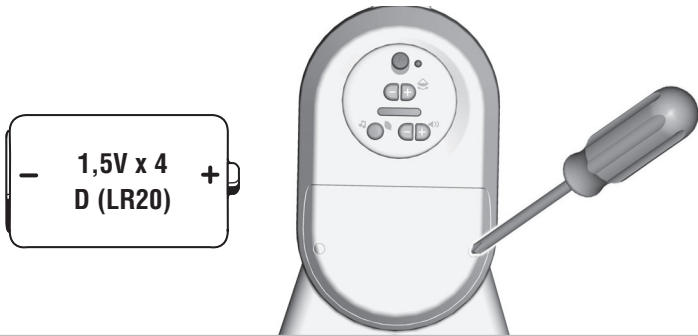

- Loosen the screws in the battery compartment door with a Phillips screwdriver and remove the battery compartment door.
- Insert four D (LR20) **alkaline** batteries into the battery compartment.
- Replace the battery compartment door and tighten the screws.
- If the swing begins to operate erratically, you may need to reset the electronics. Slide the power switch off and back on.

**Note:** Low battery power may cause product movement to slow, sound to become faint or product to turn off all together. If this should happen, use the AC adapter as a power source or replace the batteries. Replace the batteries with four **alkaline** D (LR20) batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

## Battery Safety Information


In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.



# Parts

Please remove all parts from the package and identify them before assembly.  
Some parts may be packed in the pad.

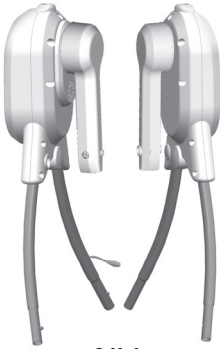

2 Hubs



Seat Pad



Seat Base



2 Bases



Seat Back



Seat Bottom




Handle



AC Adapter




#8 x 3/4" (1,9 cm) Screw - 4



M5 x 31 mm Screw - 4


**Note:** Tighten or loosen all screws with a Phillips screwdriver.  
Do not over-tighten the screws.

# Assembly

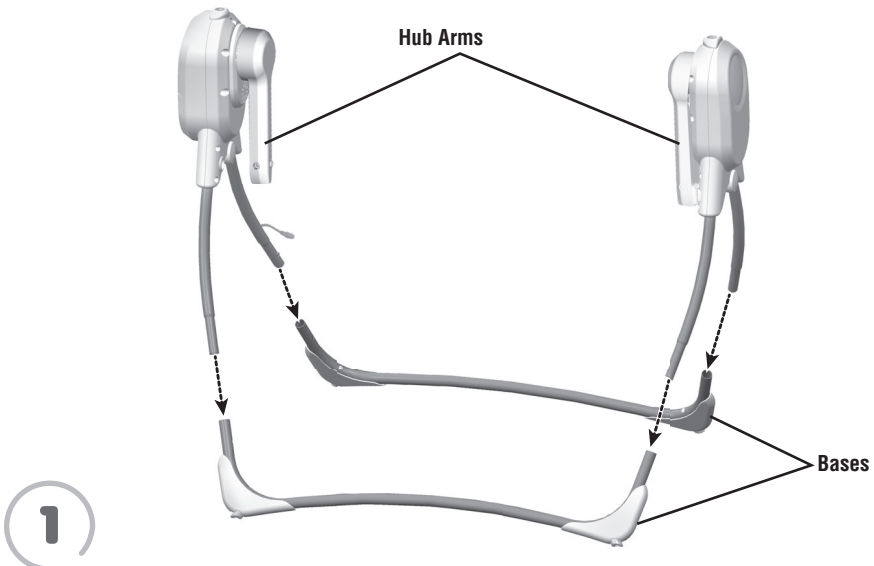

- Fit the tubes on the hubs into the tubes on the bases.

**Hint:** When assembled properly, the hub arms should face each other.

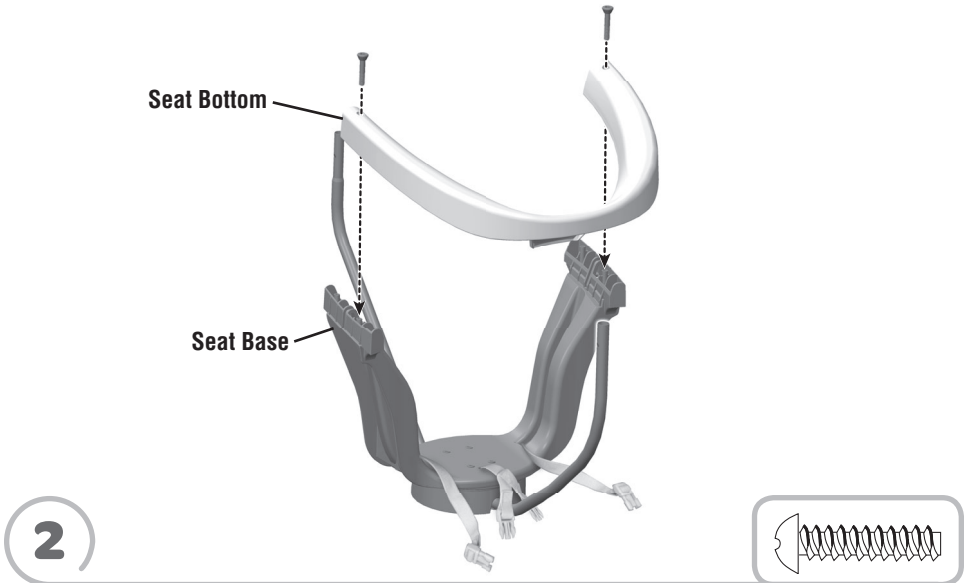

- Fit the seat bottom onto the seat base.

**Hint:** The seat bottom is designed to fit onto the seat base one way. If it does not seem to fit, turn it around and try again.

- Insert two #8 x  $\frac{3}{4}$ " (1,9 cm) screws into the seat bottom and tighten.


## Assembly



- Fit the seat back onto the seat base.

**Hint:** The seat back is designed to fit onto the seat base one way. If it does not seem to fit, turn it around and try again.

- Insert two #8 x  $\frac{3}{4}$ " (1,9 cm) screws into the seat back and tighten.

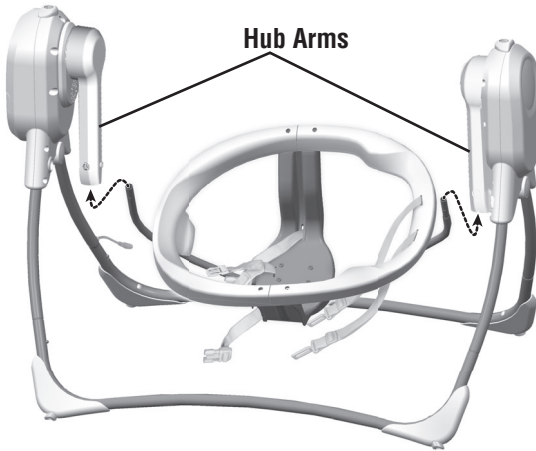


- Turn the seat assembly sideways.

- Fit the seat assembly tubes up into the sockets in the hub arms.


**Hint:** The seat assembly is designed to fit one way. If it does not seem to fit, turn it around and try again.

# Assembly

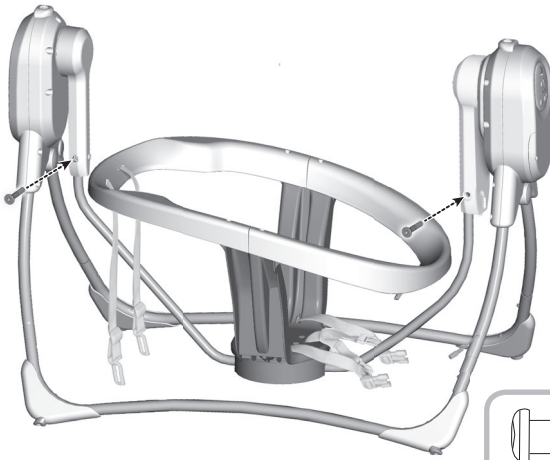

5


- Insert an M5 x 31 mm screw into each hub arm and tighten.

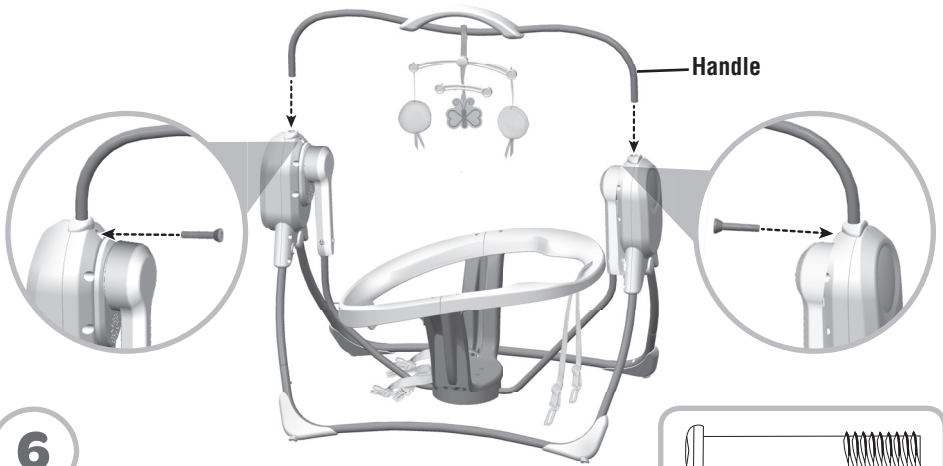

6


- Fit the ends of the handle into the socket in each hub.
- Insert an M5 x 31 mm screw into each hub and tighten.

# Assembly

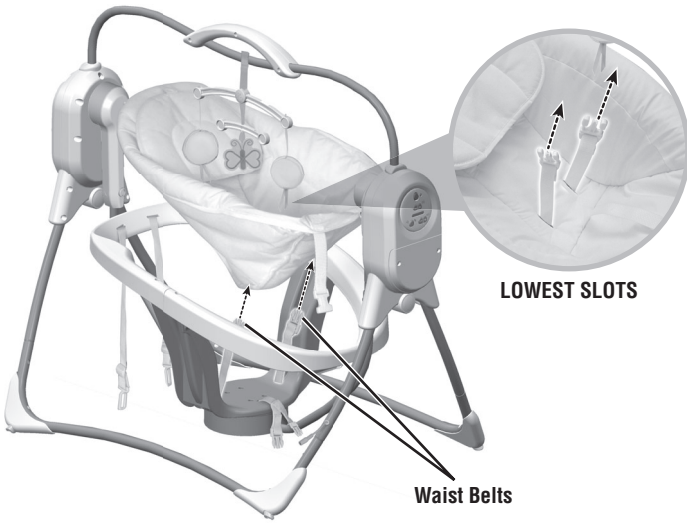

7

- Insert the waist belts through the **lowest slots** in the seat pad. Make sure the waist belts are not twisted.

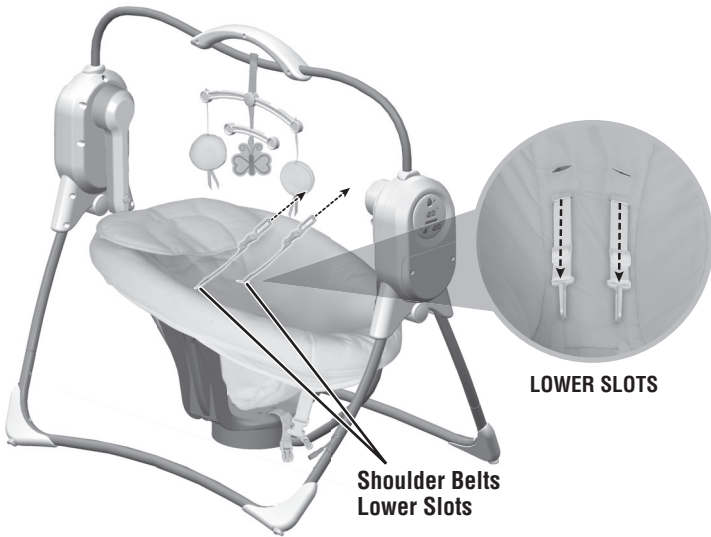


8

## Smaller Baby

- Insert the ends of the shoulder belts through the **lower slots** in the seat pad back. Make sure the shoulder belts are not twisted.

# Assembly

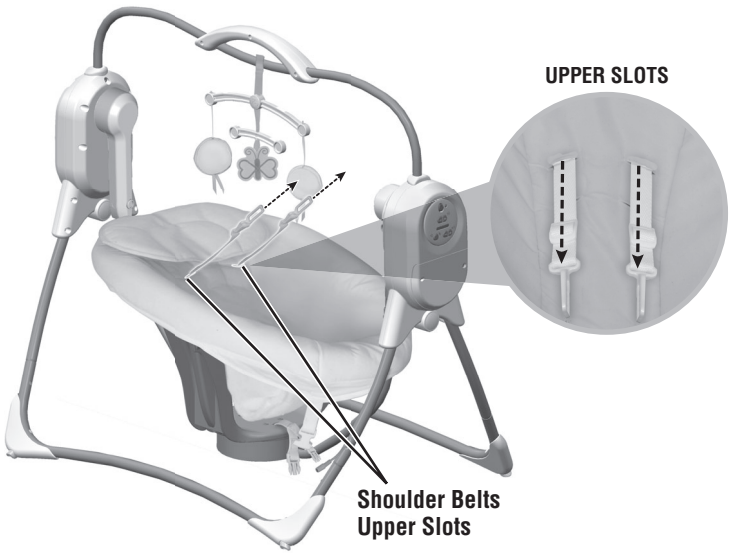


## Larger Baby

- Insert the ends of the shoulder belts through the **upper slots** in the seat pad back. Make sure the shoulder belts are not twisted.



- Fit the pad edges around the rim of the seat.

## Assembly

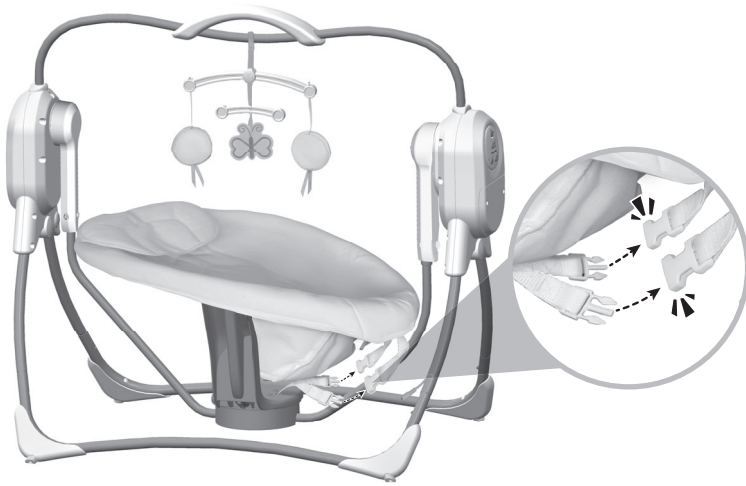

- Fasten the buckles on the front of the seat pad to the buckles on the seat bottom. Make sure you hear a “click”.

**Adults Note:** If you use this product with the AC adapter, periodically examine the AC adapter for damage to the cord, housing or other parts that may result in the risk of fire, electric shock or injury. If the AC adapter is damaged, do not use the product with the AC adapter. Use batteries as the power source.

# Consumer Information

## FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Note:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :

(1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.